

# MV024 - Squat Ovoid Jar

An Exploration of Precision



Author: Stine Gerdes, [arcsoci.org](https://arcsoci.org)  
License: Creative Commons BY-NC-SA 4.0  
Date: 2025-07-23  
Version: 01.20



Petrie Museum, CC BY-NC-SA

## Contents

<b>Artifact Information</b> .....	<b>2</b>
<b>Alignment In The Cartesian Coordinate System</b> .....	<b>3</b>
<b>Statistics used throughout the report</b> .....	<b>5</b>
<b>Precision</b> .....	<b>6</b>
Circularity .....	6
Concentricity .....	29
Coaxiality .....	41
Surface Variability .....	45
Precision Score Of The Artifact .....	54
<b>Analysis Roadmap</b> .....	<b>56</b>
<b>Appendix A - Comparison Of Circularity Measurements (Z-plane vs. surface-perpendicular)</b> .....	<b>57</b>
<b>Appendix B - Comparison Of Concentricity Measurements (Z-plane vs. surface-perpendicular)</b> .....	<b>67</b>

# Artifact Information

## Artifact Data

Collection	Petrie Museum of Egyptian Archaeology
Provenance <sup>1</sup>	Petrie Museum of Egyptian Archaeology (London), recovered by Flinders Petrie
Provenience <sup>2</sup>	
Attribution	Naqada II

## Museum information

Ref.	LDUCE-UC15581
Description	Squat basalt vase with two cylindrical handles (Petrie type 3). Rim damaged
URL	

## Maijers vessel classification<sup>3</sup>

Short classification	Squat Ovoid Jar
Long classification	The vessel is created in a closed form classified as a squat jar with a ovoid shape, a raised blunt rim.

## Physical properties

Precision score <sup>4</sup>	1.84
Height (approximate)	74 mm    2.91 in
Width (approximate)	15 mm    0.59 in
Material	Basalt
Mohs Hardness <sup>5</sup>	6 - 7 (Basalt)
Weight	

## Scan information

Source	Max Fomitchev-Zamilov, 3D Scans of the Naqada Period Stone Vessels from the Petrie Museum of Egyptian and Sudanese Archeology, 2025.
Source file name	UC15581-lo-30deg.stl
Scan method	CMM
Scanner	Keyence VL -500
Rated scan accuracy	10 µm   0.41 thou
Scan date	2025-05-12
Scanned by	Max Fomitchev-Zamilov
Mesh decimation	None, raw scan file used in the analysis
Number of vertices	194 936
Mesh density <sup>6</sup>	249 µm   9.81 thou
Max vertex distance	1309 µm   51.527 thou
Min vertex distance	26 µm   1.031 thou
Vertices per cm <sup>2</sup>	375 (approximated)
Vertices per in <sup>2</sup>	2419 (approximated)

---

<sup>1</sup>The verifiable chain of custody of an artifact

<sup>2</sup>The location or site where an artifact was recovered

<sup>3</sup>Vessel artifact classification developed by W. Arnold Maijer and described in his publication Masters of Stone, ISBN 978-90-829212-0-5

<sup>4</sup>The precision score metric is described in Precision Score Of The Artifact, p. 55

<sup>5</sup>The Mohs scale is an ordinal scale, from 1 to 10, describing the materials resistance to abrasion (the ability of harder material to scratch softer material)

<sup>6</sup>Median distance between vertices

## Alignment In The Cartesian Coordinate System

For precise and valid measurements of the vessel's geometry to be possible, the points of the scanned dataset must first and foremost be placed optimally in a Cartesian coordinate system. Several alignment methods and algorithms have been tested on a number of different vessels to determine the best way to achieve optimal alignment.

Any misalignment of the artifact will increase the error of the precision measurements, due to the distortion/wobble effect caused by the misaligned object. To visualize this distortion, we can consider a representation of the three-dimensional point cloud data, folded to a two-dimensional plane. This folded representation is obtained by rotating all scanned points around an assumed center axis to  $y = 0, x > 0$ , thus resulting in a two-dimensional profile representation of all scanned vertices in the object.

Figure 1 illustrates this effect on a ideal ellipsoid. In the first image, the ellipsoid is perfectly aligned, resulting in a narrow and precise two-dimensional folded profile. As misalignments are introduced, the two-dimensional profile increases in width, visually showing the distortion, causing the error in the precision measurements to increase. While easy to understand visually, this distortion can also be objectively quantified, and as such used to compare the fitness of different assumed center axes against each other, and further to create an automated and solid process for optimal Cartesian alignment of the scan data.

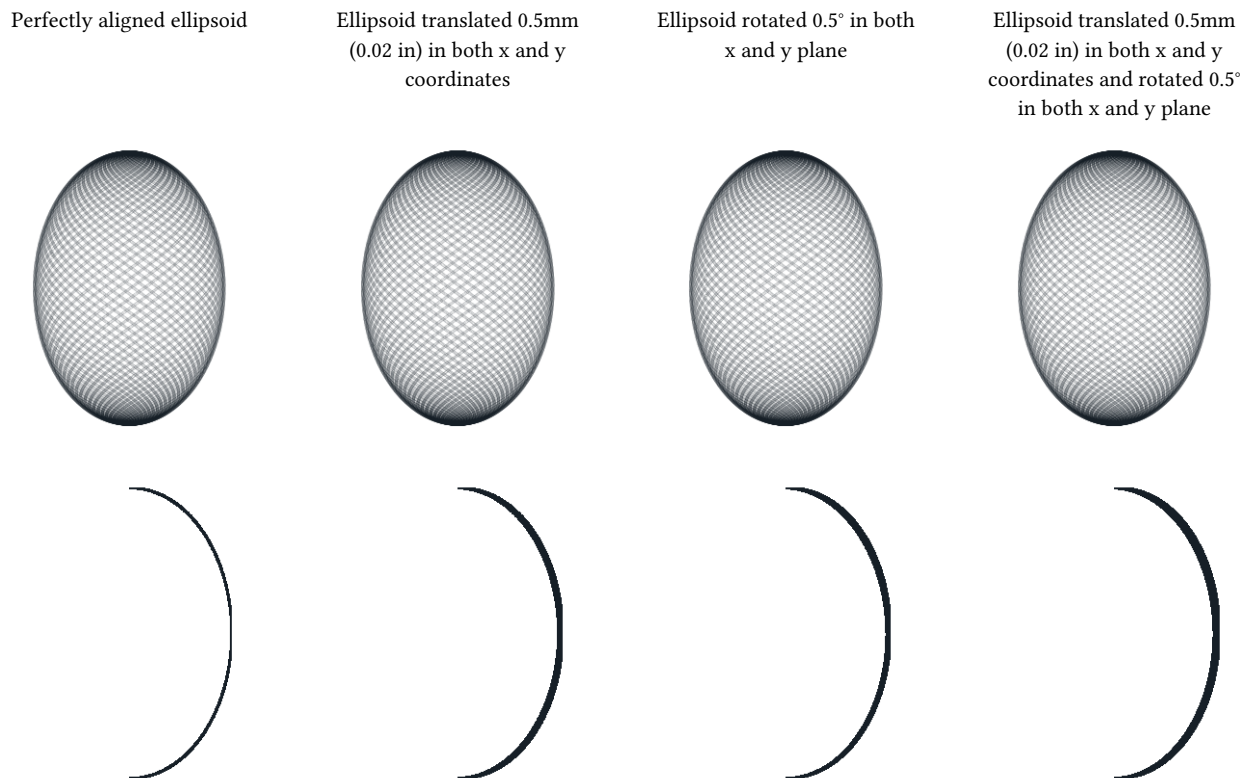


Figure 1: Distortion caused by a misalignment of the artifact

In contemporary metrology analysis of modern production objects, it is common to align the object in a Cartesian coordinate system by fitting a flat surface of the object to a reference plane in the coordinate system, cylindrical features to an ideal cylinder etc., or by using specific markers placed on the object in the design process. This methodology, however, is inadequate for the ancient objects in question. Most scanned artifacts, do not have a valid flat surface which could be aligned to a plane in the Cartesian coordinate system; most surfaces seem to be curved. Some artifacts do have a flat base, however this is often a worn area of the artifact and practical tests have shown that alignment to such surfaces will not produce optimal alignment of the scan data.

As conventional methods of alignment do not always yield good results with these types of artifacts, a more adequate method of alignment has been developed to enable precise measurements and statistical analysis of the scan data.



To find the optimal position of the vessel in the coordinate system, a range of rotation and translation tests are carried out to find the best fit of the central axis.

Based on the assumption that the analyzed object was created using a rotational process, and thus have symmetry around a central axis, the alignment of the artifact is carried out in a two-step process. An overview of this process is given below.

The artifact is placed in a Cartesian coordinate system, in an initially unaligned state. The first step in the alignment process estimates the central rotational axis of the vessel, by analyzing the coaxiality of thin cross-section slices of the vessel. The slices will be as thin as possible based on the mesh density of the scan, while still ensuring enough data points in each slice to be statistically valid.

For each slice, circular regression<sup>7</sup> (estimate of best fit circle) is used to estimate the center point of this slice. Combined over the total Z-axis range of the vessel, these center points provide us with an indicator of the incline and position of the vessel's central axis.

The next step will optimize the center axis alignment by progressively minimizing the deviation (perpendicular to the surface curvature) of the two-dimensional profile, see Figure 1. By ascertaining and comparing the resulting fit of many thousands of different potential rotations, the best fit alignment of the scan data can be estimated, and an optimal center axis (in relation to the data points) can be reconstructed. The actual three-dimensional point-cloud is then aligned to this axis, by rotating and translating the scanned data points to match the Z-axis of the Cartesian coordinate system.

To enable extensive analysis of the full surface of the artifact, the mesh is split into exterior and interior surfaces. The exterior surface is aligned independently of interior data points, providing a baseline for exterior quality assessment. The interior surface is represented by two alignments:

- Aligned with the exterior mesh to analyze concentricity, and
- Aligned separately to assess its precision and compare the true tilt/displacement between interior and exterior surfaces.

---

<sup>7</sup>Circle regression algorithm used: Kenichi Kanatani, Prasanna Rangarajan, "Hyper least squares fitting of circles and ellipses" Computational Statistics & Data Analysis, Vol. 55, pages 2197-2208, (2011)

## Statistics used throughout the report

This section provides an overview of the key statistical and model-evaluation metrics employed throughout the report to analyze dataset variability, model fit, and predictive accuracy.

Each measure is introduced with its mathematical formulation, practical interpretation, and explicit reference to how it is calculated in the context of the evaluated models and residuals. Together, these metrics quantify:

- Data variability (e.g., MAD, Standard Deviation, Range).
- Model accuracy (e.g., MSD, RMSD).
- Robustness vs. sensitivity to extreme values and central tendencies.

*Mean Squared Deviation (MSD)*, also known as Mean Squared Error (MSE).

$$\text{MSD} = \frac{\sum_{i=1}^n (y_i - \hat{y})^2}{n}$$

The Mean Squared Deviation (MSD) measures the average magnitude of squared differences between observed ( $y_i$ ) and predicted ( $\hat{y}$ ) values, calculated as the mean of squared residuals, and is used as a measure of discrepancy in regression and model-fitting contexts.

This measure amplifies the influence of larger deviations through squaring, emphasizes imperfections in the observed data, but retains sensitivity to outliers.

*Root Mean Squared Deviation (RMSD)*, also known as Root Mean Squared Error (RMSE).

$$\text{RMSD} = \sqrt{\frac{\sum_{i=1}^n (y_i - \hat{y})^2}{n}}$$

The Root Mean Square Deviation (RMSD) measures the magnitude of differences between observed ( $y_i$ ) and predicted ( $\hat{y}$ ) values by calculating the square root of the average of squared residuals.

RMSD is a commonly used measure of discrepancy in regression and model-fitting contexts. It quantifies the average magnitude of residuals while retaining sensitivity to larger deviations (via squaring), making it particularly useful for evaluating model accuracy.

*Standard Deviation (SD)*

$$s = \sqrt{\frac{\sum_{i=1}^n (y_i - \bar{y})^2}{n - 1}}$$

The Standard Deviation measures the spread of data ( $y_i$ ) around the mean ( $\bar{y}$ ) by calculating the square root of the average of squared differences between each value and the mean.

It is sensitive to outliers as it amplifies their influence through squaring, in contrast to MAD.

Throughout this report, the Standard Deviation is calculated using the absolute residuals from regression models.

*Median Absolute Deviation (MedianAD)*

$$\text{MedianAD} = \text{median}(|y_i - \text{median}(y)|)$$

The Median Absolute Deviation (MAD) measures the spread of data around the median by calculating the median of absolute differences between each value and the median.

MAD is a robust measure of spread, analogous to the interquartile range (a robust measure centered on the middle 50% of data), and differs from the standard deviation in that it minimizes the impact of outliers.

Throughout this report, the MAD is calculated using the absolute values of residuals from regression models.

*Range*

$$\max(y_i) - \min(y_i)$$

The Range measures the spread of a dataset by calculating the difference between the maximum and minimum values.

The Range is a simple measure of spread, capturing the full extent of variability. Range is very sensitive to extreme values, as it is entirely determined by the two most extreme data points.

Throughout this report, the Range is calculated using the full range of residuals from regression models.

## Precision

To explore the manufacturing precision of the artifact in depth, the following analysis have been carried out:

- Circularity around the axis of symmetry is examined in detail at selected cross-sections.
- Overall circularity around the axis of symmetry is measured for the full height of the vessel (areas of the vessel with extensive damage are not taken into account for this metric).
- Concentricity of the vessel between selected cross-sections are examined in detail to determine if the existence of an axis of rotation in the manufacture of the object can be established.
- The coaxiality of the vessel is analyzed to explore the precision of the central axis of the object.
- The surface variability is analyzed and visualized on through a heatmap.

## Circularity

Circularity is the measurement of how round the surface of an object is, optionally in reference to a datum axis. The *circularity tolerance* is the radial distance of two circles, each with their centers in the datum axis, and each of them conforming, respectively, to the minimum and maximum deviations of the data-set to a true circle, see Figure 2.

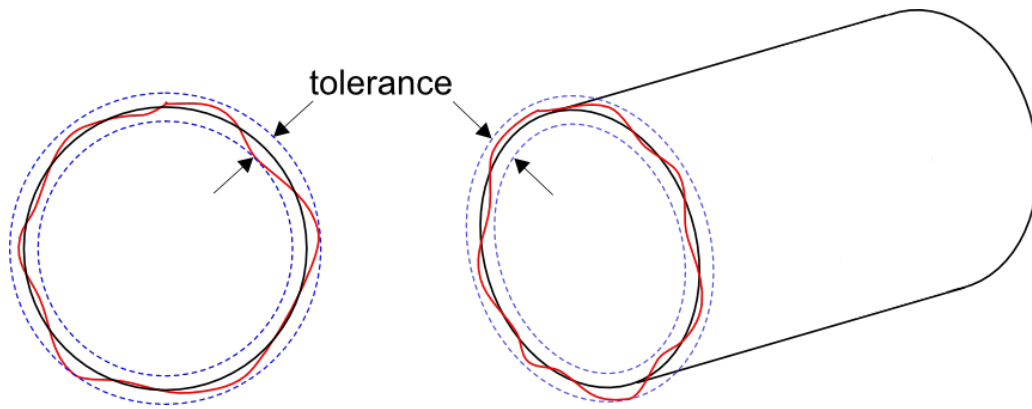


Figure 2: Circularity tolerance.

Circularity is examined at different cross-sections of the vessel, using the established Z-axis as the datum axis (axis of symmetry). The distance between the scanned points in the local datum plane is measured to determine the range between the two concentric circles encompassing the measured points, see Figure 3.

Referencing all of the individual circularity measurements to the global (reconstructed) axis of symmetry of the object, allows us to ascertain not only circularity of local features of the object, but how well circularity was *maintained* over the entire manufacturing process. This is an important distinction, which may be able to provide valuable insights into requirements of the construction methods. For reference, and seeing that the variance in local circularity also holds interest, measurements of circularity of the vessel without reference to the axis of symmetry can additionally be found in the Concentricity, p. 30.



Figure 3: Circularity measurements.

If the circularity is determined from slices of the vessel exclusively in the *Z-plane* (actually measuring the cylindricity of a very thin slices of the vessel, in an attempt to approximate circularity), this would - in some areas - introduce significant distortion (increasing measurement errors) in the samples, due to the curvature of the vessel's surface.

Each sample slice of the vessel is therefore obtained perpendicular to the surface curvature, see Figure 6 to Figure 15. The measurements are taken conservatively without filtration of potential outliers.

To explore the potential distortion caused by obtaining samples in the Z-plane only, please refer to Appendix A, where measurements in the Z-plane and measurements perpendicular to surface curvature are compared side by side.

### **Detailed circularity measurements of selected points**

Circularity measurements across a range of selected slices of the vessel (see Table 1) have been analyzed in-depth, and detailed plots of each measurement is provided. Furthermore, full circularity measurements are shown for each available scanned surface including a detailed plot to visualize the circularity of all areas of the vessel.

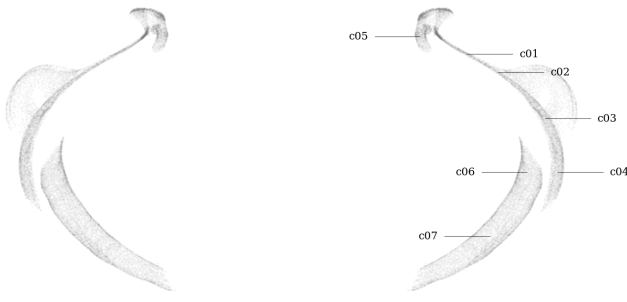


Figure 4: Circularity measurement sample locations, full mesh aligned with exterior surface



Figure 5: Circularity measurement sample location, separately aligned interior mesh

### Metric

Tag	Area	Measured deviation <sup>8</sup>	Residuals				Sample size	Slice		
			Range	RMSD <sup>9</sup>	MAD <sup>10</sup>	SD		Height	Z coord.	Radius <sup>11</sup>
		mm	mm	mm	mm	mm		mm	mm	mm
c01	exterior	Ø92.259±0.506	0.807	0.195	0.073	0.122	176	0.200	61.728	46.130
c02	exterior	Ø108.626±0.405	0.807	0.227	0.095	0.117	144	0.200	56.919	54.313
c03	exterior	Ø133.219±1.689	2.899	0.757	0.238	0.348	539	0.200	44.837	66.610
c04	exterior	Ø139.726±1.924	3.338	0.986	0.363	0.488	818	0.200	30.773	69.863
c05	interior	Ø67.729±1.663	3.172	1.005	0.310	0.426	1262	0.200	66.292	33.865
c05_s	interior sep.	Ø69.505±4.399	7.570	2.704	1.251	1.365	678	0.200	66.292	34.753
c06	interior	Ø123.726±3.815	6.295	2.300	0.752	0.980	1311	0.200	30.773	61.863
c06_s	interior sep.	Ø125.125±0.927	1.593	0.385	0.135	0.231	1689	0.200	30.773	62.562
c07	interior	Ø104.222±3.542	6.633	2.374	0.740	0.976	705	0.200	14.036	52.111
c07_s	interior sep.	Ø103.599±0.427	0.786	0.197	0.070	0.101	801	0.200	14.036	51.800

### Imperial

Tag	Area	Measured deviation <sup>8</sup>	Residuals				Sample size	Slice		
			Range	RMSD <sup>9</sup>	MAD <sup>10</sup>	SD		Height	Z coord.	Radius <sup>11</sup>
		in	in	in	in	in		in	in	in
c01	exterior	Ø3.6323±0.0199	0.0318	0.0077	0.0029	0.0048	176	0.0079	2.4302	1.8161
c02	exterior	Ø4.2766±0.0159	0.0318	0.0089	0.0037	0.0046	144	0.0079	2.2409	2.1383
c03	exterior	Ø5.2448±0.0665	0.1142	0.0298	0.0094	0.0137	539	0.0079	1.7652	2.6224
c04	exterior	Ø5.5010±0.0757	0.1314	0.0388	0.0143	0.0192	818	0.0079	1.2115	2.7505
c05	interior	Ø2.6665±0.0655	0.1249	0.0396	0.0122	0.0168	1262	0.0079	2.6099	1.3333
c05_s	interior sep.	Ø2.7364±0.1732	0.2980	0.1065	0.0492	0.0537	678	0.0079	2.6099	1.3682
c06	interior	Ø4.8711±0.1502	0.2478	0.0906	0.0296	0.0386	1311	0.0079	1.2115	2.4356
c06_s	interior sep.	Ø4.9262±0.0365	0.0627	0.0151	0.0053	0.0091	1689	0.0079	1.2115	2.4631
c07	interior	Ø4.1032±0.1394	0.2611	0.0935	0.0291	0.0384	705	0.0079	0.5526	2.0516
c07_s	interior sep.	Ø4.0787±0.0168	0.0309	0.0078	0.0028	0.0040	801	0.0079	0.5526	2.0394

Table 1: Detailed circularity measurements at selected samples of MV024.

Figure 6 to Figure 15 shows a detailed plots of each circularity measurement.

<sup>8</sup>Sample diameter Ø± maximum measured deviation from measured radius

<sup>9</sup>Root mean square deviation (RMSD) also called Root mean square error (RMSE)

<sup>10</sup>Median absolute deviation

<sup>11</sup>Median sample radius from z-axis

Graphical overview of circularity measurement c01

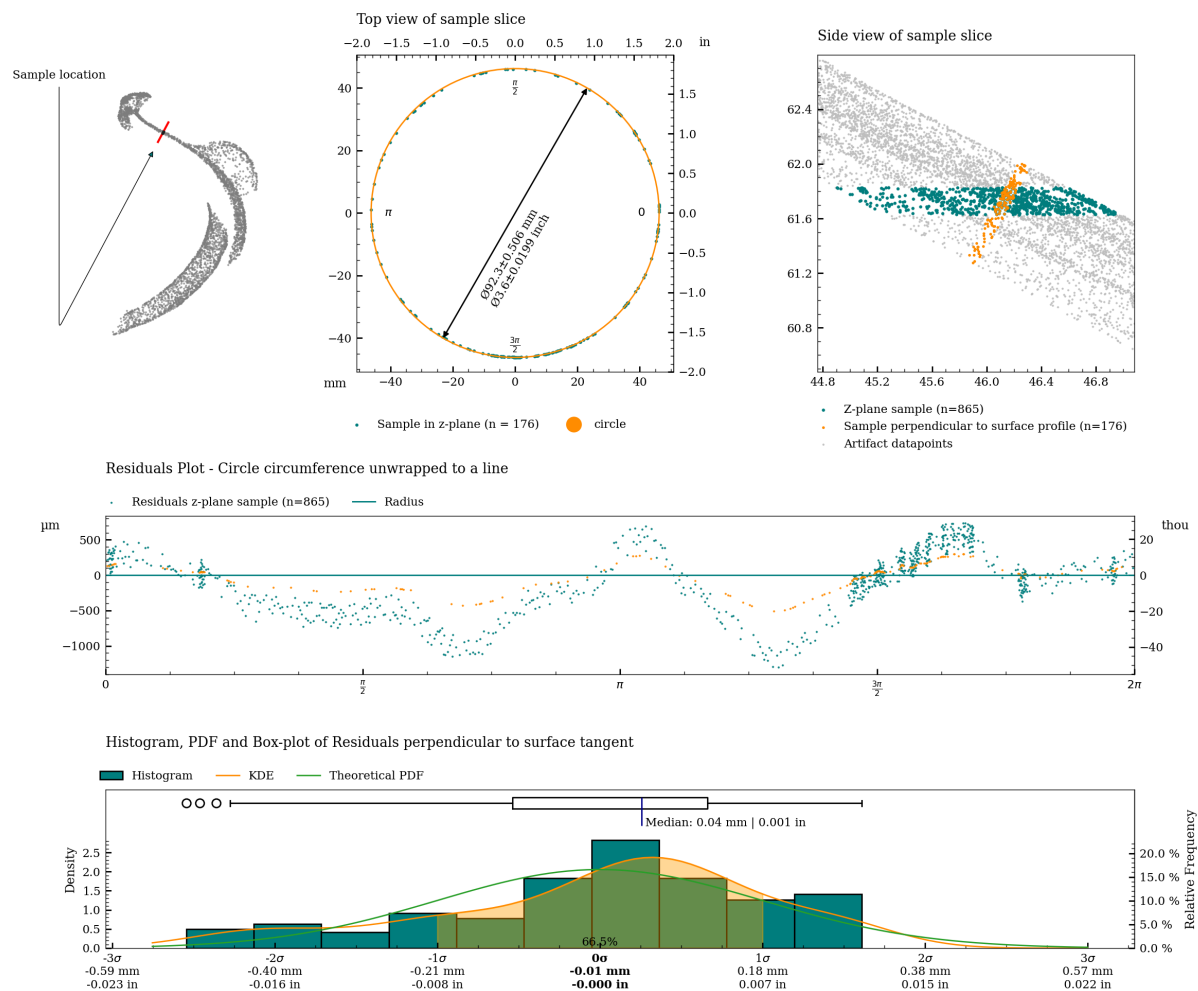


Figure 6: Charts with statistics for the measurement of c01.

## Graphical overview of circularity measurement c02

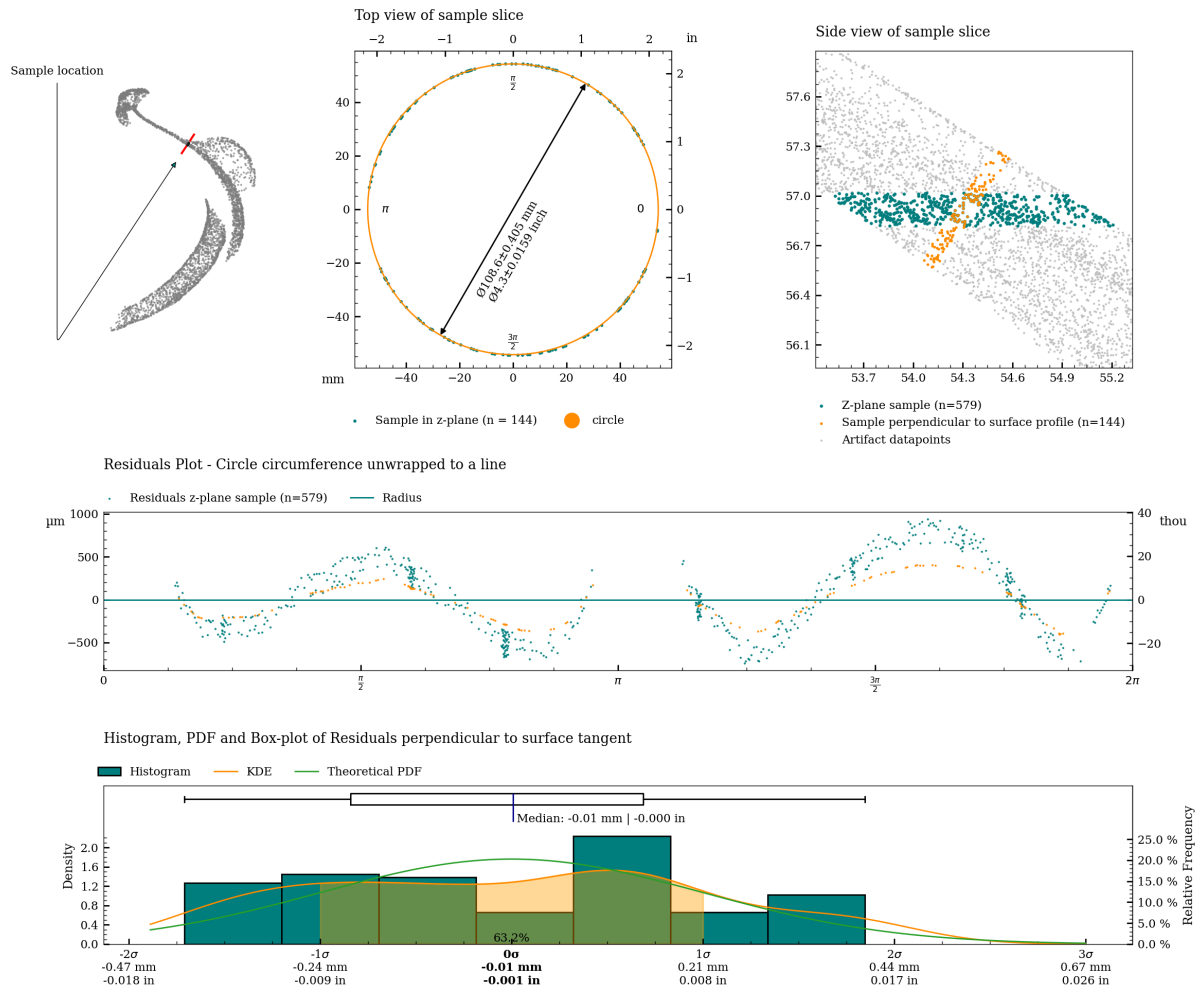


Figure 7: Charts with statistics for the measurement of c02.

## Graphical overview of circularity measurement c03

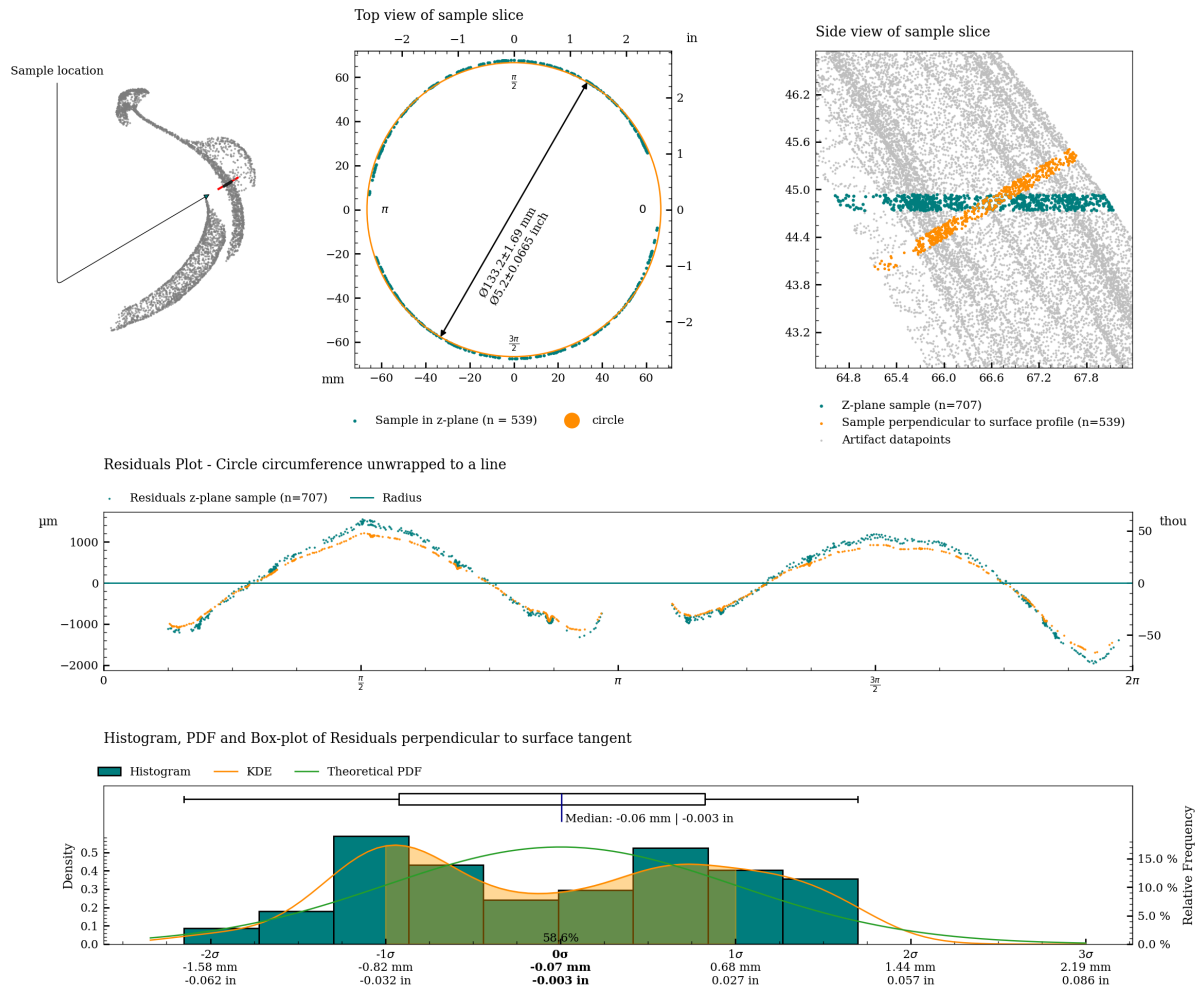


Figure 8: Charts with statistics for the measurement of c03.



Graphical overview of circularity measurement c04

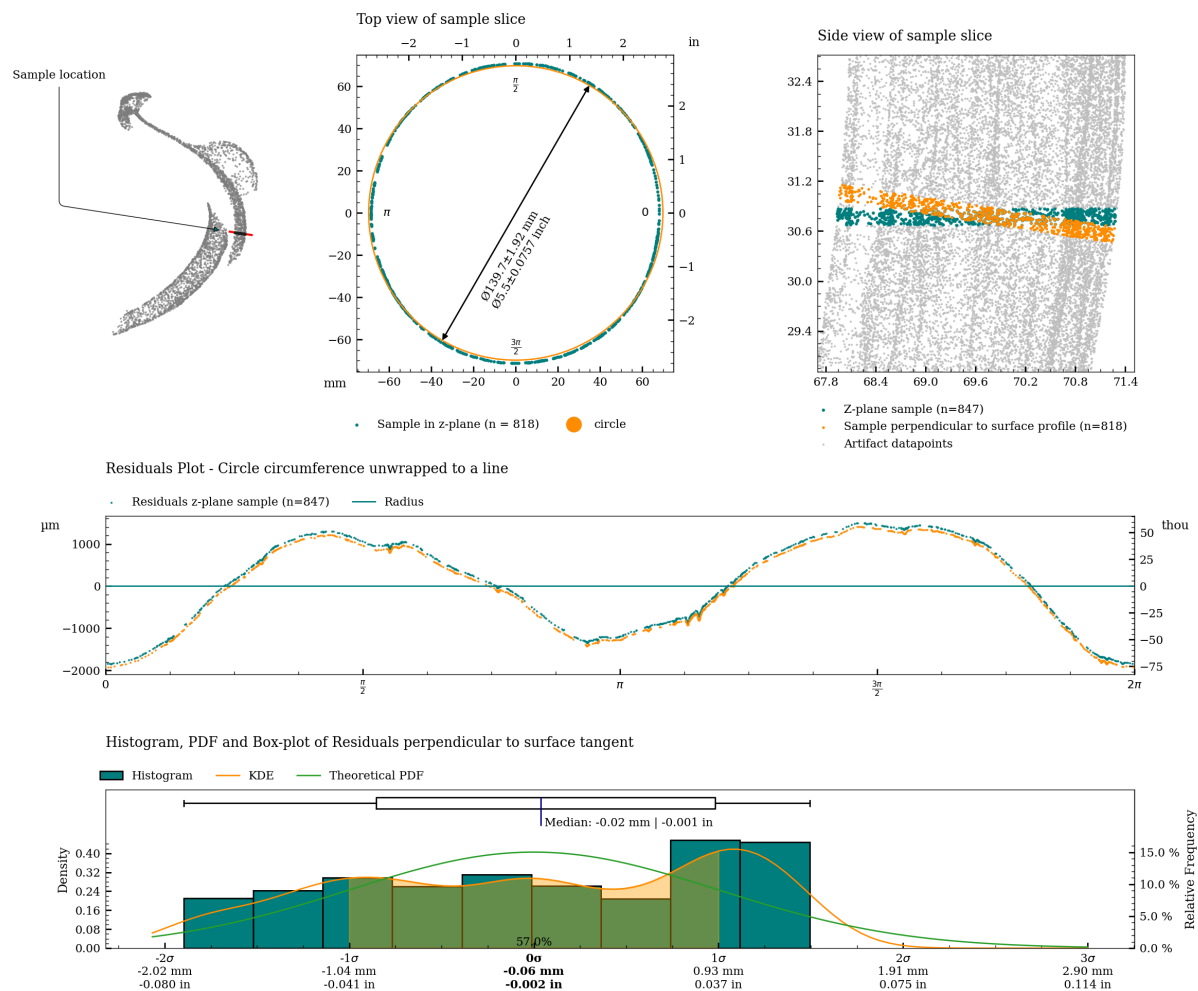


Figure 9: Charts with statistics for the measurement of c04.

Graphical overview of circularity measurement c05

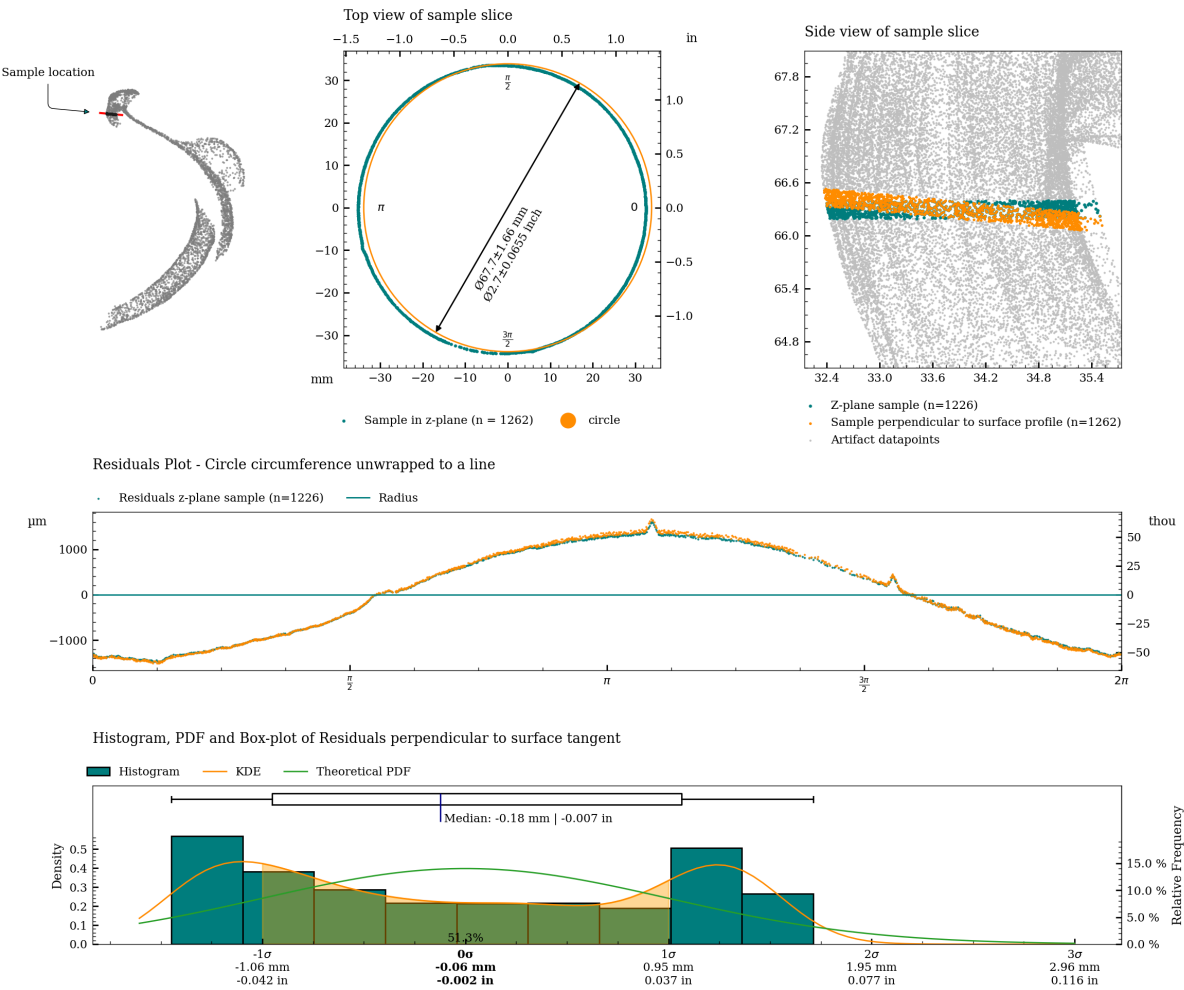


Figure 10: Charts with statistics for the measurement of c05.

## Graphical overview of circularity measurement c05\_s

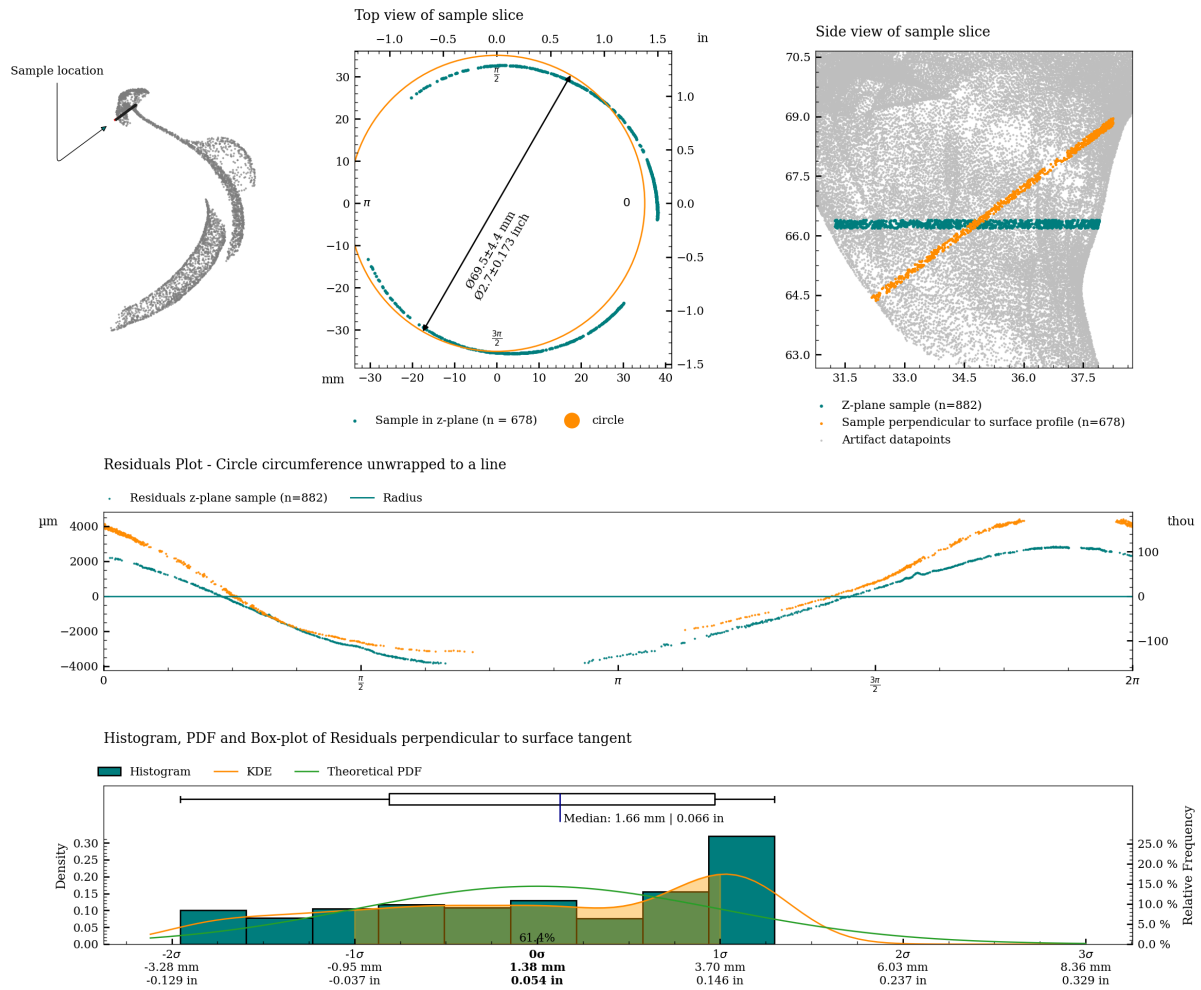


Figure 11: Charts with statistics for the measurement of c05\_s.

Graphical overview of circularity measurement c06

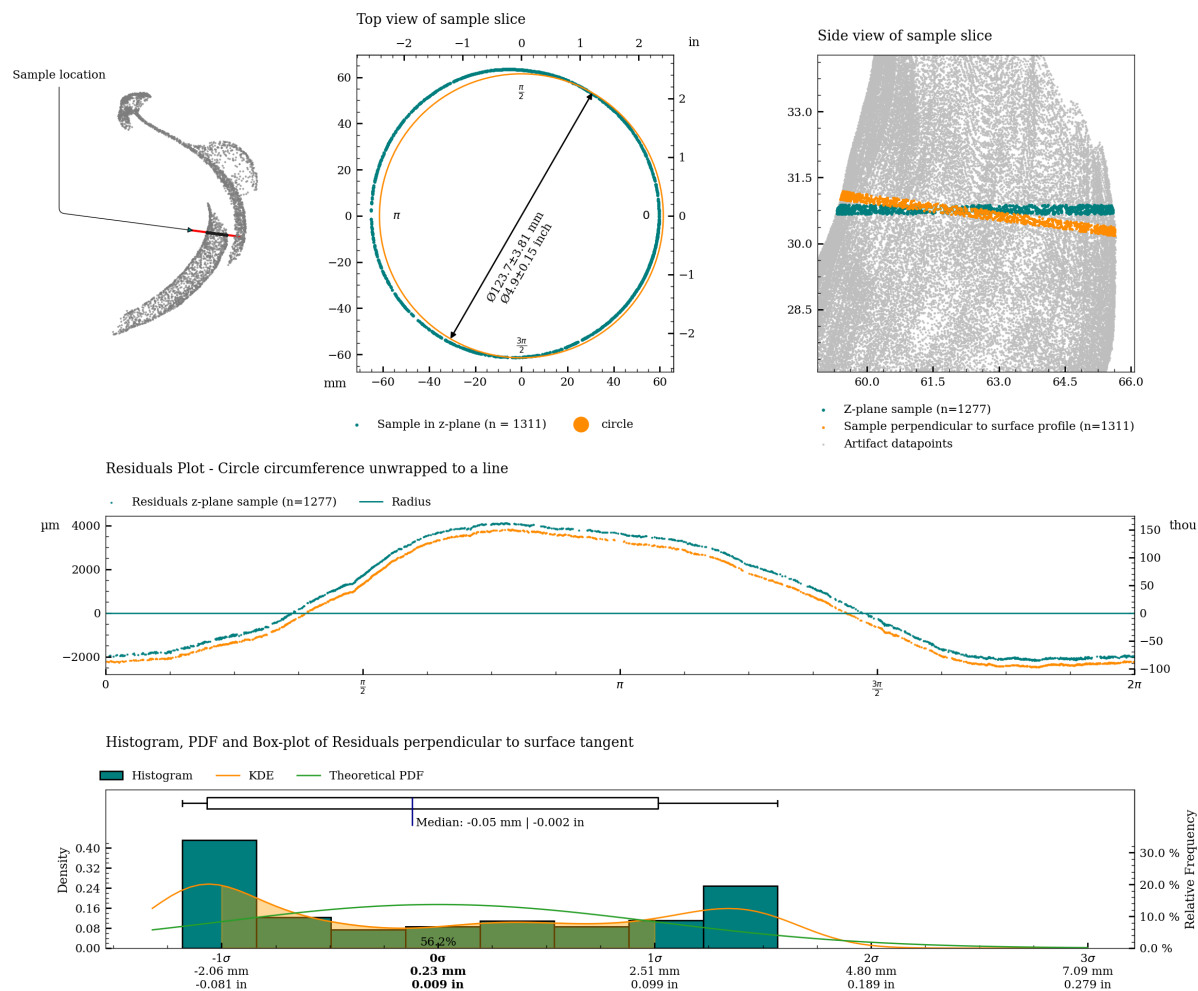


Figure 12: Charts with statistics for the measurement of c06.

## Graphical overview of circularity measurement c06\_s

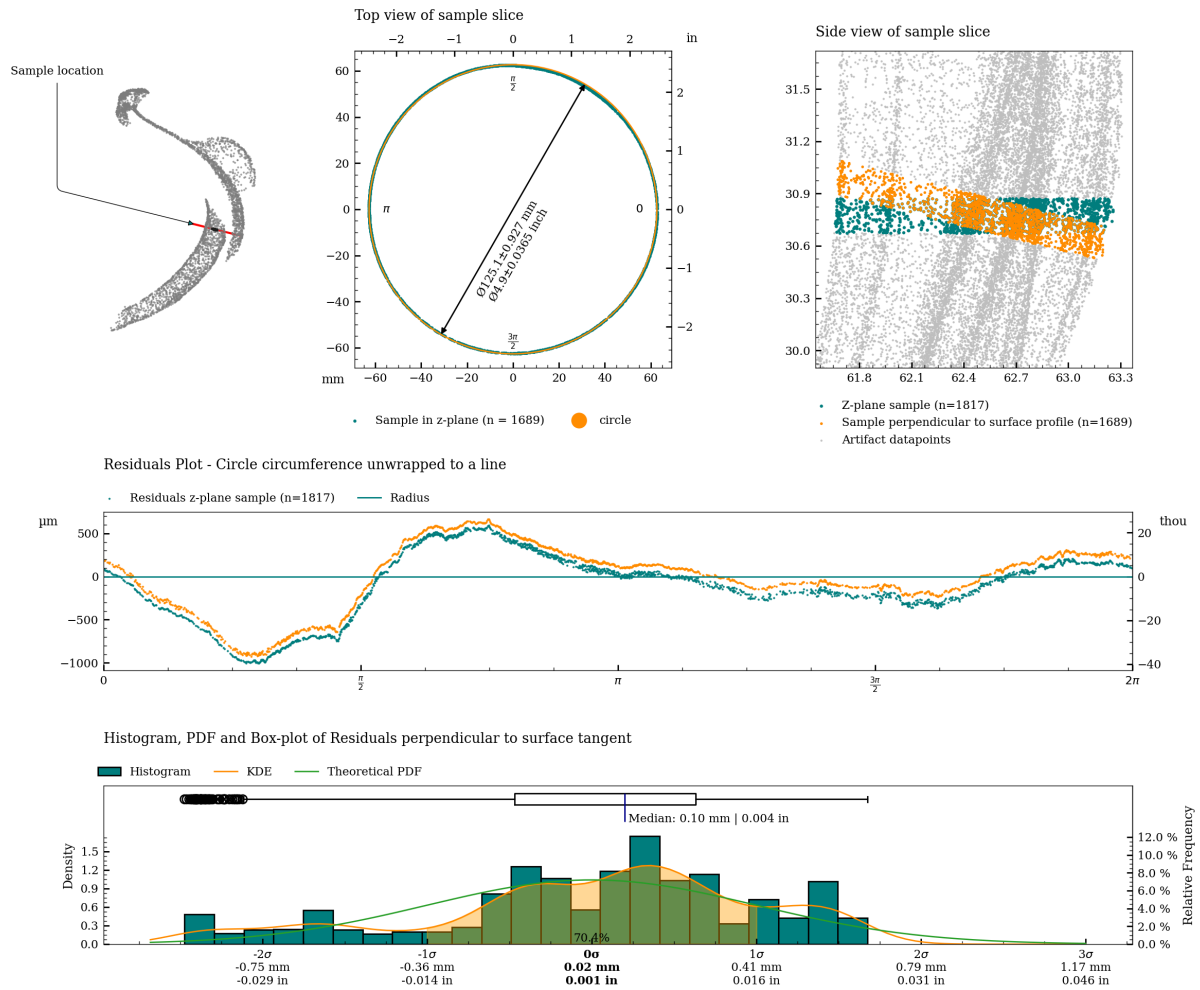


Figure 13: Charts with statistics for the measurement of c06\_s.

Graphical overview of circularity measurement c07

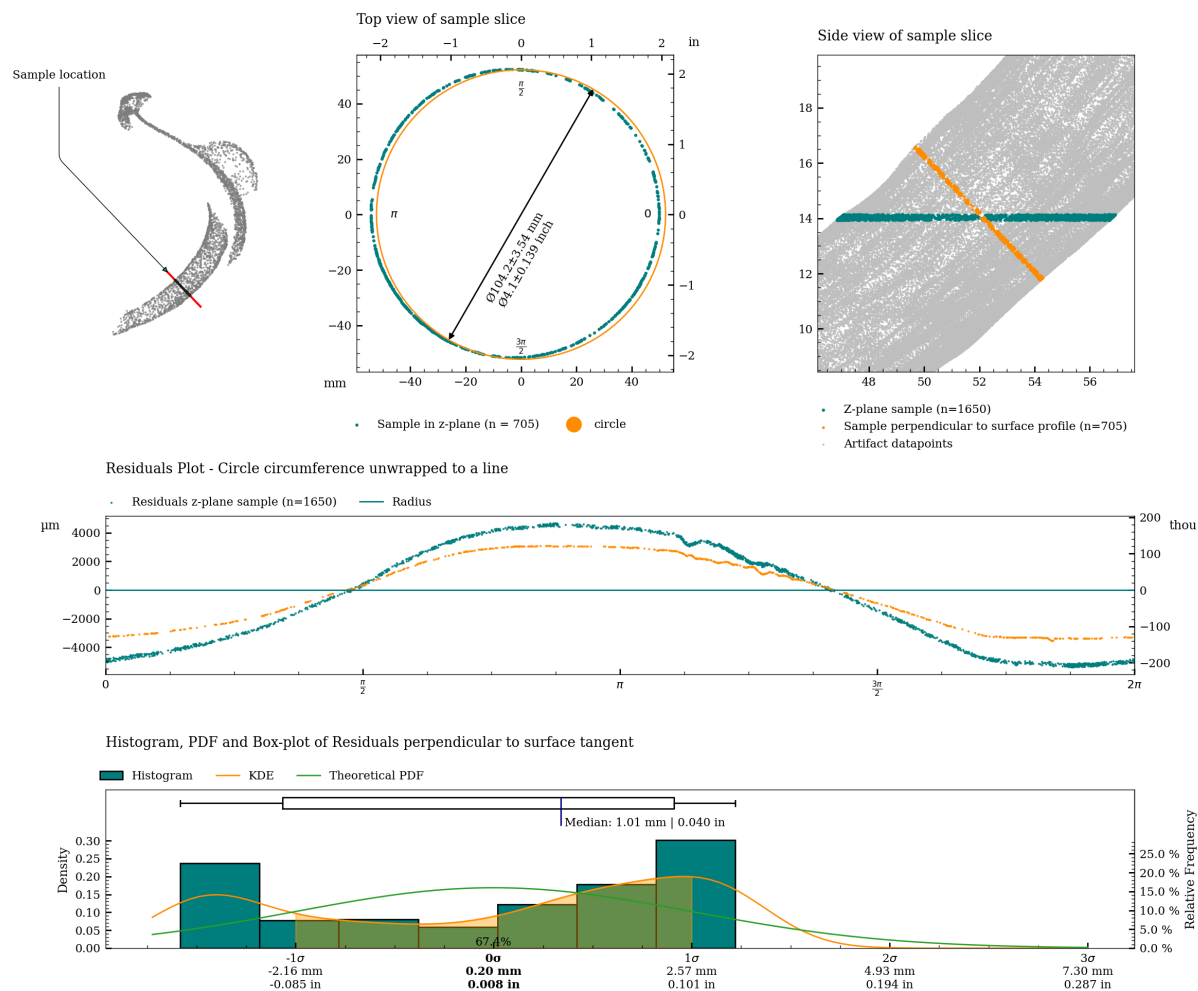


Figure 14: Charts with statistics for the measurement of c07.

## Graphical overview of circularity measurement c07\_s

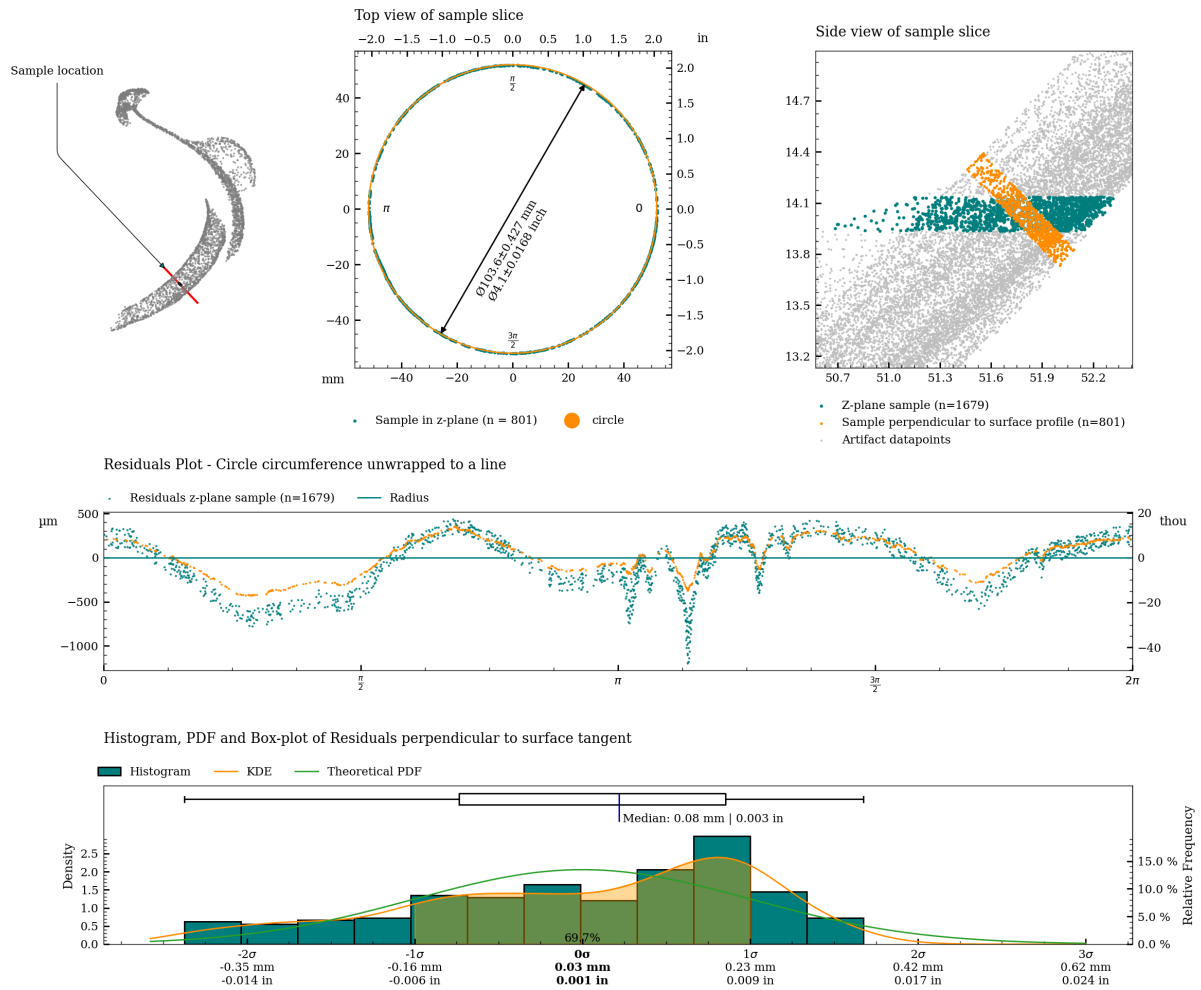


Figure 15: Charts with statistics for the measurement of c07\_s.

Table 2 shows statistical measures of the circularity of the vessel, measured along the full height (areas on the artifact scan containing damaged parts have been removed to the best extent possible to reduce the influence of the measurement).

Metric											
Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	mm	mm	mm	mm	mm	mm	mm	mm	mm		
Exterior	2.049	0.639	3.345	0.255	0.086	0.507	0.629	0.143	1.017	200	0.200
Interior	2.388	1.293	7.112	0.320	0.175	1.040	0.636	0.410	2.582	120	0.200
Interior separate	1.086	0.588	8.003	0.147	0.073	1.343	0.252	0.153	2.749	170	0.200

Imperial											
Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	in	in	in	in	in	in	in	in	in		
Exterior	2.049	0.639	3.345	0.255	0.086	0.507	0.629	0.143	1.017	200	0.200
Interior	2.388	1.293	7.112	0.320	0.175	1.040	0.636	0.410	2.582	120	0.200
Interior separate	1.086	0.588	8.003	0.147	0.073	1.343	0.252	0.153	2.749	170	0.200

Table 2: Perpendicular Circularity analysis of MV024.



Circularity analysis of exterior surface

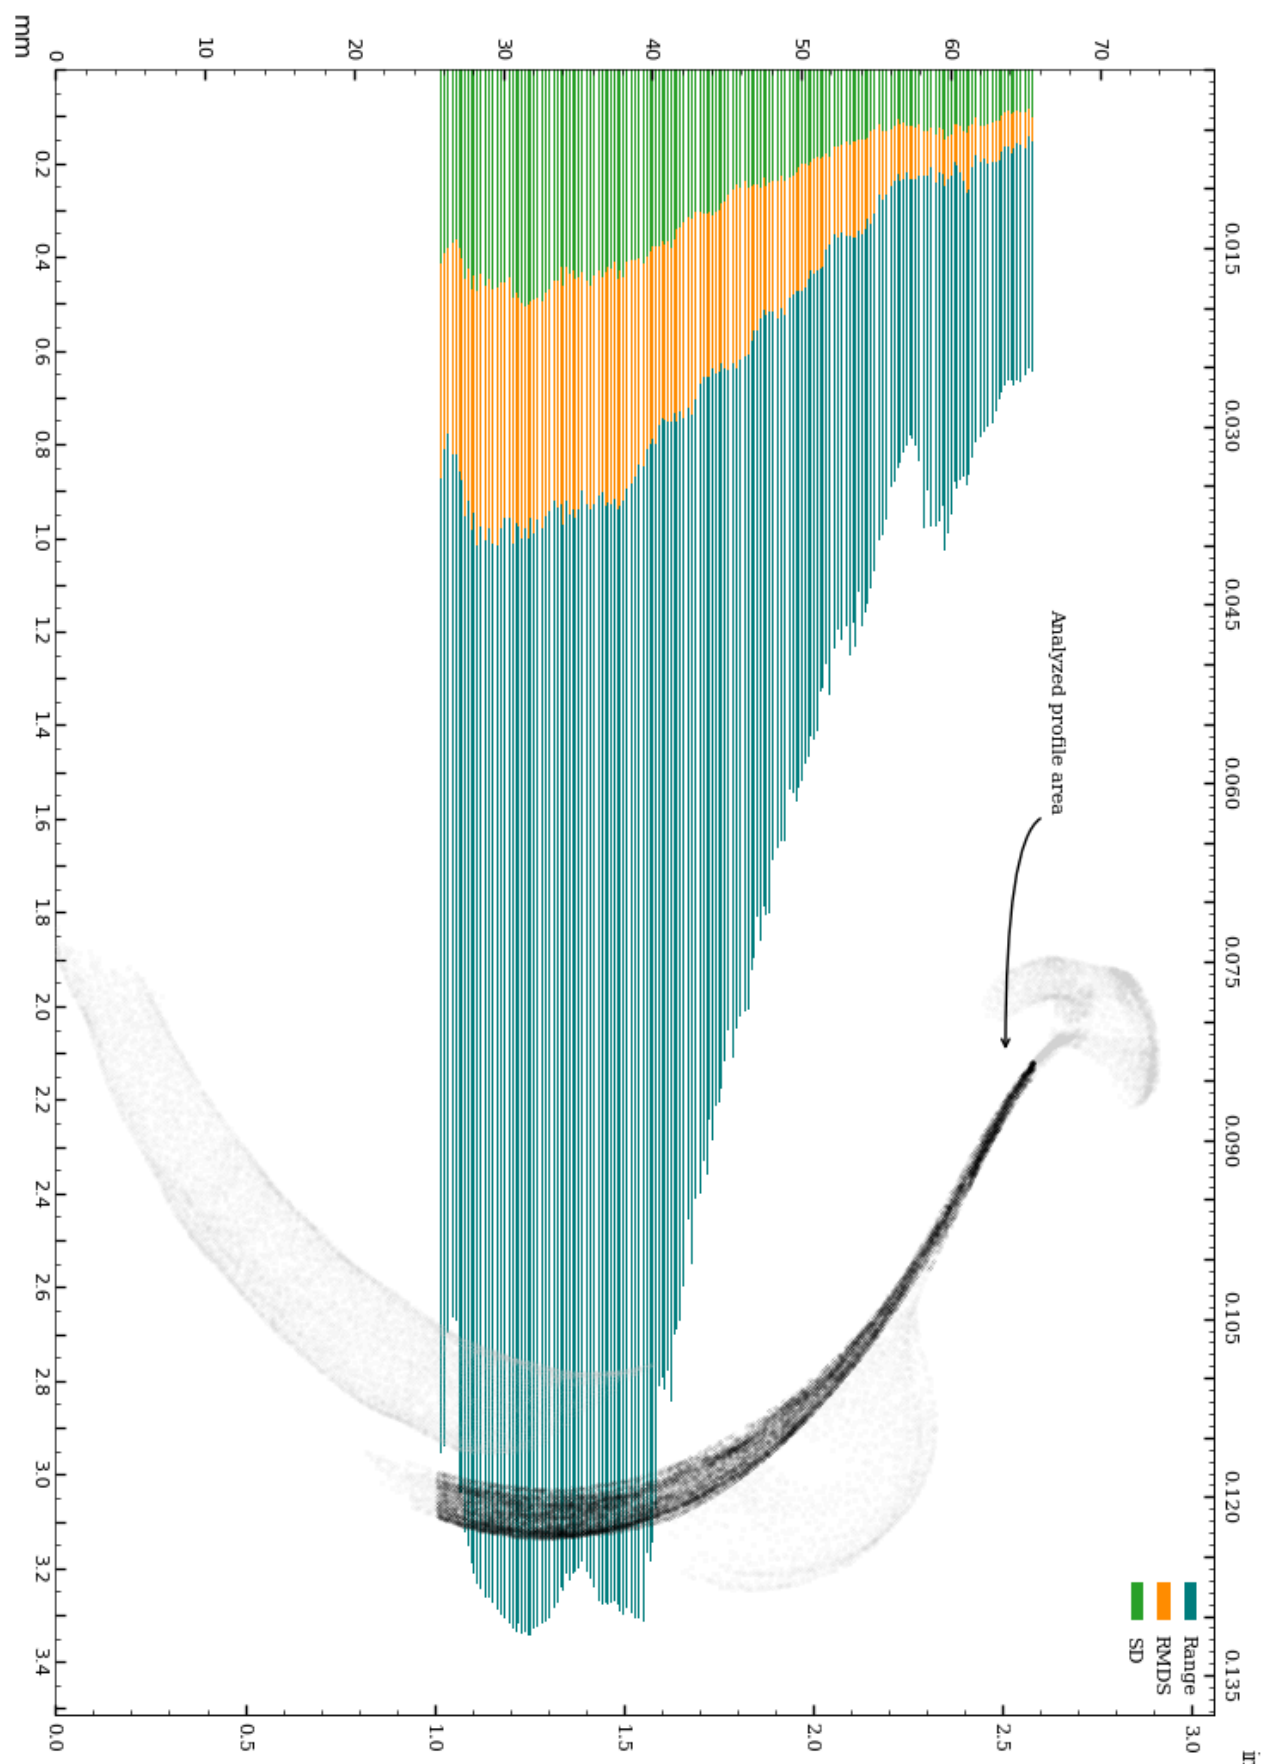


Figure 16: Circularity of exterior surface.

Circularity analysis of exterior surface, Standard Deviation and Root Mean Squared Deviation

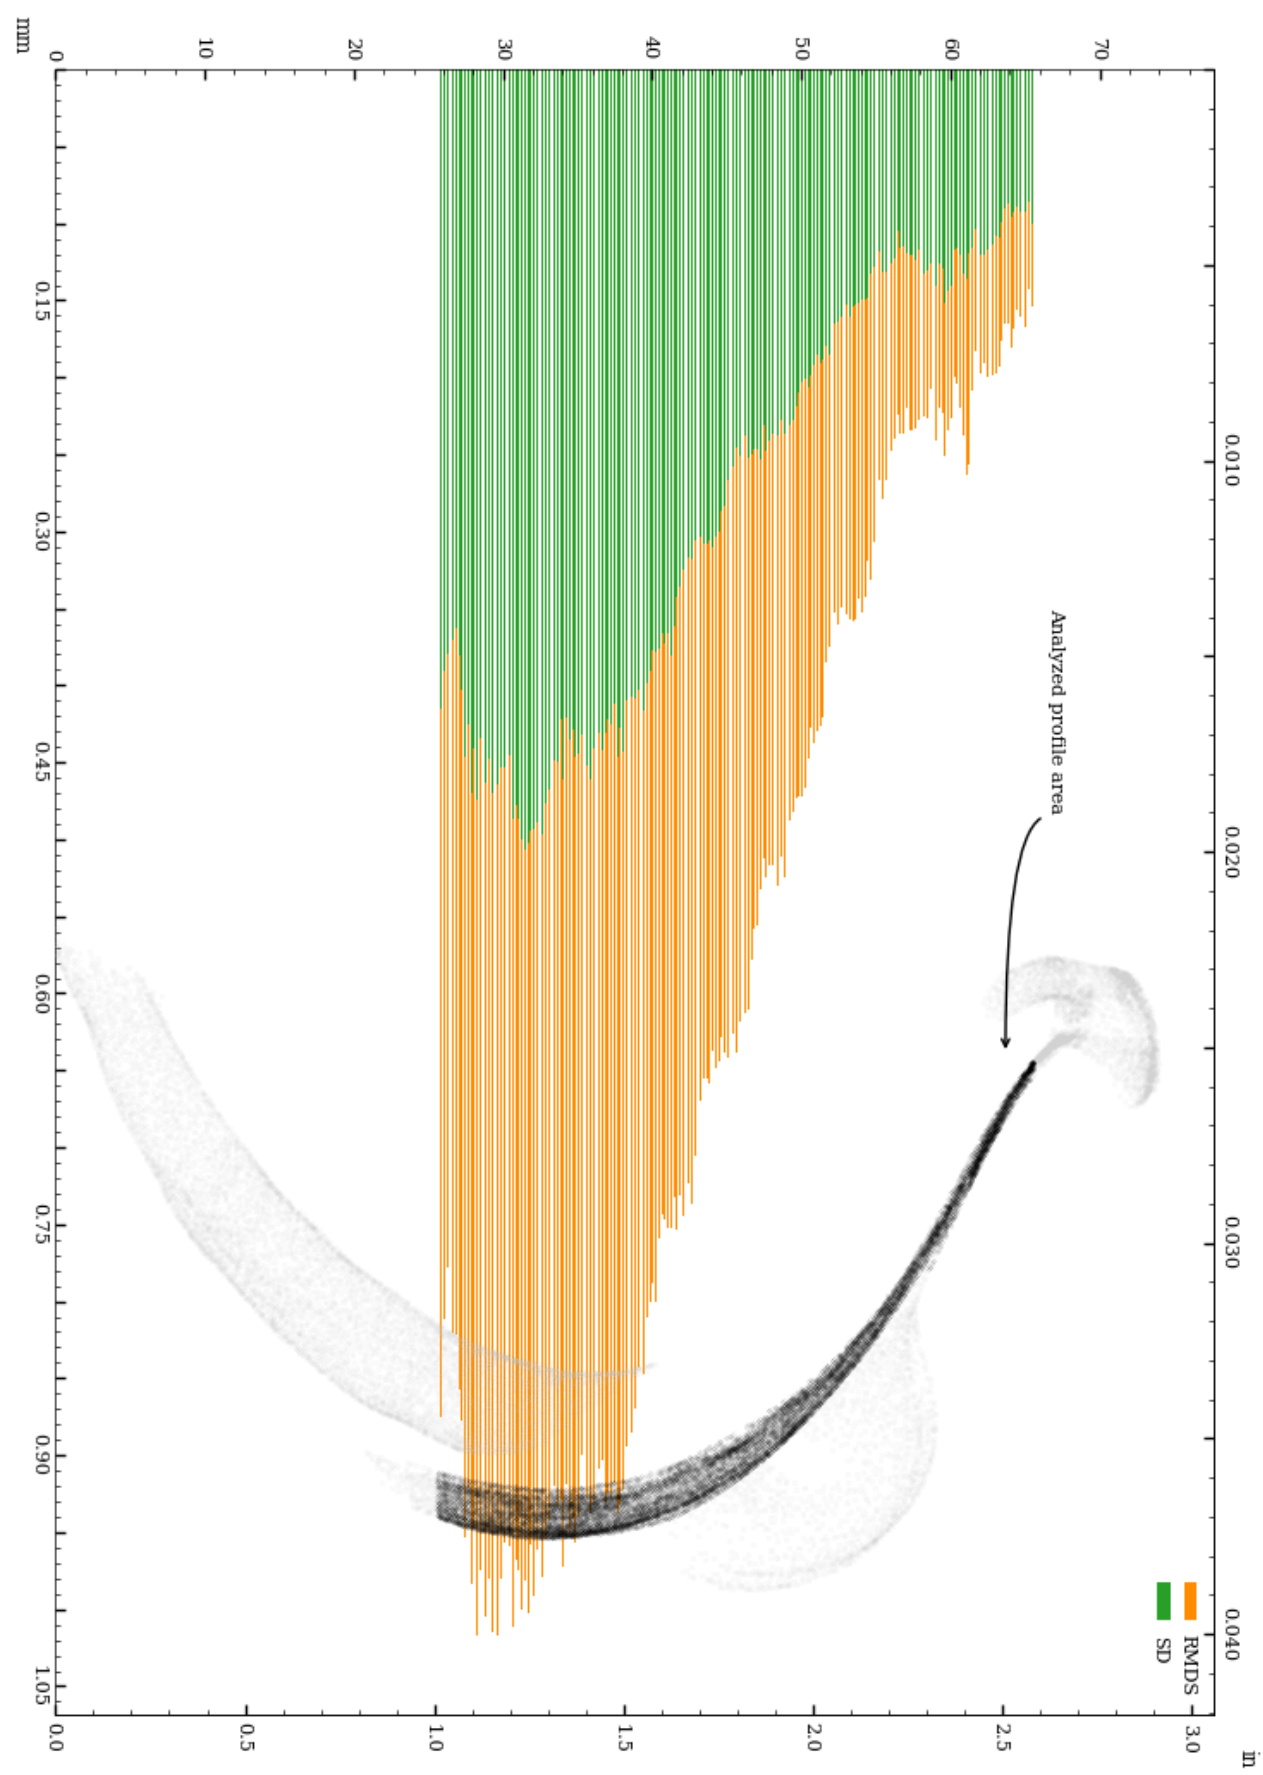


Figure 17: Vessel circularity of exterior surface, standard deviation and median absolute deviation.

The distributions of the circularity measurements across 200 slices of the exterior surface are shown below.

#### Range measurement distribution across 200 slices of exterior surface

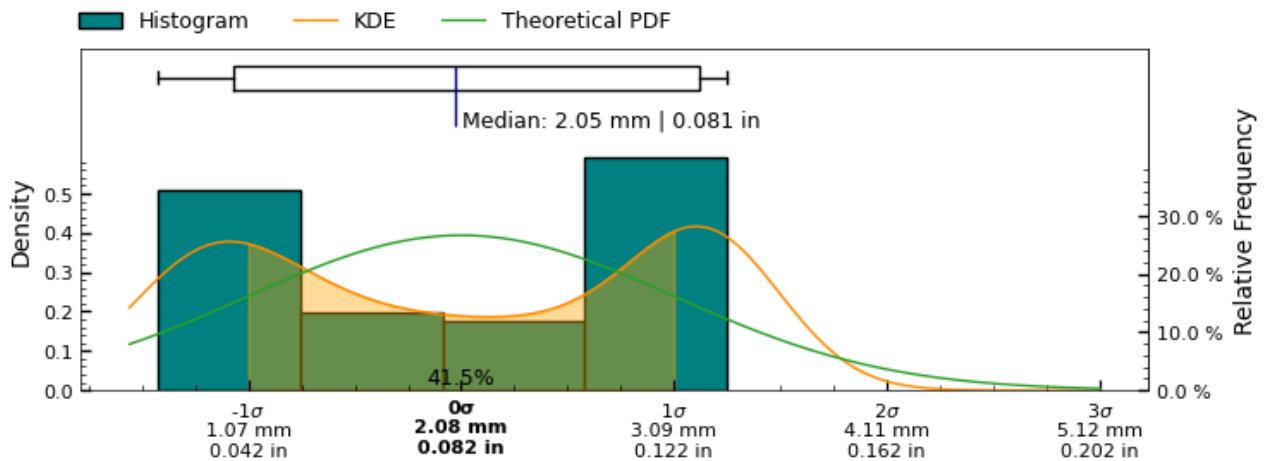


Figure 18: Range measurement distribution across measured slices of exterior surface

#### Standard Deviation measurement distribution across 200 slices of exterior surface

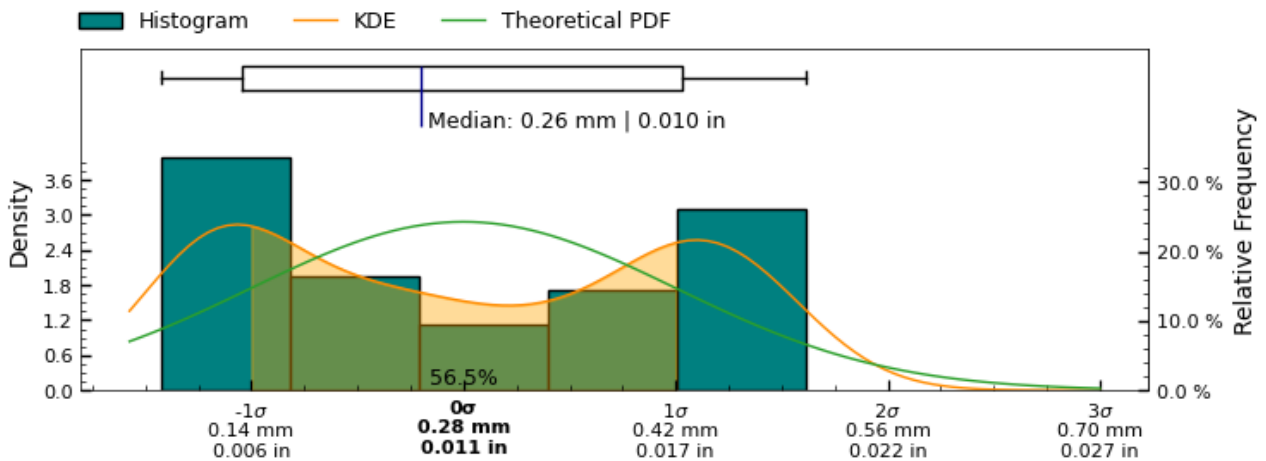


Figure 19: Standard Deviation measurement distribution across measured slices of " + exterior + " surface

#### Root Mean Squared Deviation measurement distribution across 200 slices of exterior surface

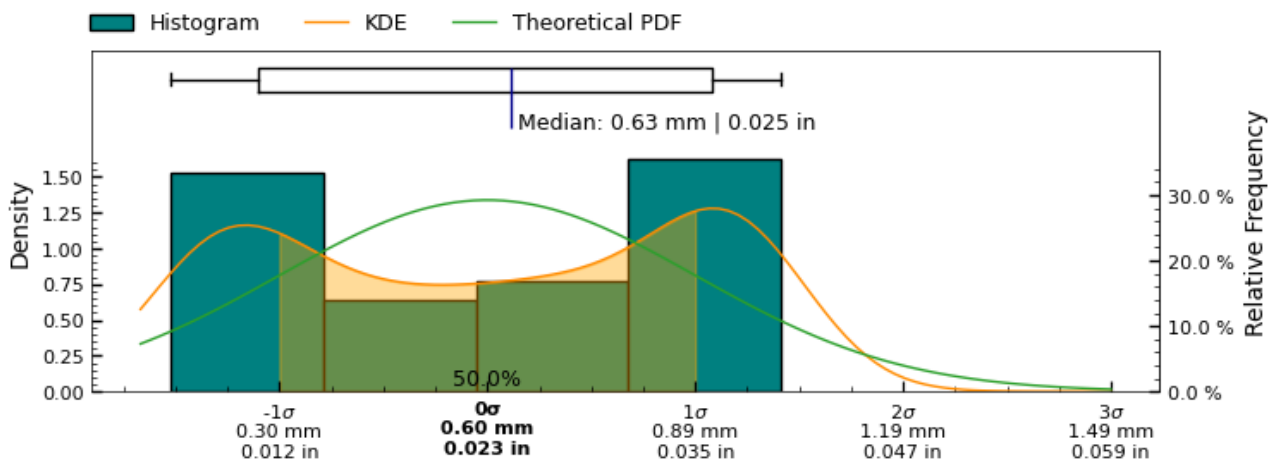


Figure 20: Root Mean Squared Deviation measurement distribution across measured slices of exterior surface

Circularity analysis of interior surface

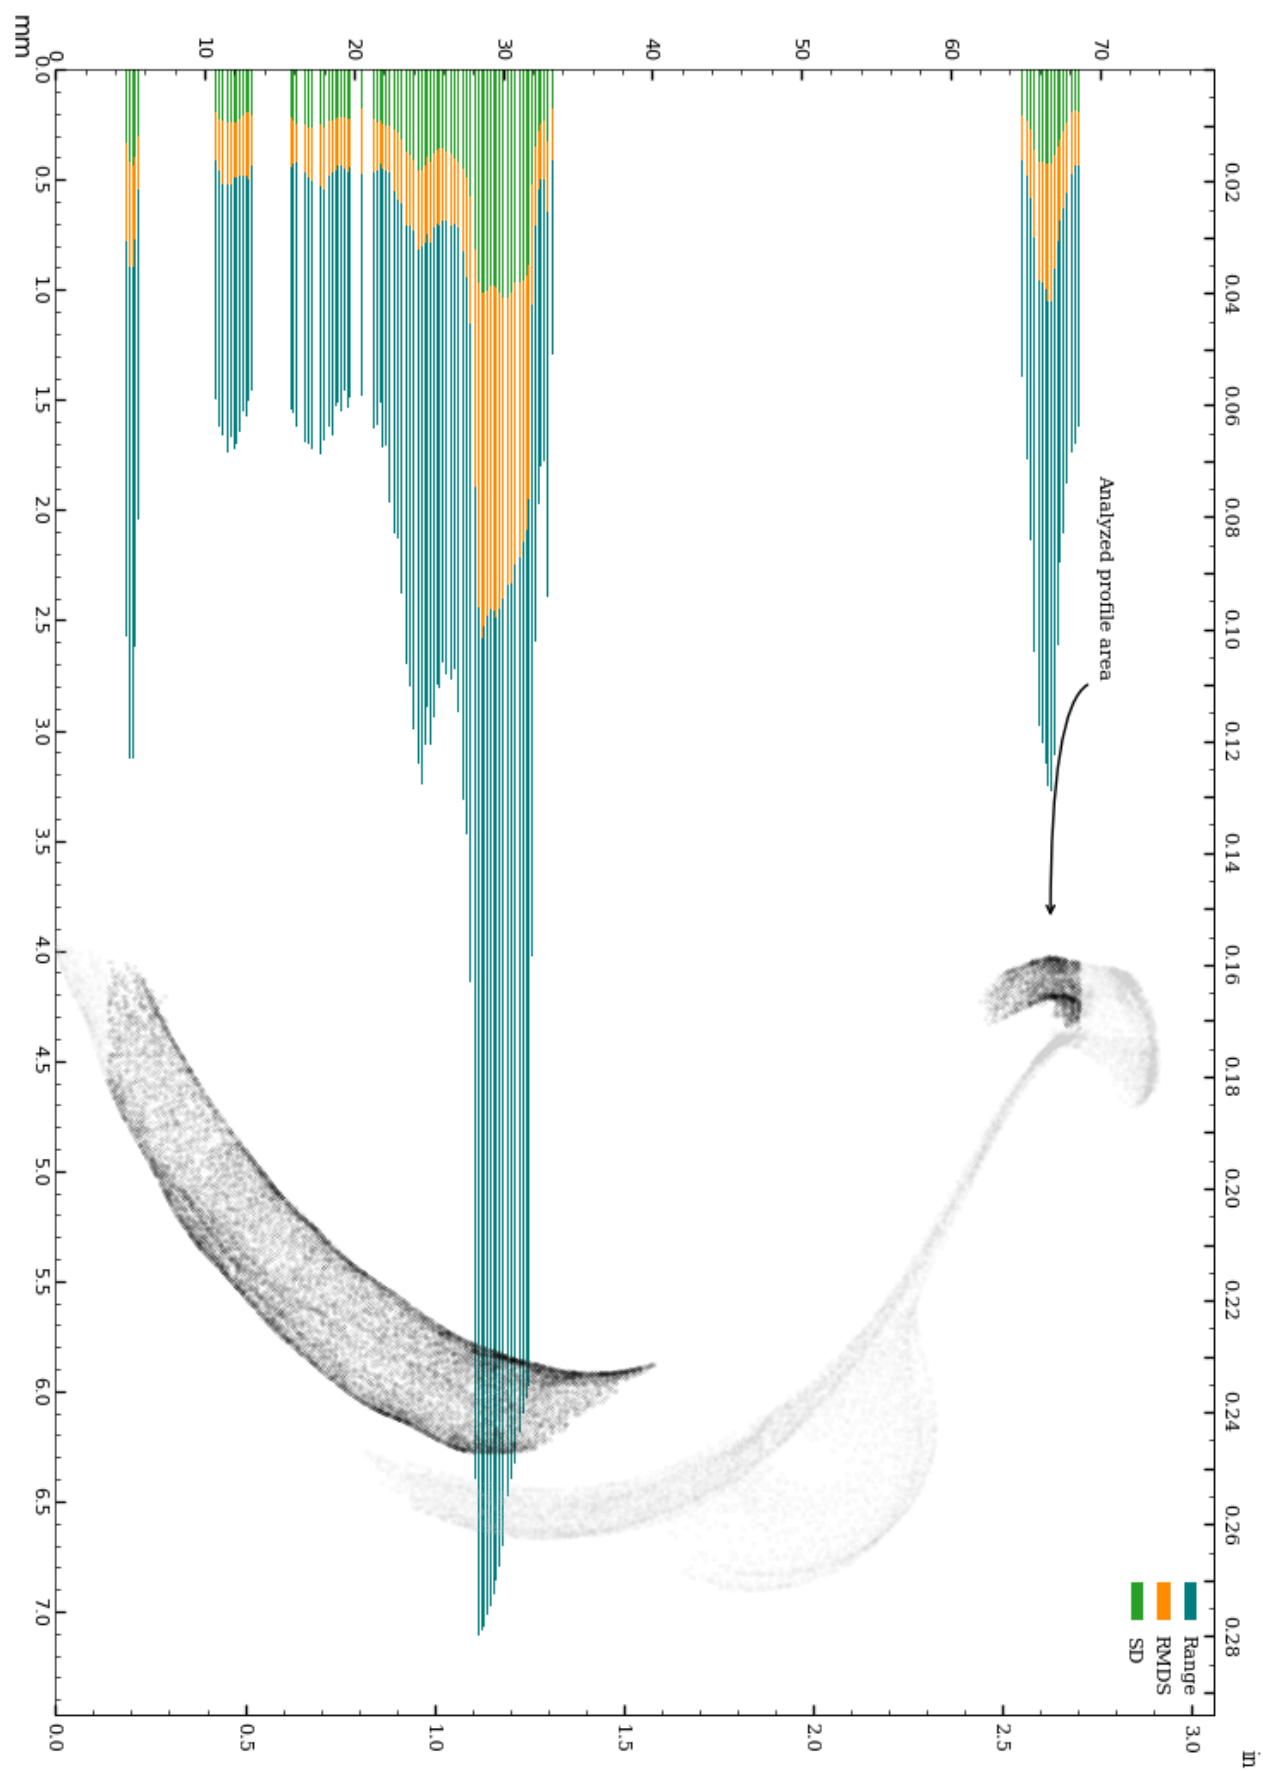


Figure 21: Circularity of interior surface.

Circularity analysis of interior surface, Standard Deviation and Root Mean Squared Deviation

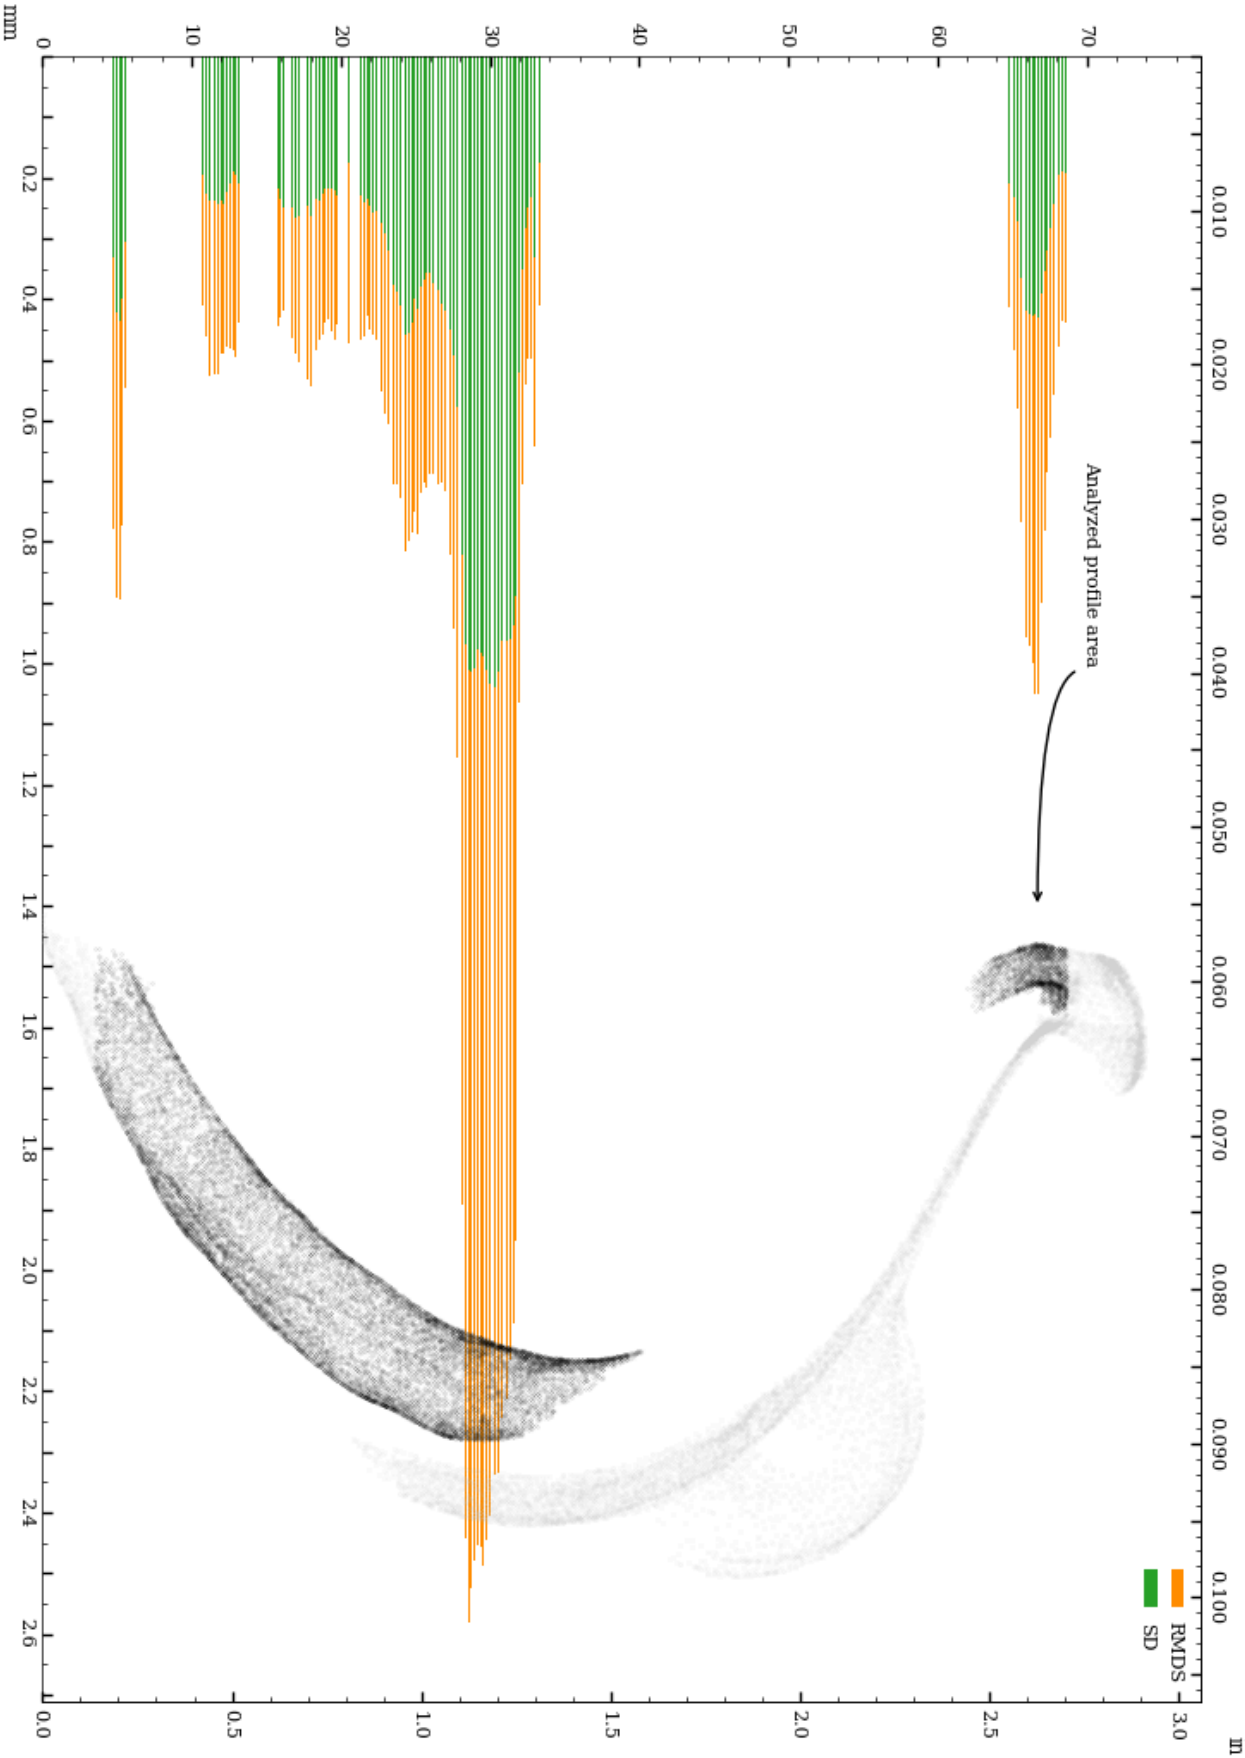


Figure 22: Vessel circularity of interior surface, standard deviation and median absolute deviation.

The distributions of the circularity measurements across 120 slices of the interior surface are shown below.

Range measurement distribution across 120 slices of interior surface

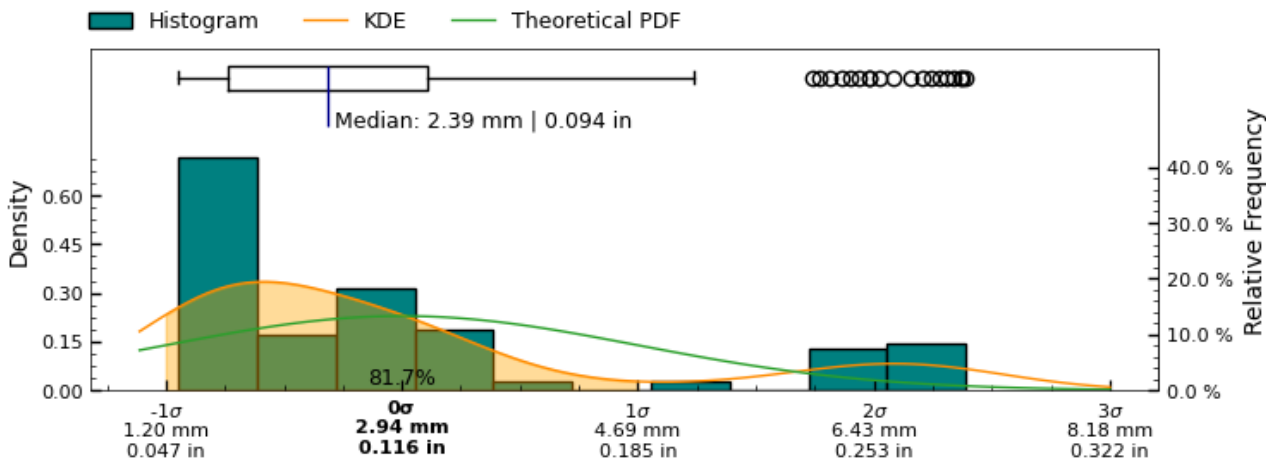


Figure 23: Range measurement distribution across measured slices of interior surface

Standard Deviation measurement distribution across 120 slices of interior surface

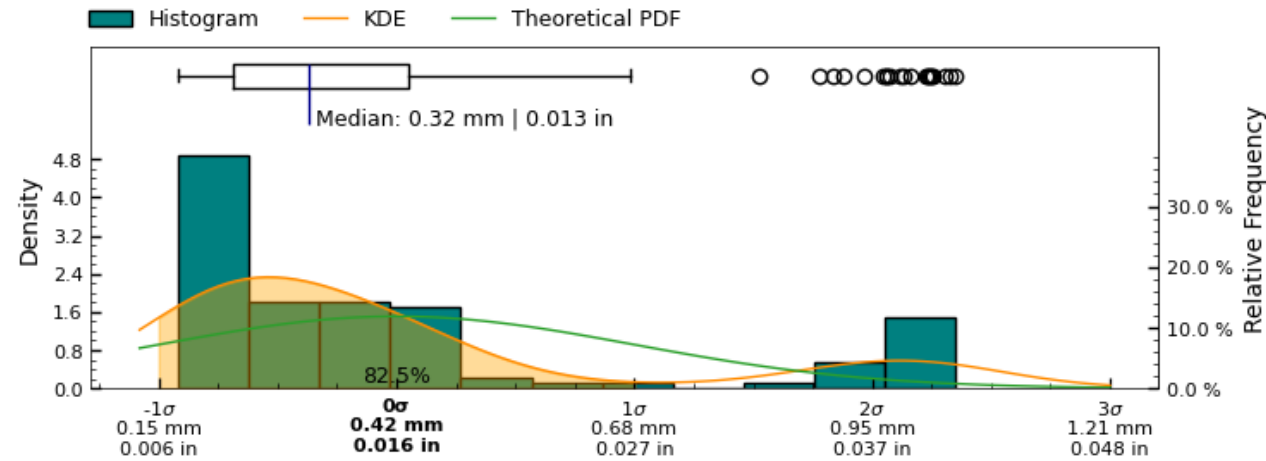


Figure 24: Standard Deviation measurement distribution across measured slices of “ + interior + ” surface

Root Mean Squared Deviation measurement distribution across 120 slices of interior surface

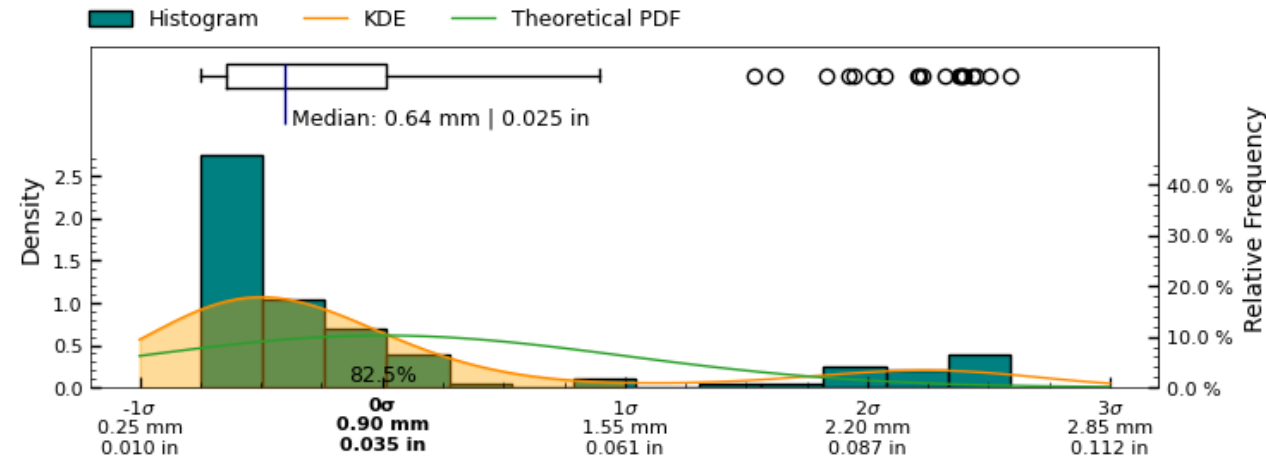


Figure 25: Root Mean Squared Deviation measurement distribution across measured slices of interior surface

Circularity analysis of interior separately aligned surface

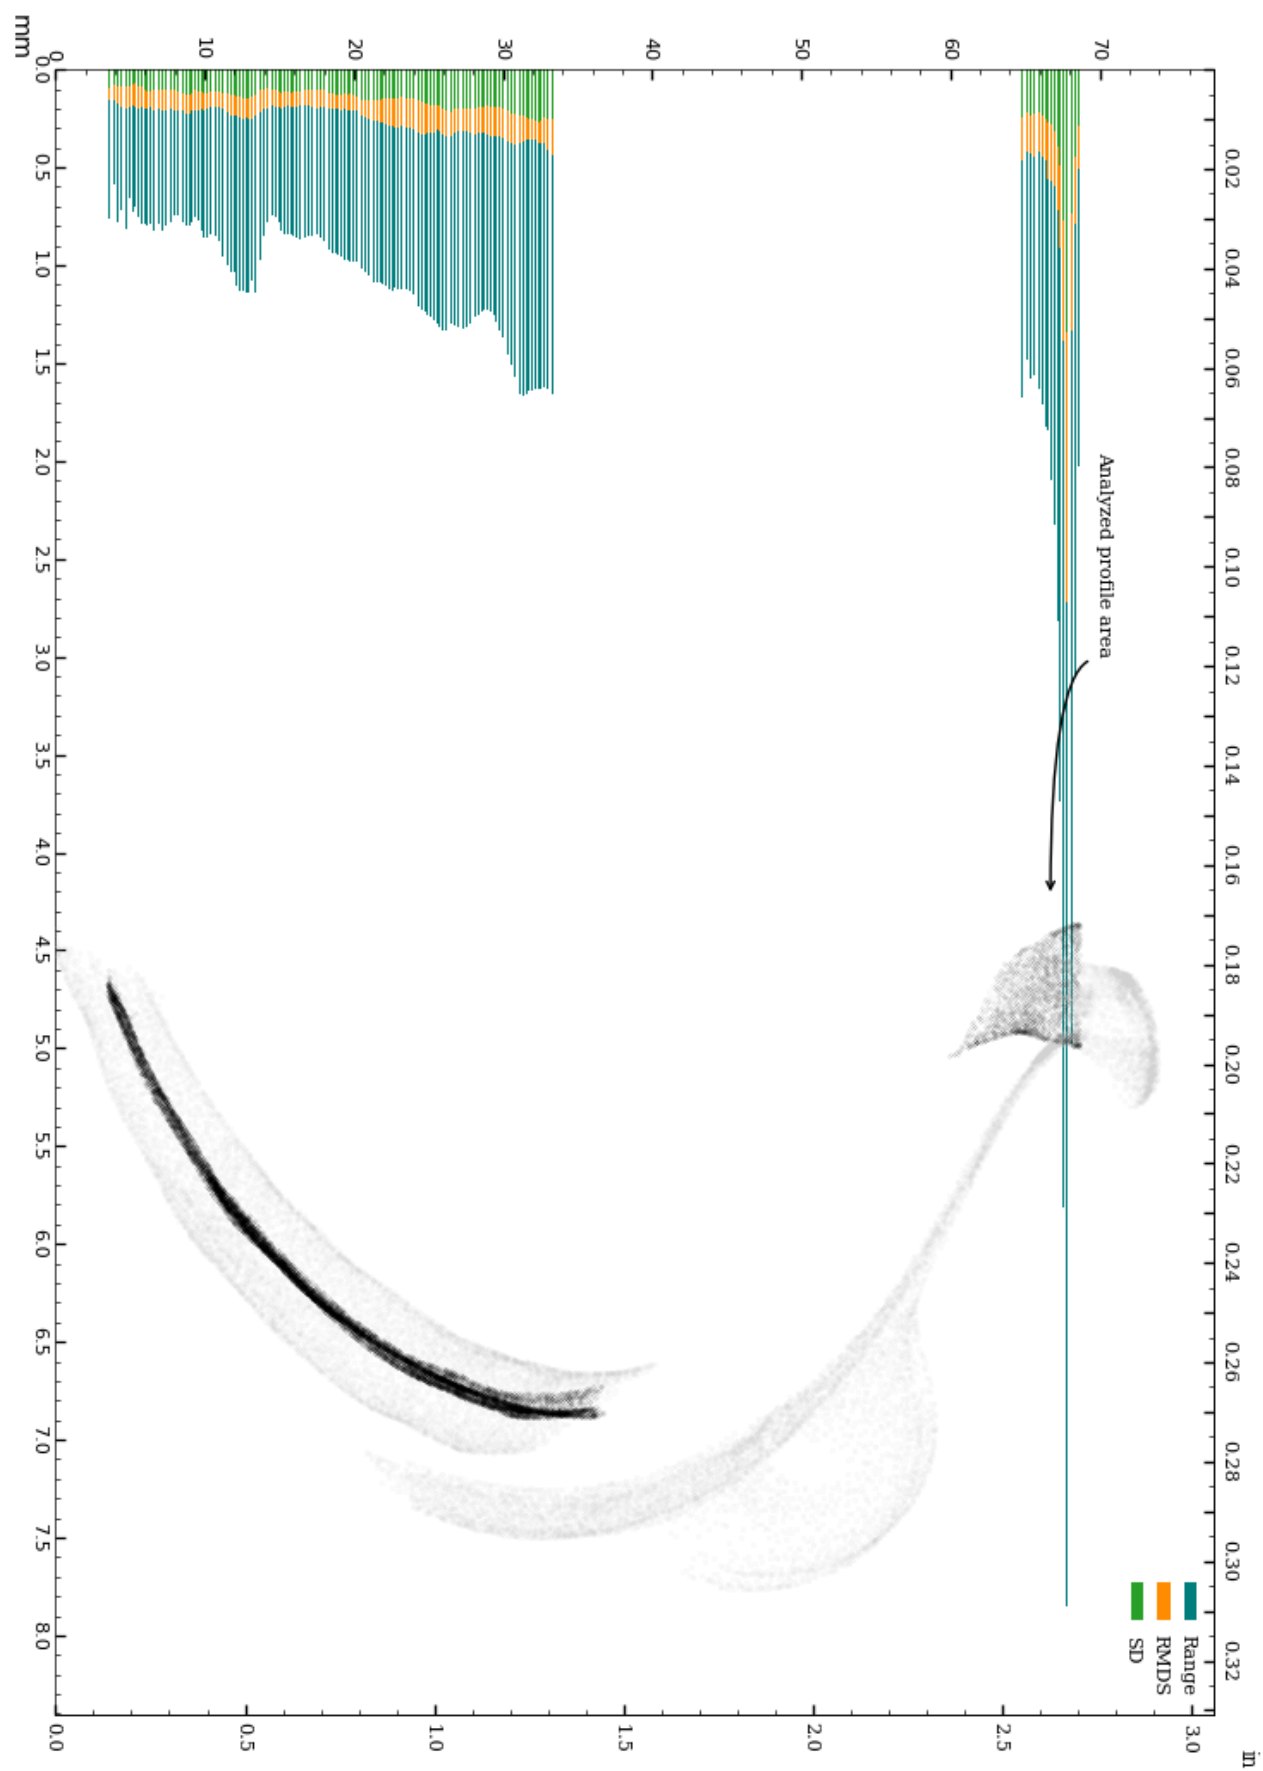


Figure 26: Circularity of interior\_separate surface.

Circularity analysis of interior separately aligned surface, Standard Deviation and Root Mean Squared Deviation

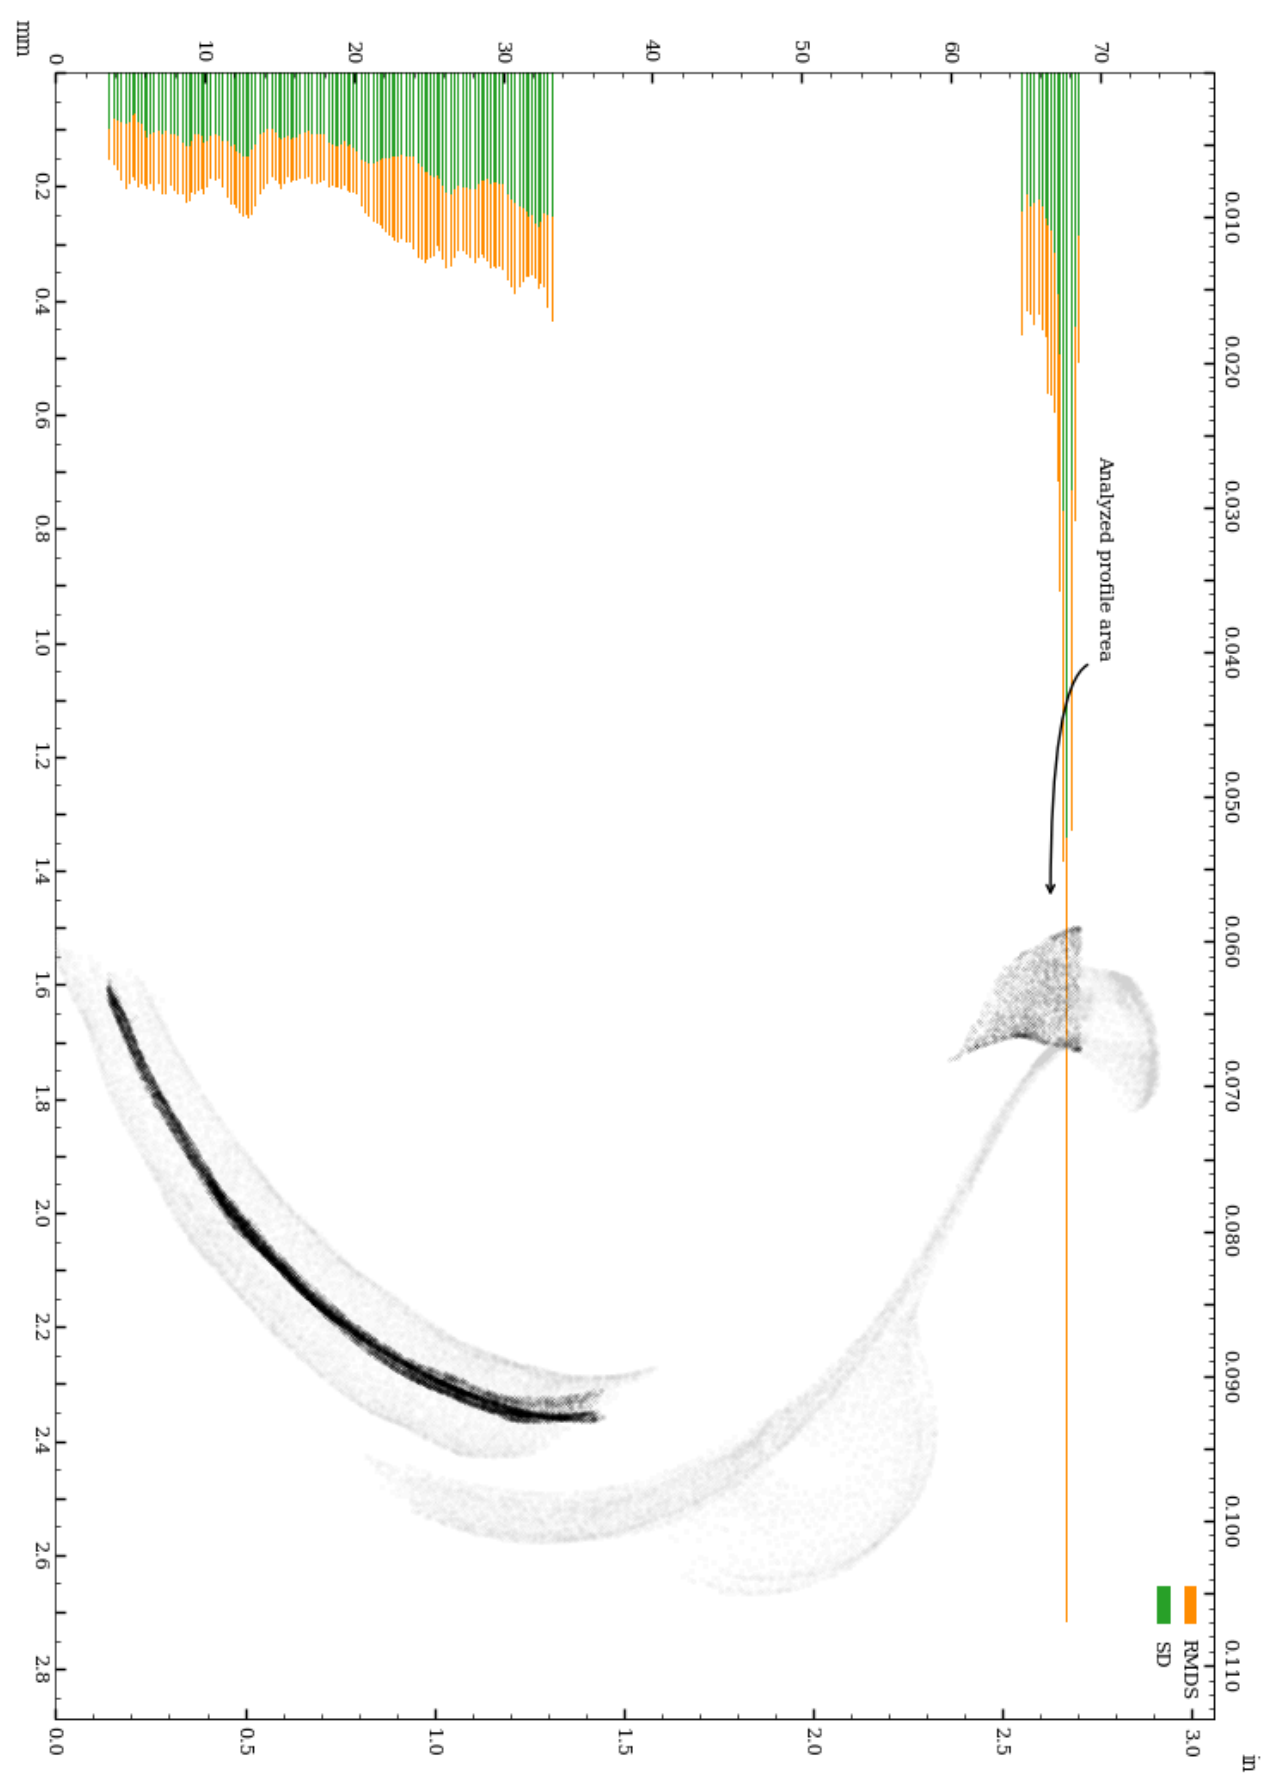


Figure 27: Vessel circularity of interior\_separate surface, standard deviation and median absolute deviation.



The distributions of the circularity measurements across 170 slices of the interior\_separate surface are shown below.

#### Range measurement distribution across 170 slices of interior separately aligned surface

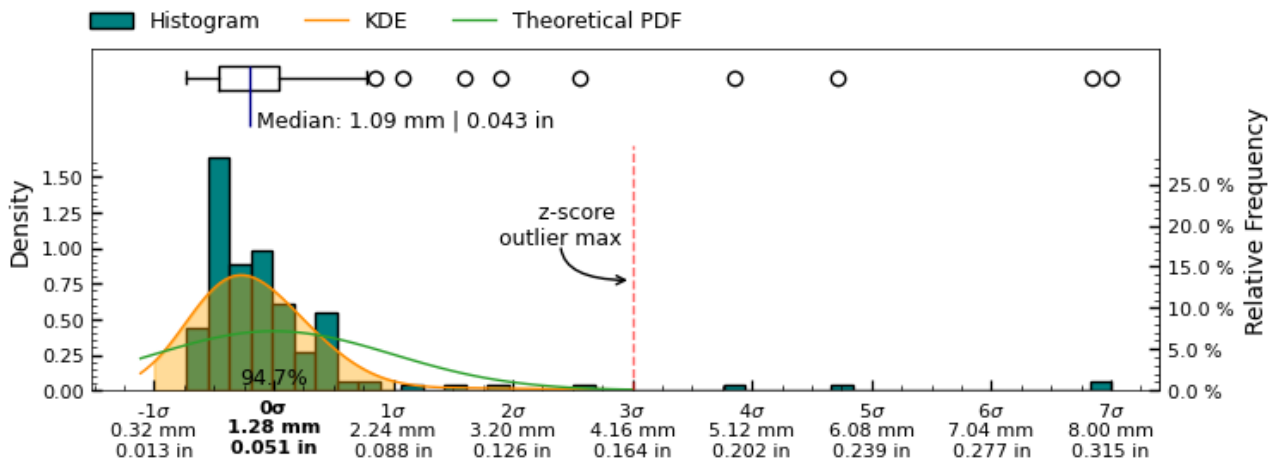


Figure 28: Range measurement distribution across measured slices of interior\_separate surface

#### Standard Deviation measurement distribution across 170 slices of interior separately aligned surface

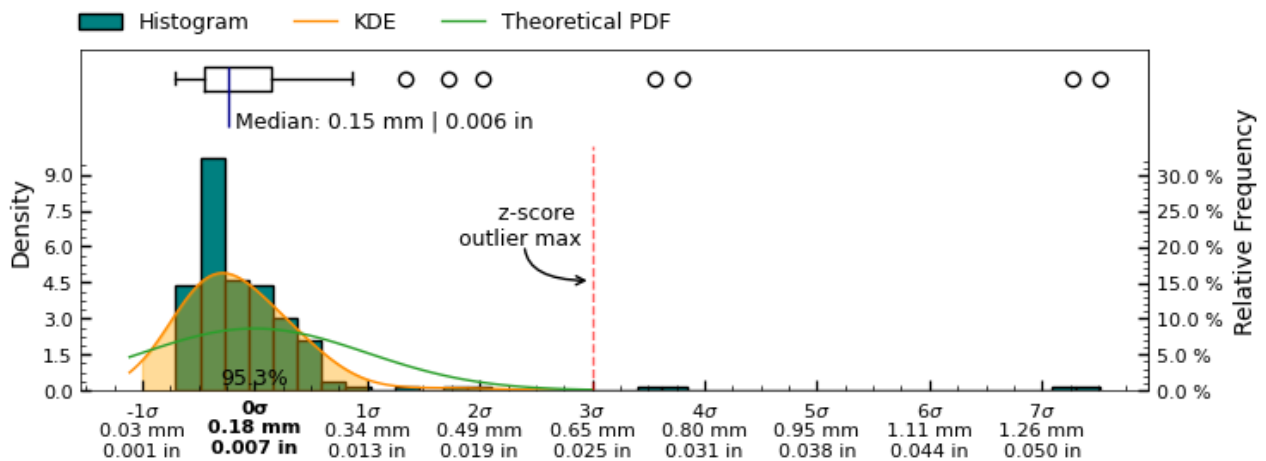


Figure 29: Standard Deviation measurement distribution across measured slices of " + interior\_separate + " surface

#### Root Mean Squared Deviation measurement distribution across 170 slices of interior separately aligned surface

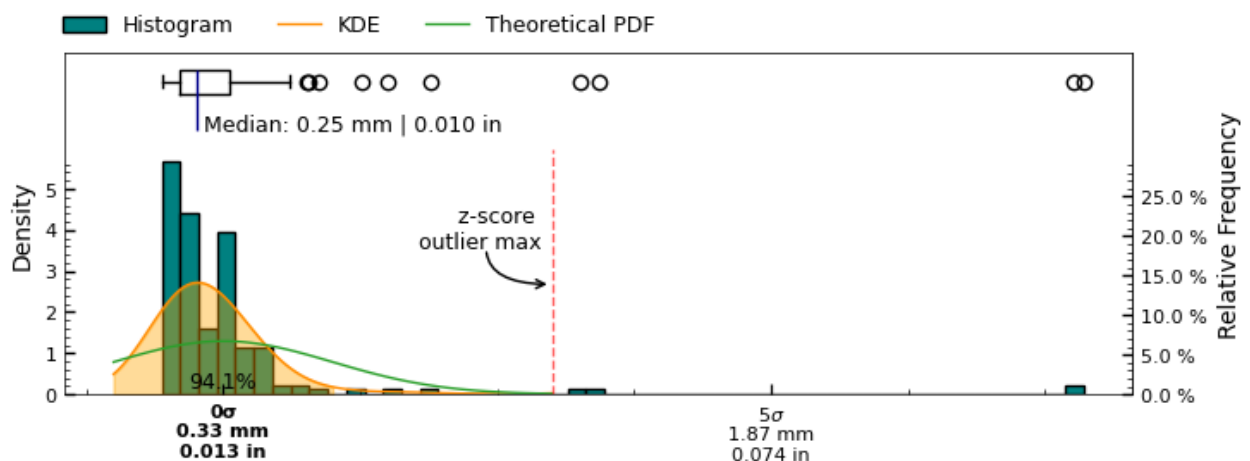


Figure 30: Root Mean Squared Deviation measurement distribution across measured slices of interior separately aligned surface

## Concentricity

The concentricity metric describes the deviation in the center-point of the referenced features. As such, it is a measure to determine if several features of the object share the same center point/axis, and how closely. See Figure 31 for a visual representation of this metric.

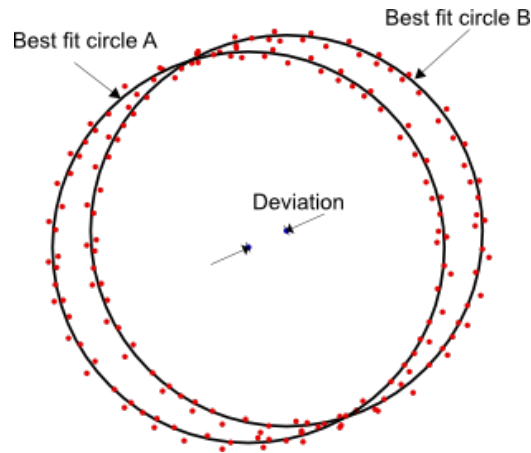


Figure 31: Concentricity measures the deviation (distance) between the center of two circles.

Determination of concentricity has been carried out by establishing the best fit circles of sample slices, using RANSAC (Random sample consensus) algorithm for outlier detection of a least squares circle regression on the scanned data-points at each cross-section, to estimate centers of each cross-section.

The concentricity between both the interior and exterior circular cross-sections is explored for cross-section measurements with the same Z-coordinates.

Additionally, the concentricity between each cross-section measurement defined in Figure 4 and the datum axis  $(x, y) = (0, 0)$  has been calculated to establish the deviation of the feature center from the datum axis.



Figure 32: Circularity measurement sample locations, full mesh aligned to exterior surface

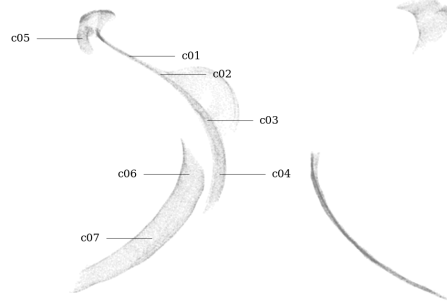


Figure 33: Circularity measurement sample location, separately aligned interior mesh

## Metric

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
		mm		mm	mm	mm	mm	mm	mm	$\mu\text{m}$
c01	z-axis	0.108	176	0.780	0.765	0.195	0.185	0.118	0.112	93, -55
c02	z-axis	0.049	144	0.823	0.823	0.227	0.227	0.120	0.120	40, -28
c03	z-axis	0.099	539	2.919	2.919	0.764	0.764	0.344	0.344	-26, 96
c04	z-axis	0.071	818	3.486	3.486	0.989	0.989	0.505	0.505	8, -71
c05	z-axis	1.397	1262	4.124	4.017	1.336	1.342	0.578	0.569	-1346, -377
c05_s	z-axis	3.685	678	8.272	8.272	2.933	2.933	1.082	1.082	3275, -1688
c06	z-axis	3.189	1311	6.434	6.434	2.124	2.124	0.947	0.947	-3024, 1012
c06_s	z-axis	0.240	1689	1.636	1.636	0.395	0.395	0.244	0.244	-238, -32
c07	z-axis	2.352	705	6.377	6.377	2.186	2.186	0.964	0.964	-2289, 540
c07_s	z-axis	0.043	801	0.817	0.817	0.203	0.203	0.109	0.109	-11, -41
c04	c06_s	0.248								245, -39
c05	c05_s	4.803								-4621, 1311
c07	c07_s	2.351								-2278, 581

## Imperial

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
		in		in	in	in	in	in	in	thou
c01	z-axis	0.0043	176	0.0307	0.0301	0.0077	0.0073	0.0046	0.0044	3.7, -2.2
c02	z-axis	0.0019	144	0.0324	0.0324	0.0089	0.0089	0.0047	0.0047	1.6, -1.1
c03	z-axis	0.0039	539	0.1149	0.1149	0.0301	0.0301	0.0135	0.0135	-1.0, 3.8
c04	z-axis	0.0028	818	0.1372	0.1372	0.0389	0.0389	0.0199	0.0199	0.3, -2.8
c05	z-axis	0.0550	1262	0.1624	0.1581	0.0526	0.0528	0.0228	0.0224	-53.0, -14.8
c05_s	z-axis	0.1451	678	0.3257	0.3257	0.1155	0.1155	0.0426	0.0426	128.9, -66.5
c06	z-axis	0.1256	1311	0.2533	0.2533	0.0836	0.0836	0.0373	0.0373	-119.1, 39.9
c06_s	z-axis	0.0094	1689	0.0644	0.0644	0.0156	0.0156	0.0096	0.0096	-9.4, -1.2
c07	z-axis	0.0926	705	0.2511	0.2511	0.0861	0.0861	0.0379	0.0379	-90.1, 21.3
c07_s	z-axis	0.0017	801	0.0322	0.0322	0.0080	0.0080	0.0043	0.0043	-0.4, -1.6
c04	c06_s	0.0098								9.6, -1.5
c05	c05_s	0.1891								-181.9, 51.6
c07	c07_s	0.0926								-89.7, 22.9

Table 3: Concentricity analysis of MV024.

Concentricity analysis of c01

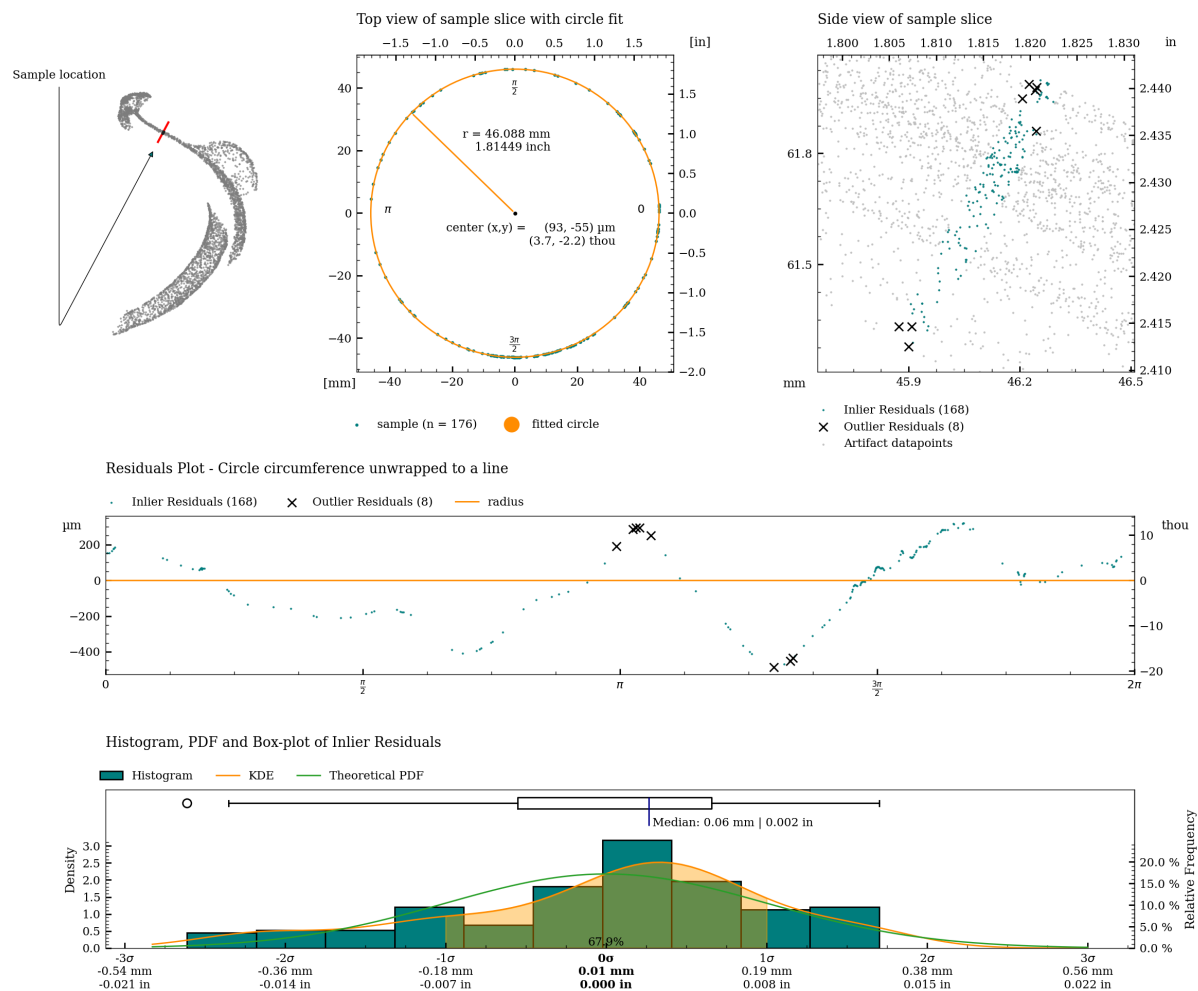


Figure 34: Detailed plot of concentricity measurement for c01.

Concentricity analysis of c02

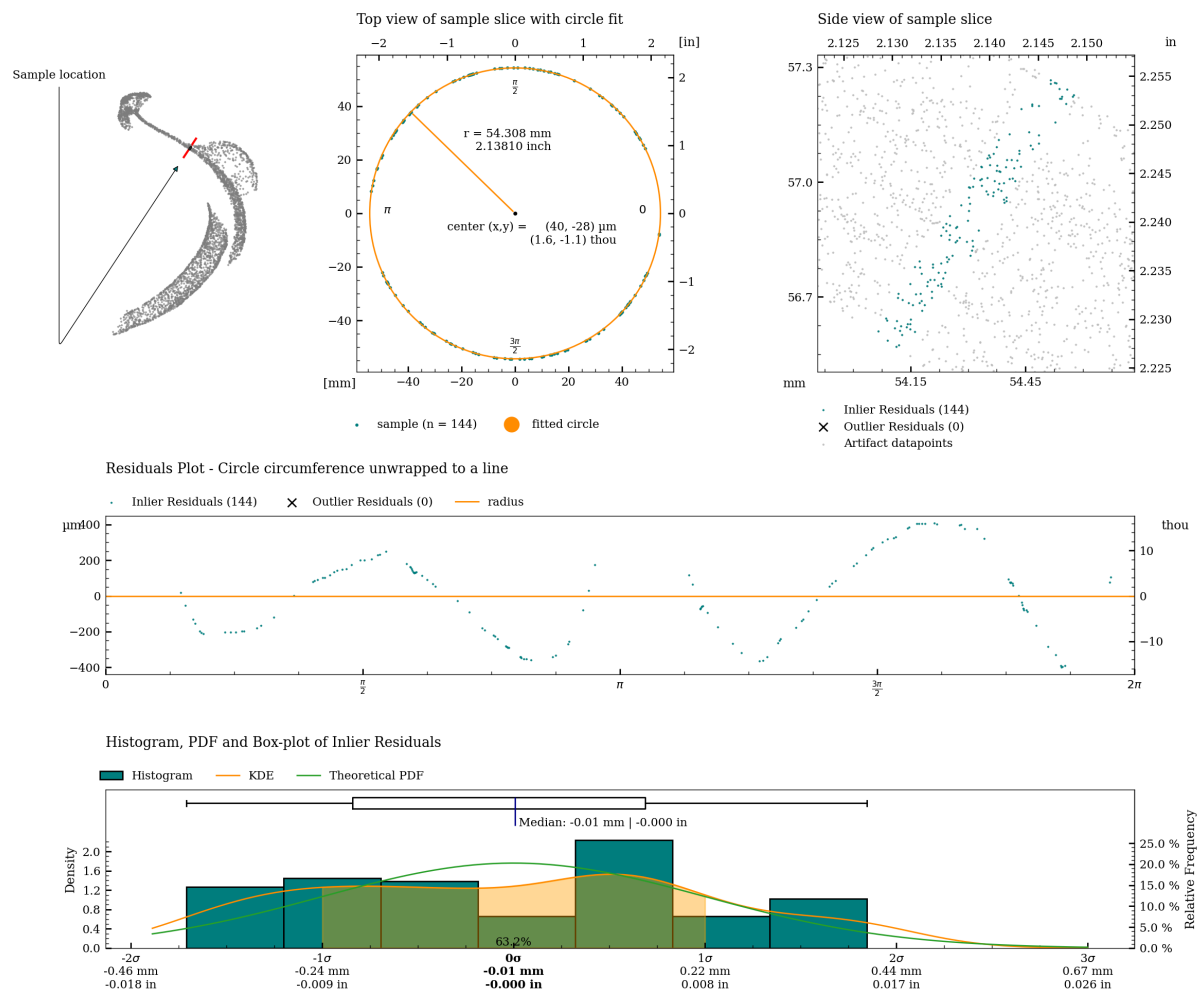


Figure 35: Detailed plot of concentricity measurement for c02.

Concentricity analysis of c03

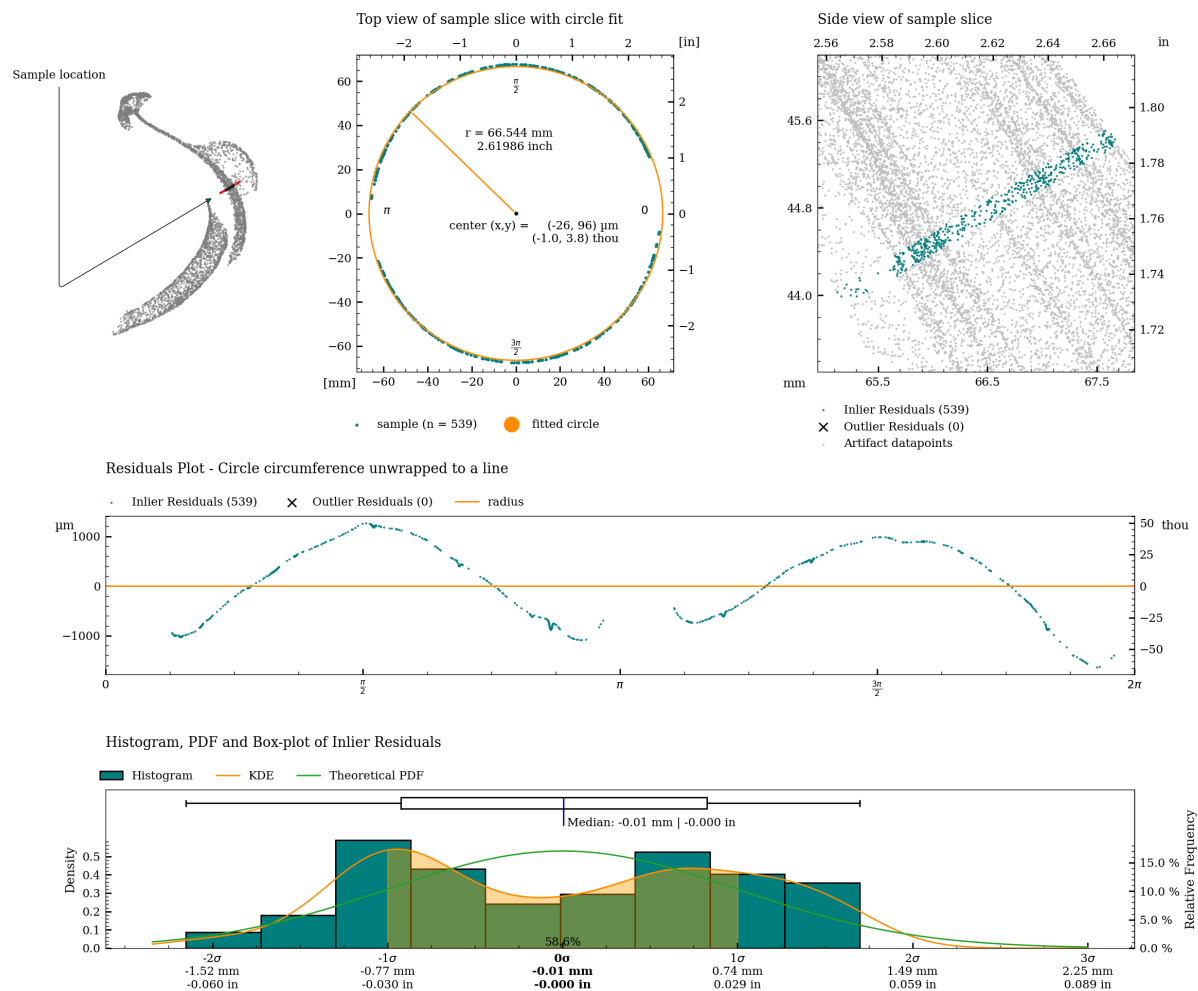


Figure 36: Detailed plot of concentricity measurement for c03.

Concentricity analysis of c04

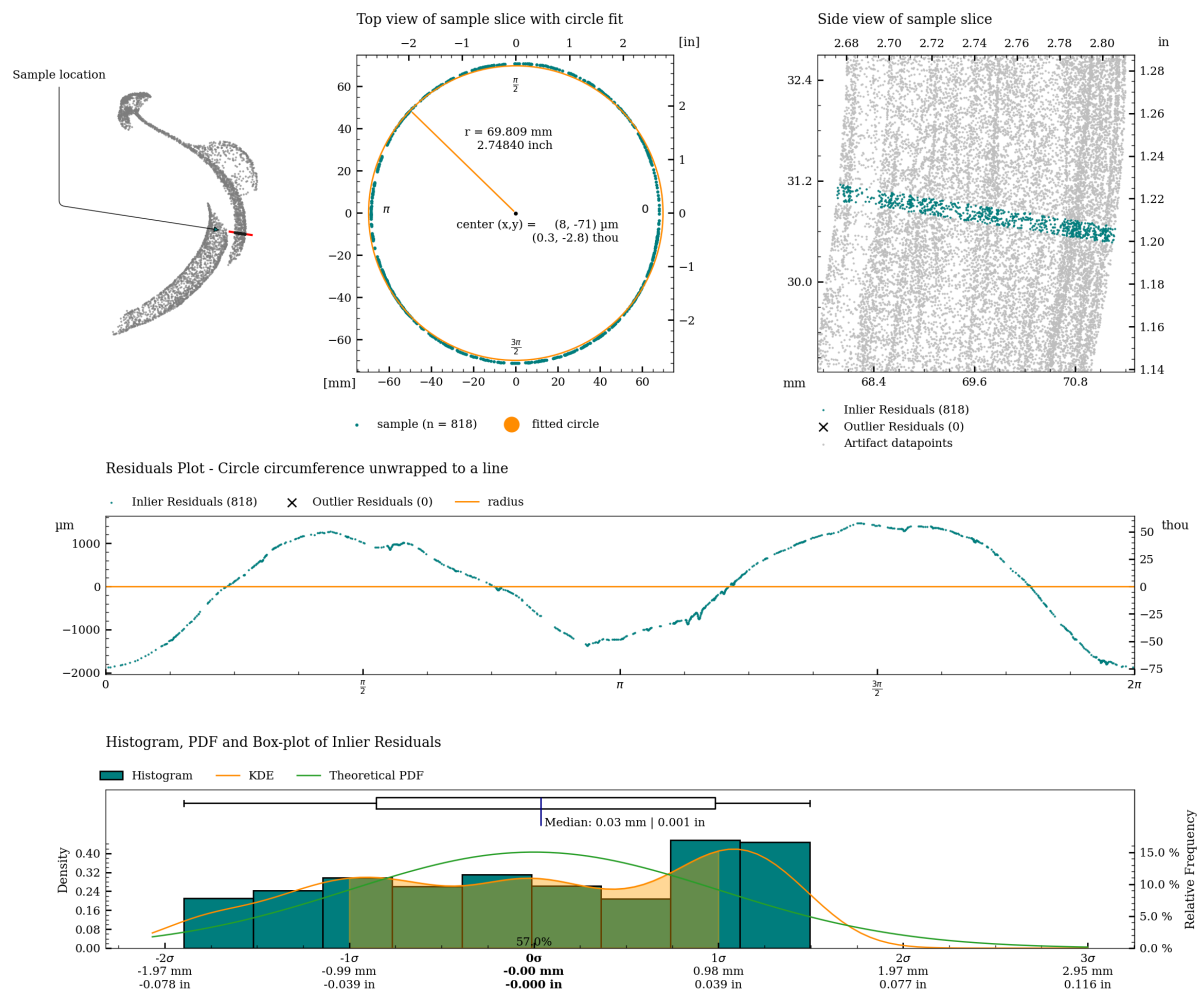


Figure 37: Detailed plot of concentricity measurement for c04.

Concentricity analysis of c05

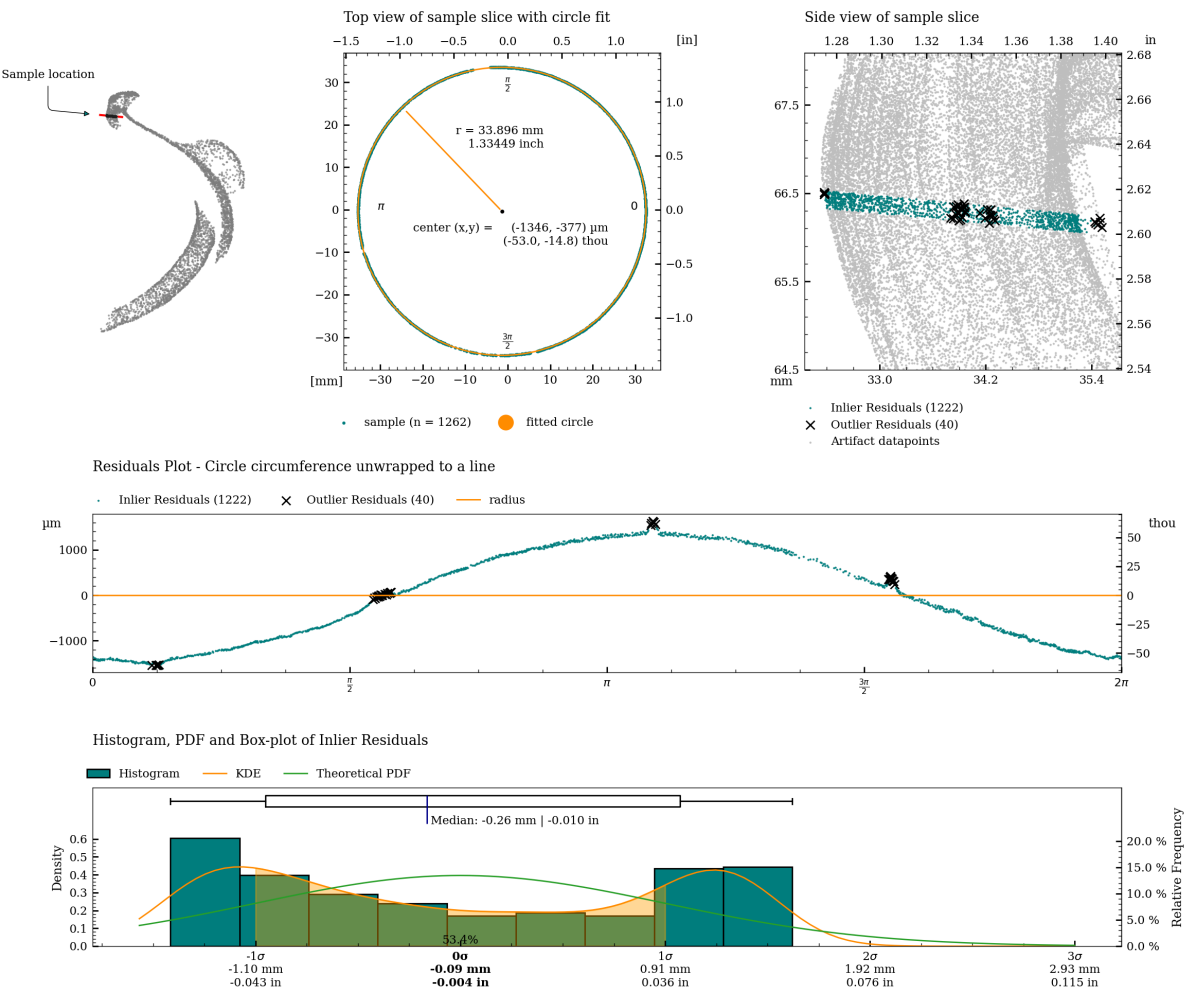


Figure 38: Detailed plot of concentricity measurement for c05.



Concentricity analysis of c05\_s

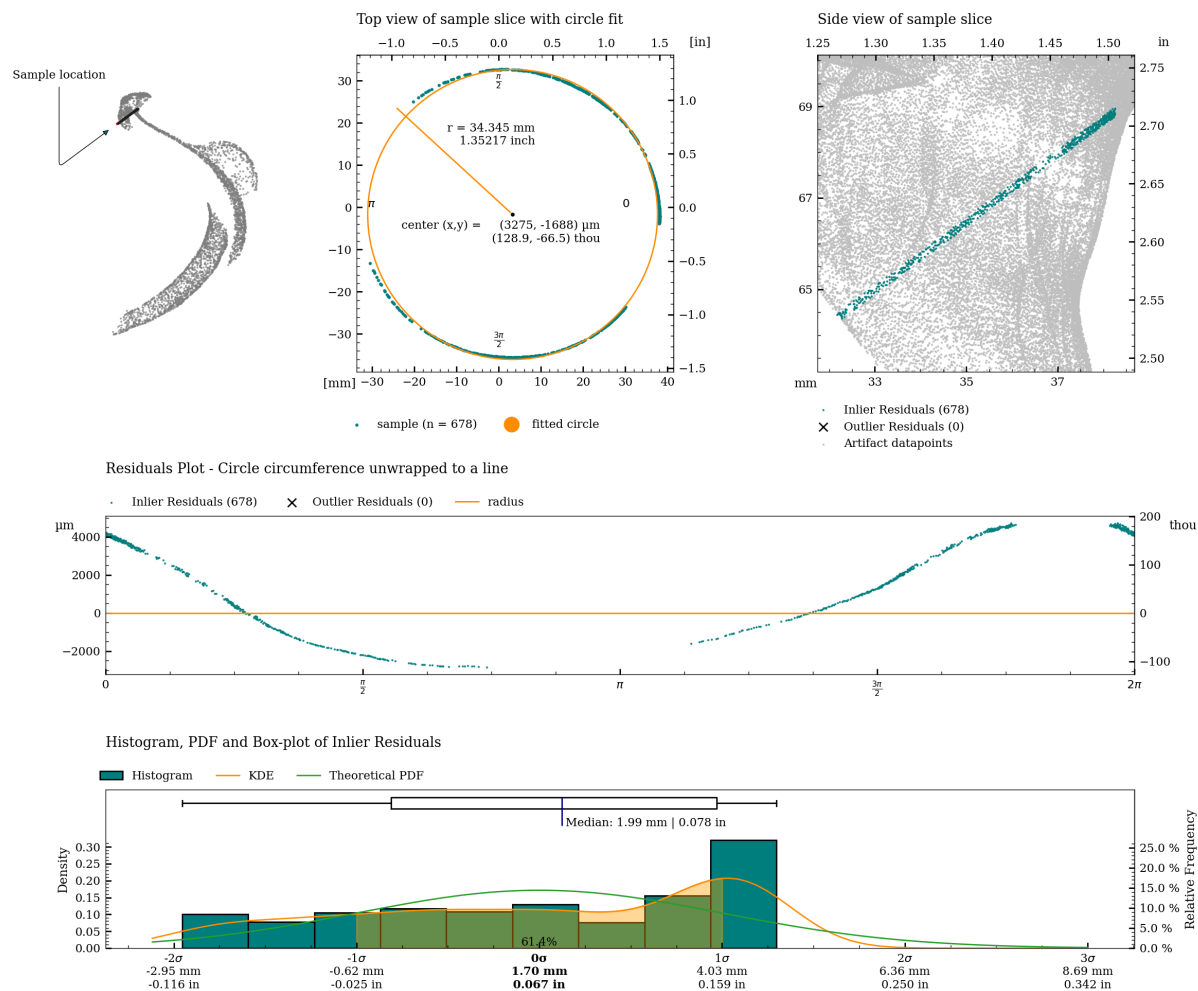


Figure 39: Detailed plot of concentricity measurement for c05\_s.

Concentricity analysis of c06

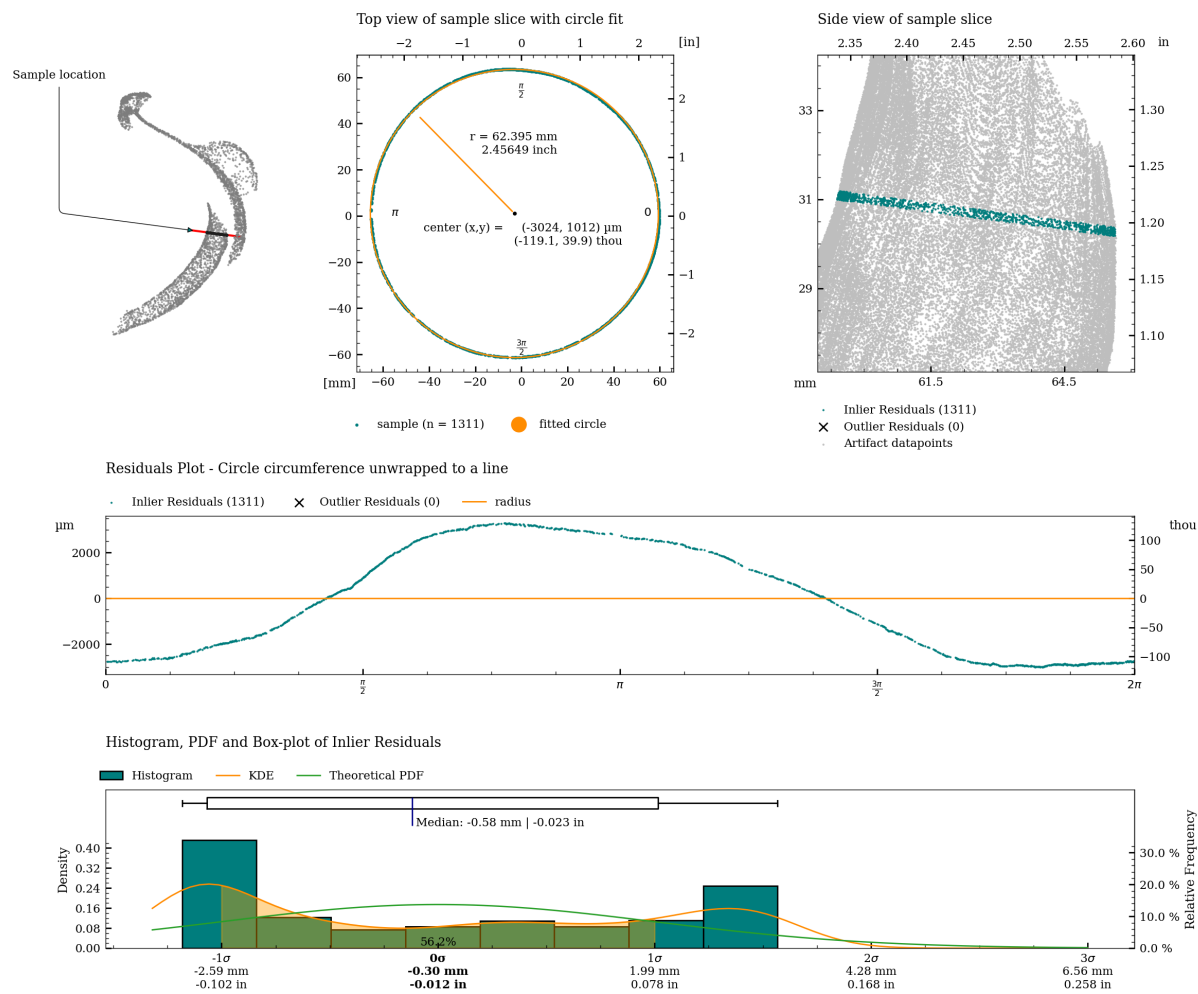


Figure 40: Detailed plot of concentricity measurement for c06.

Concentricity analysis of c06\_s

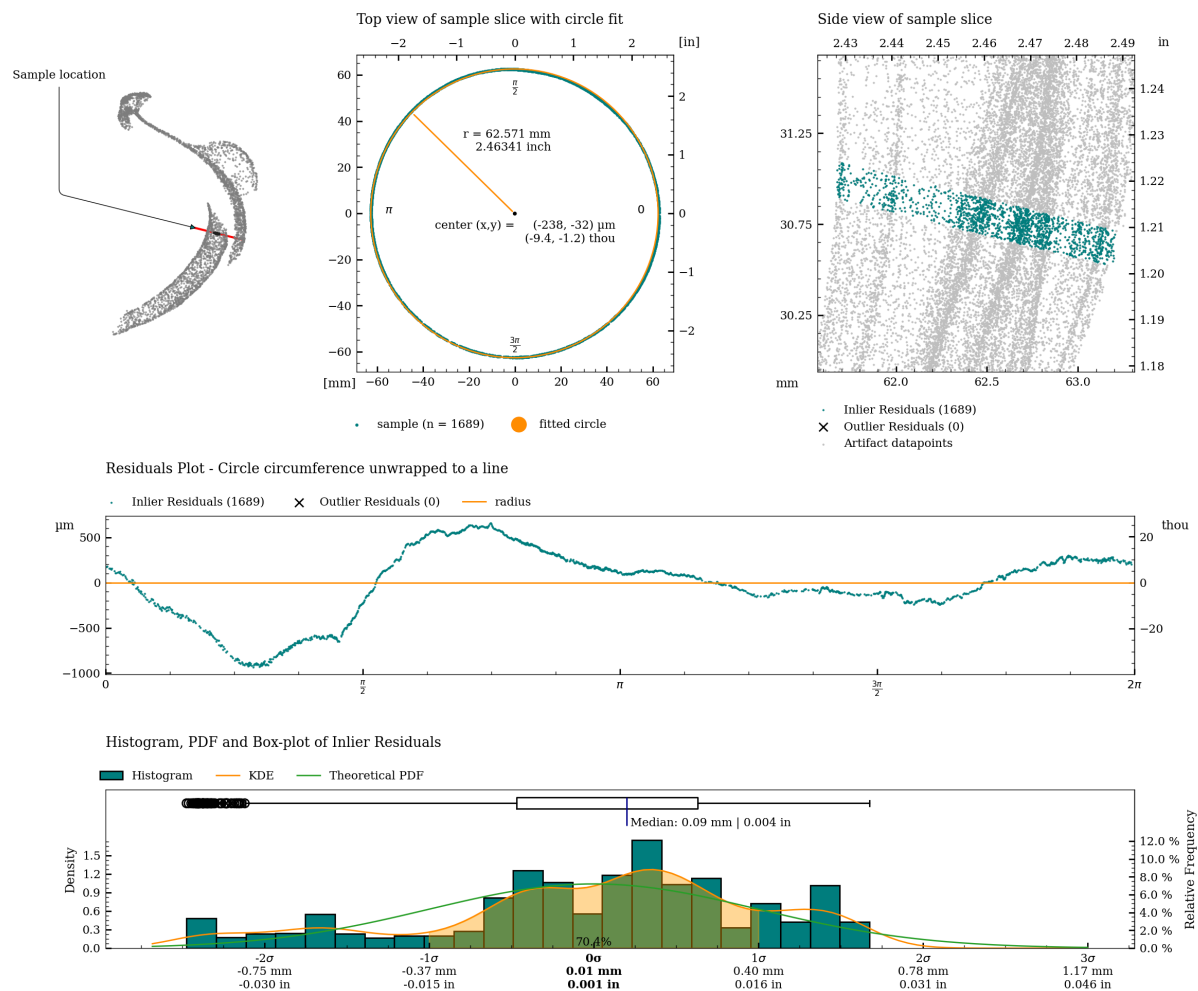


Figure 41: Detailed plot of concentricity measurement for c06\_s.

Concentricity analysis of c07

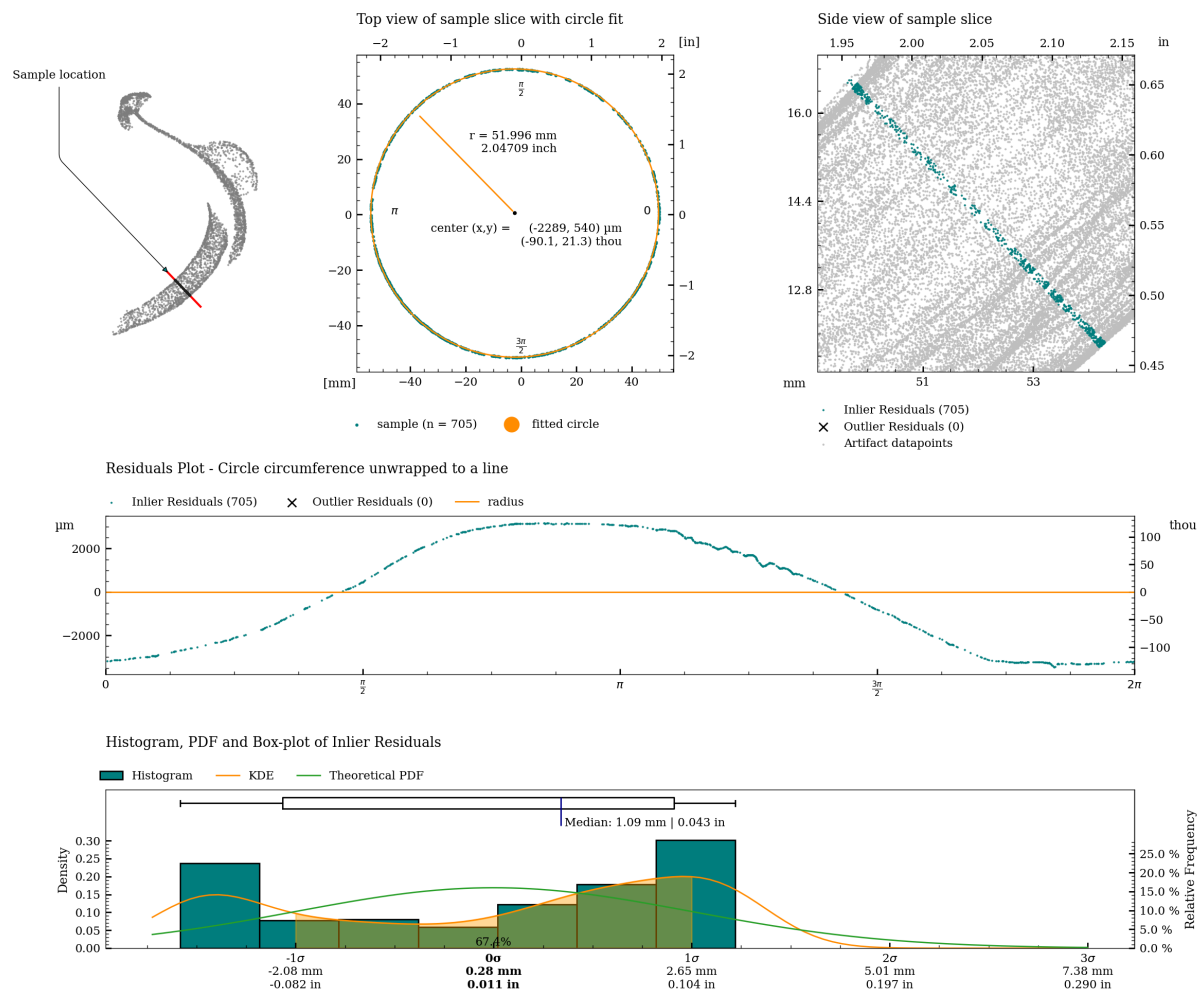


Figure 42: Detailed plot of concentricity measurement for c07.

Concentricity analysis of c07\_s

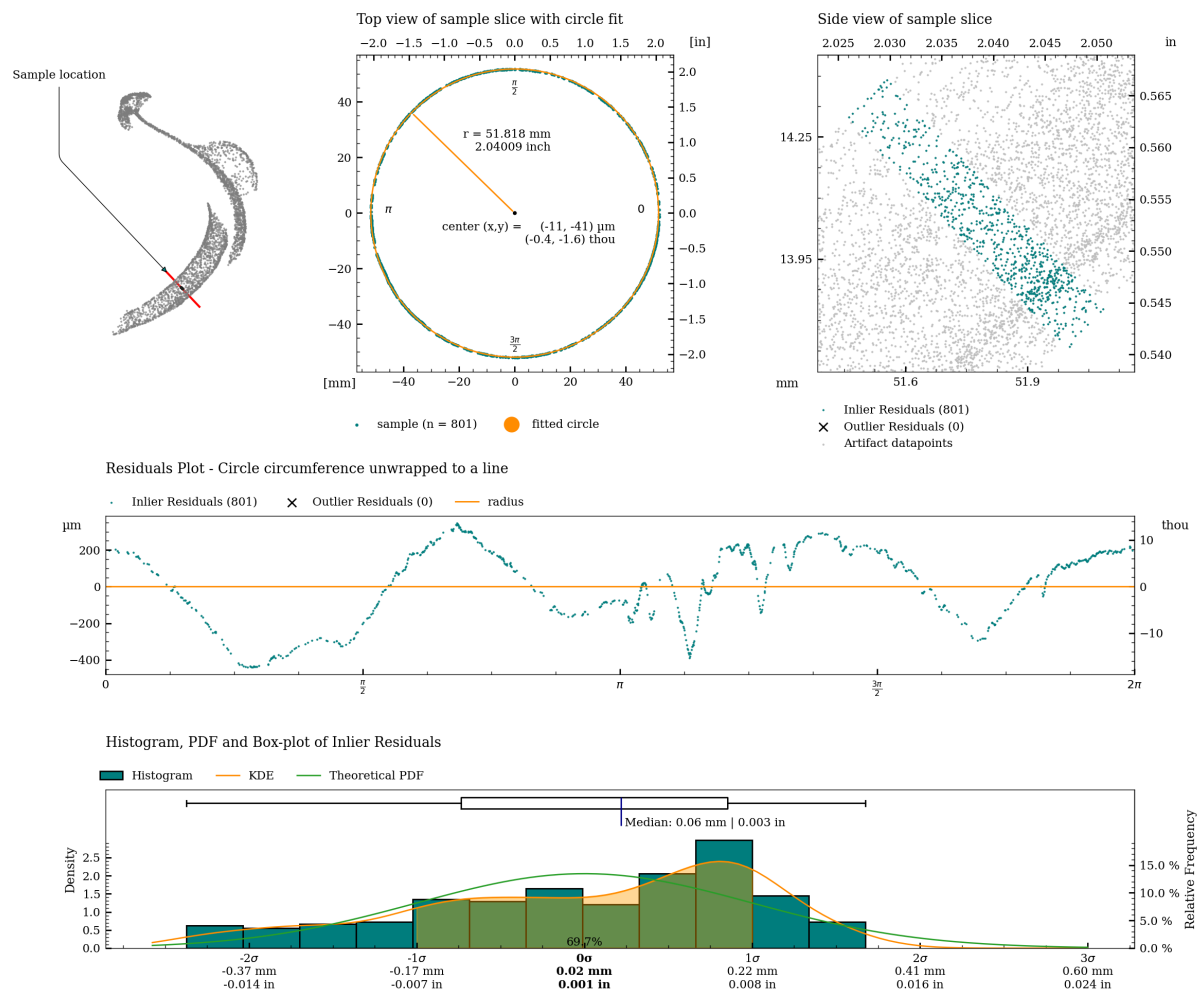


Figure 43: Detailed plot of concentricity measurement for c07\_s.

# Coaxiality

Coaxiality refers to the straightness and consistency of a central line running through the center of the vase. It measures how aligned the core of the vase remains along its vertical axis.

The coaxiality measurements are calculated using RANSAC (Random sample consensus) algorithm for outlier detection on least squares circle regression on cross-sections of the vessel (excluding potential handles), to estimate the best fit circle centers for each slice of the vessel. A best-fit line connects these centers, showing whether the vessels’s shape twists or remains straight. This concept helps describe the symmetry and structural uniformity in a visual and analytical way.


Coaxiality is measured for:

- The exterior surface (excluding handles)
- The interior surface

	Exterior		Interior		Interior separate	
Analyzed Slices	200		120		170	
Median sample size	391		266		818	
Slice Height	200 μm	7.9 thou	200 μm	7.9 thou	200 μm	7.9 thou
Statistics with Z-axis as Reference						
Median Absolute Deviation (MAD)	109 μm	4.3 thou	2823 μm	111.1 thou	80 μm	3.1 thou
Standard Deviation (SD)	83 μm	3.3 thou	818 μm	32.2 thou	980 μm	38.6 thou
Root Mean Square Deviation (RMSD)	156 μm	6.1 thou	2893 μm	113.9 thou	1072 μm	42.2 thou
Statistics with Best Fit Central Axis as Reference						
Best fit Central Axis Equation (in metric coordinate system with unit [mm])	x = 0.127 + t0.00090		x = -3.577 + t0.03037		x = -0.735 + t0.04272	
	y = -0.131 + t-0.00180		y = 1.159 + t-0.01868		y = 0.434 + t-0.02522	
	z = 0.000 + t-1.00000		z = 0.000 + t0.99936		z = 0.000 + t0.99877	
Axis tilt	0.052°		1.771°		2.506°	
Median Absolute Deviation (MAD)	94 μm	3.7 thou	580 μm	22.8 thou	371 μm	14.6 thou
Standard Deviation (SD)	60 μm	2.4 thou	240 μm	9.5 thou	298 μm	11.7 thou
Root Mean Square Deviation (RMSD)	119 μm	4.7 thou	633 μm	24.9 thou	526 μm	20.7 thou

Table 4: Coaxiality analysis of vessel MV024.

Coaxiality plots, exterior surface

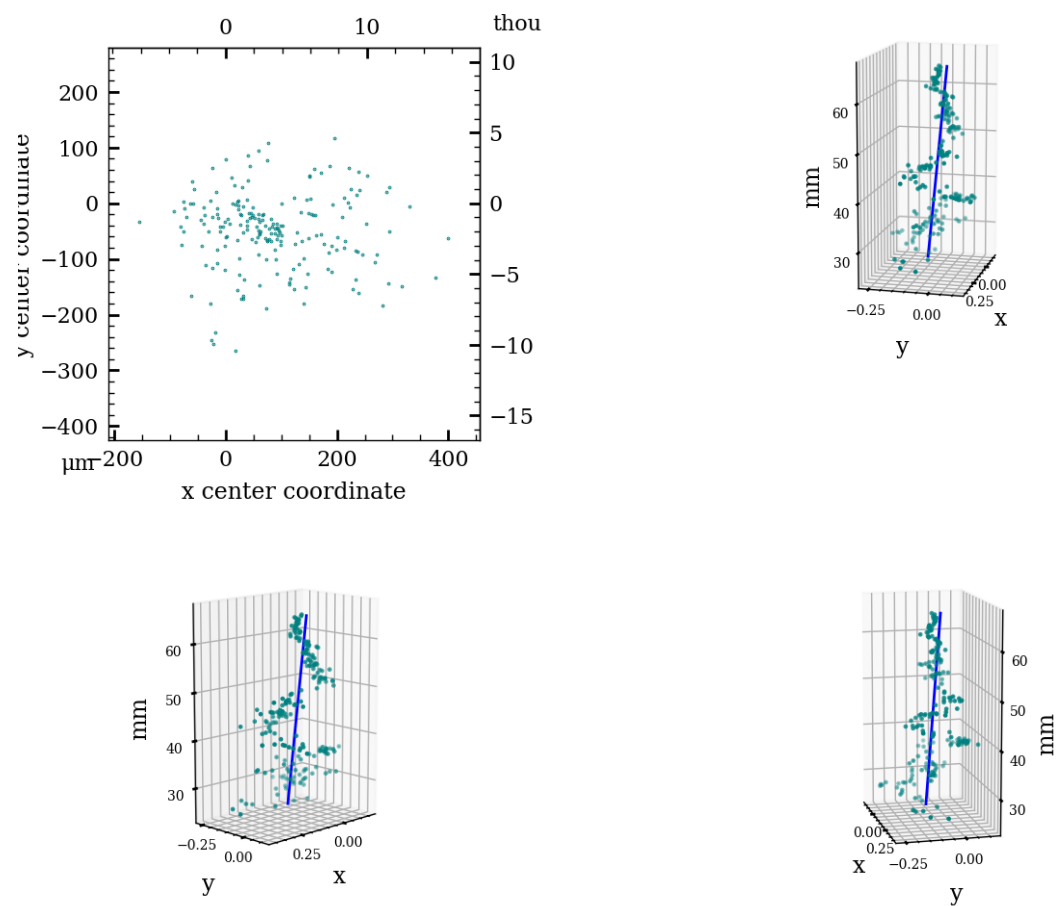

Coaxiality residuals from fitted axis, exterior surface


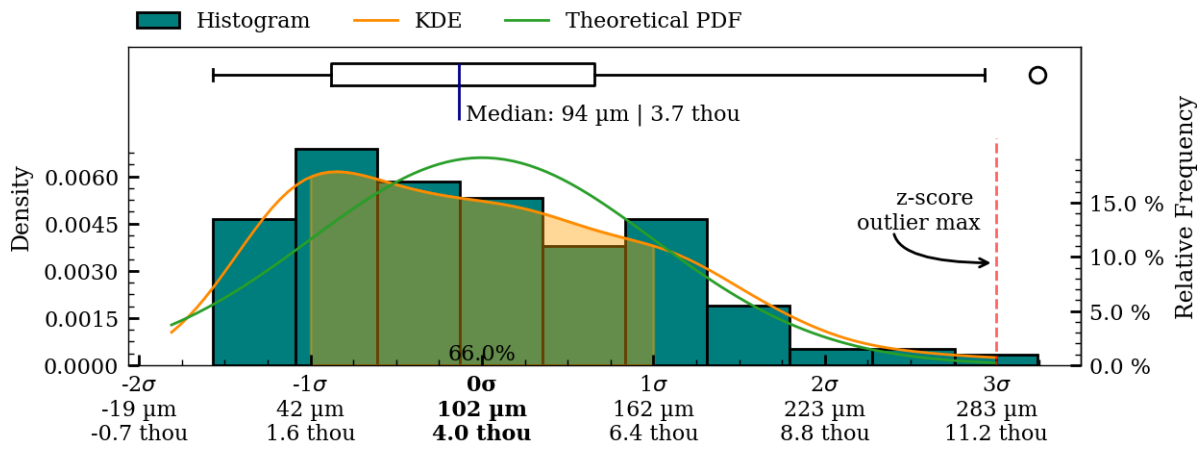


Figure 44: Coaxiality residual plots of exterior surface, MV024.

Coaxiality plots, interior surface

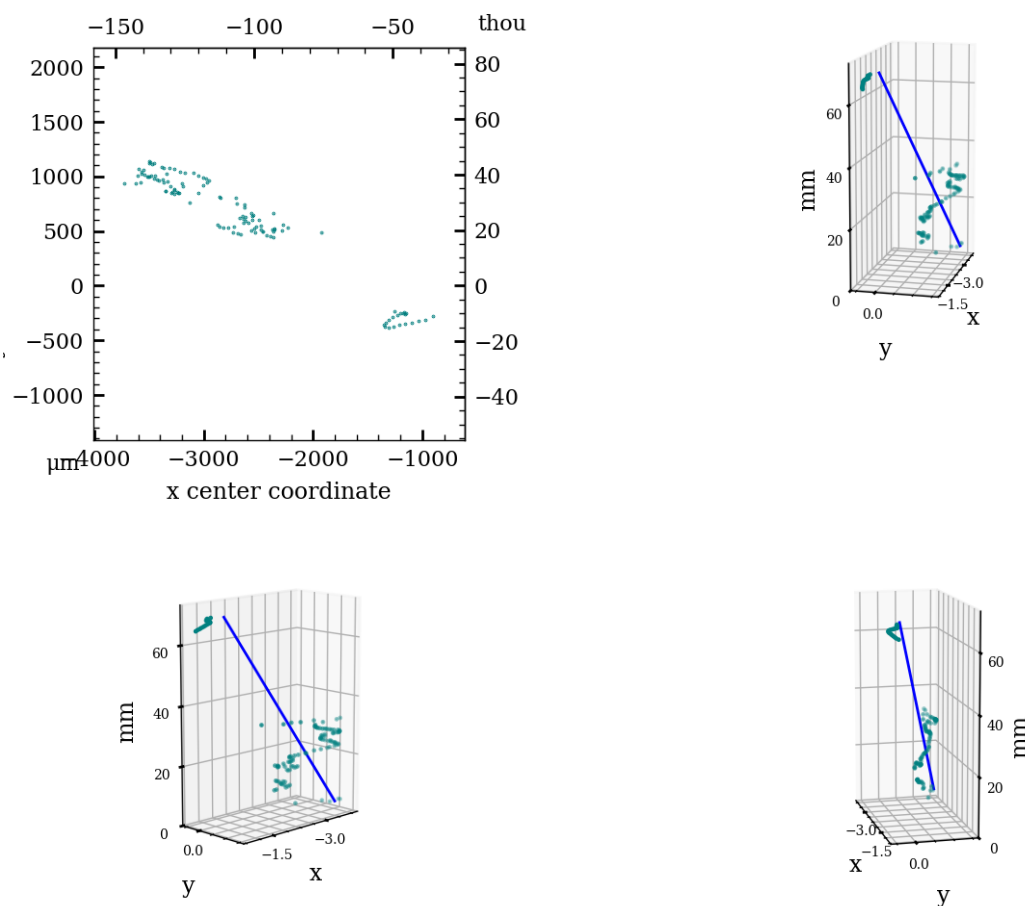

Coaxiality residuals from fitted axis, interior surface


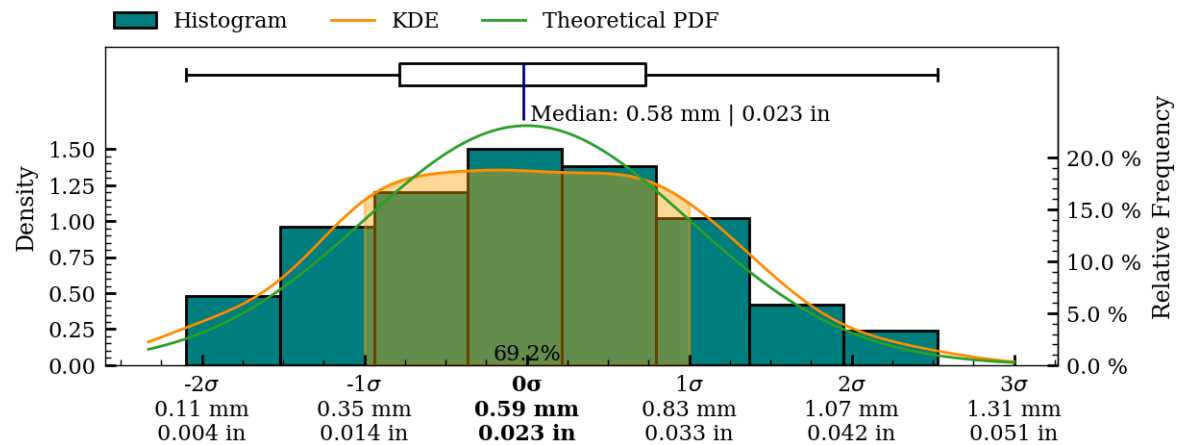


Figure 45: Coaxiality residual plots of interior surface, MV024.



Coaxiality plots, interior separately aligned surface

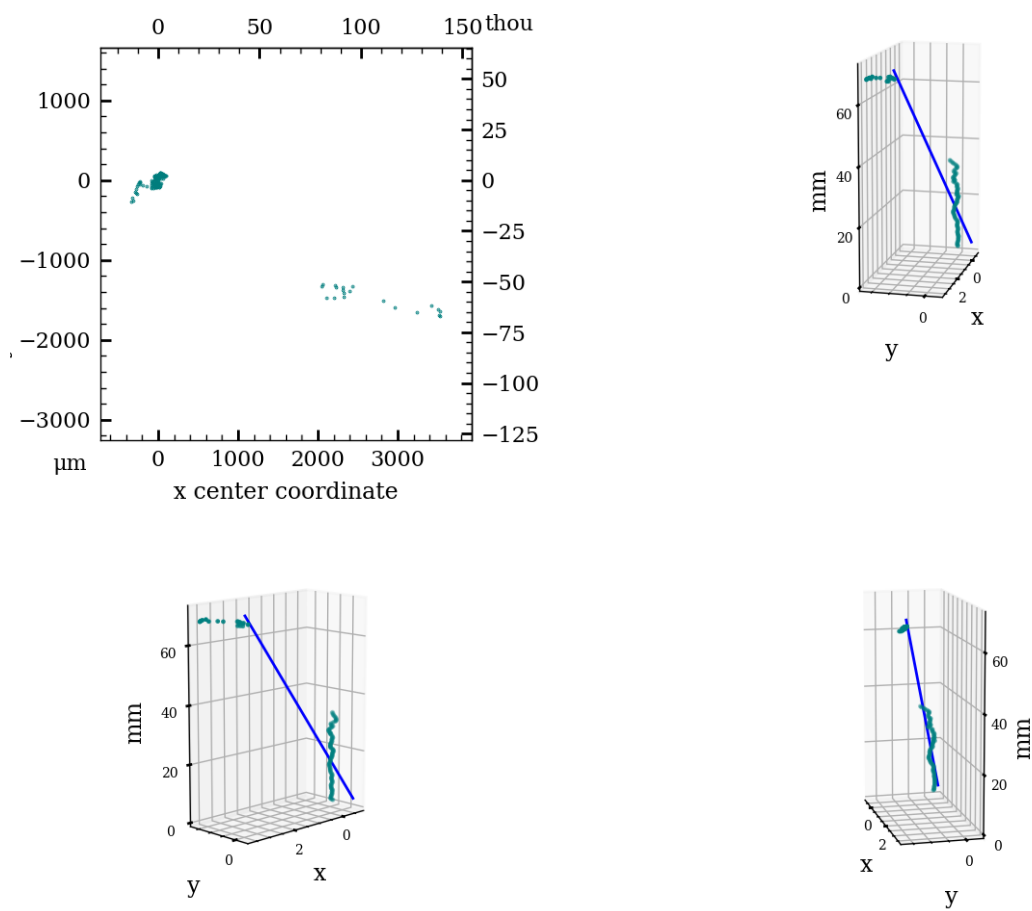

Coaxiality residuals from fitted axis, interior separately aligned surface

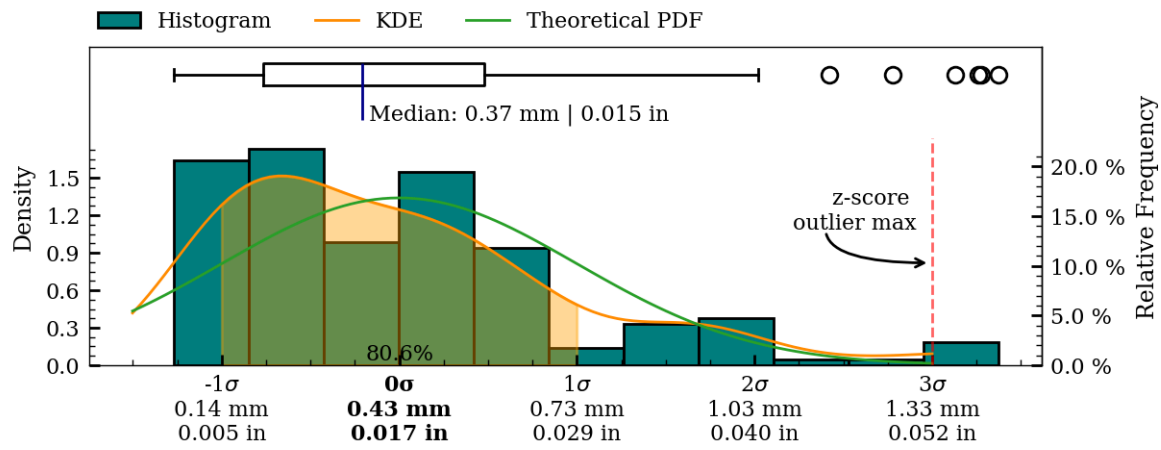


Figure 46: Coaxiality residual plots of interior\_separate surface, MV024.

## Surface Variability

To illustrate the overall surface deviations of the object, a surface variability heatmap has been created. This heatmap provides an accessible overview of the topography of the manufacturing precision and surface structure of the object.

The surface variability measurements are created by fitting a number of higher-order polynomials to the two-dimensional folded profile of the scan data. This process creates an idealized mathematical representation of actual surface curvature of object, and as such provides a continuous model representation of the actual object. It is important to note that only such a non-discretized representation is sufficient to avoid introducing inconsistently varying errors in the mapping of the final surface deviation results, that the rendered heatmaps are based on.

To produce the final surface variability map, the distance from each scanned vertex to the fitted polynomial is calculated and used as the mapping function input, for applying colours to the surface of the object.

It is important to note that this variability map does not describe deviations from the original *intended* shape of the artifact (if any), as this shape (the *intended design*, so to speak) will have been lost to time. It does however provide a very informative visualization of the texture and structure of the surface and very importantly, *does* highlight potential manufacturing-relevant patterns in the surface texture (if present). Such patterns are, as an example, clearly evident on the interior surface of artifact PV001.

Exterior surface

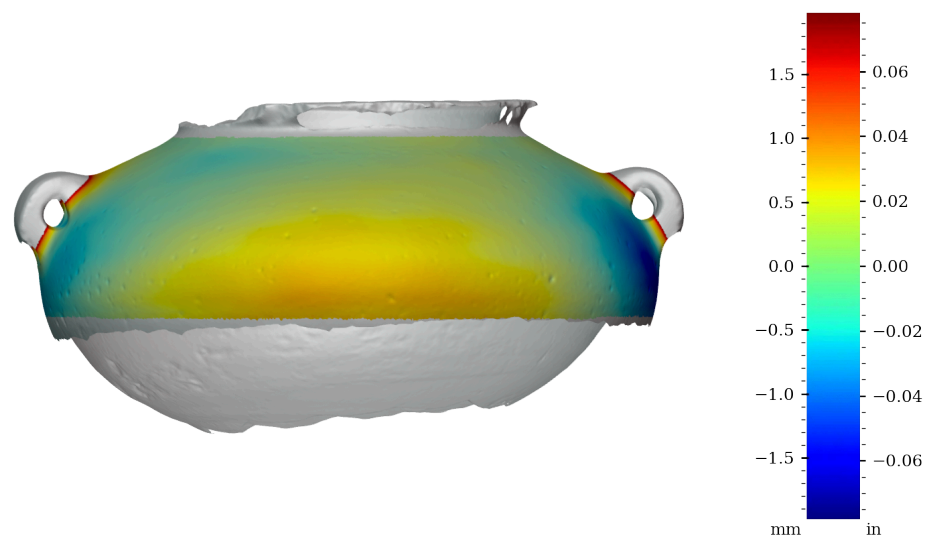


Figure 47: Surface variability heatmap of MV024, front view

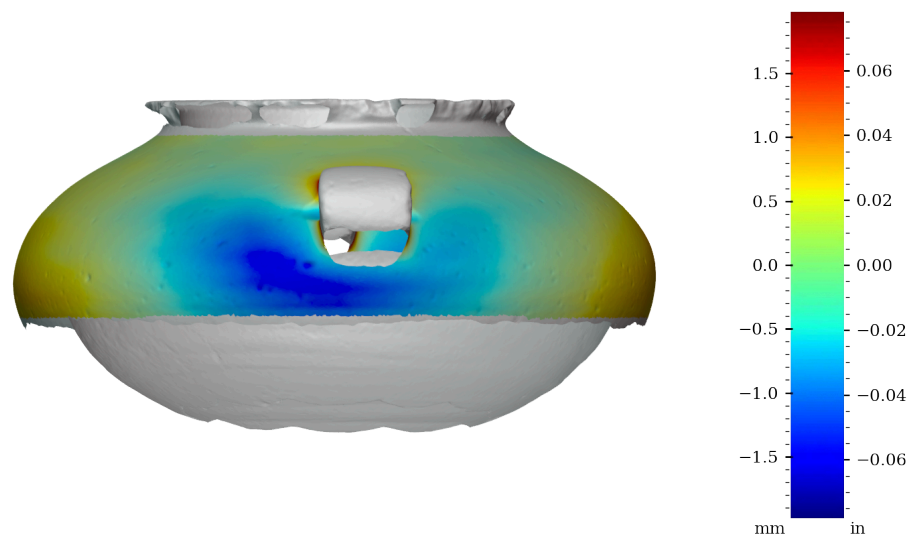


Figure 48: Surface variability heatmap of MV024, rotated 90°

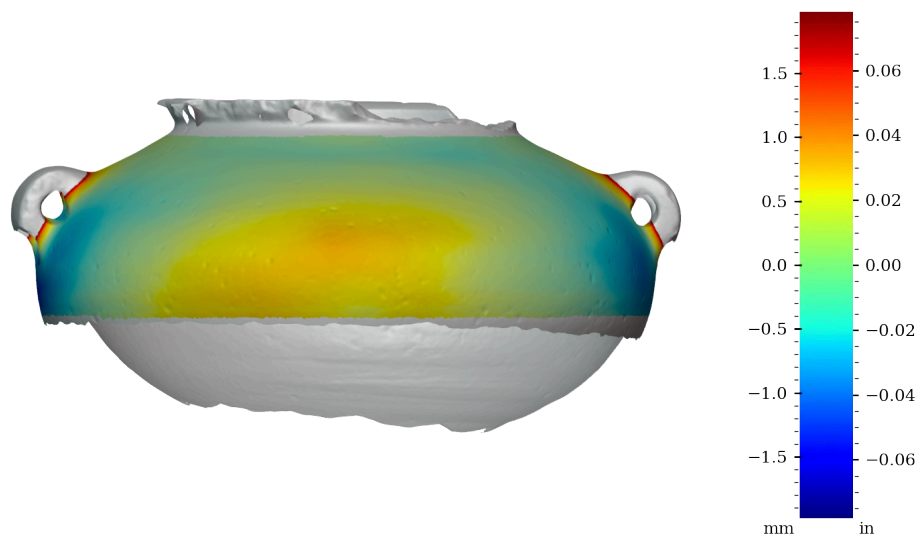


Figure 49: Surface variability heatmap of MV024, rotated 180°

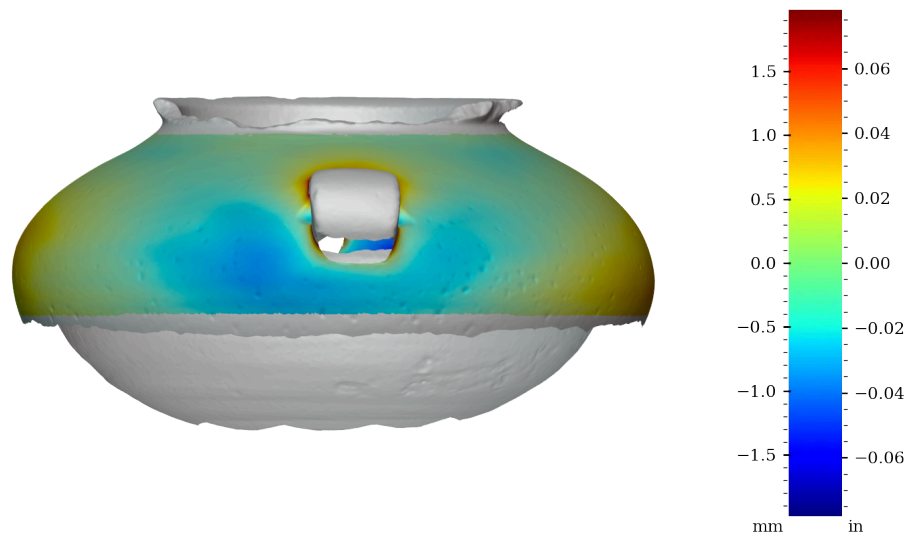


Figure 50: Surface variability heatmap of MV024, rotated 270°

Interior surface

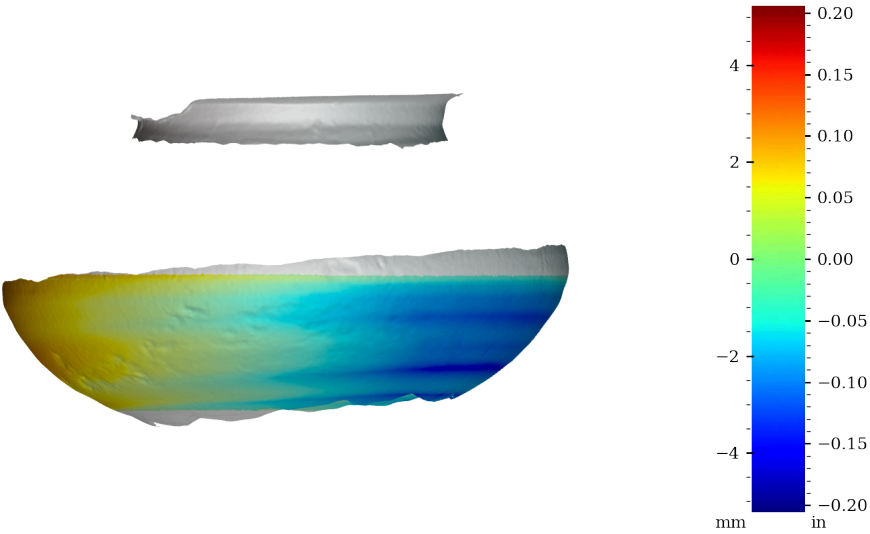


Figure 51: Surface variability heatmap of MV024, front view

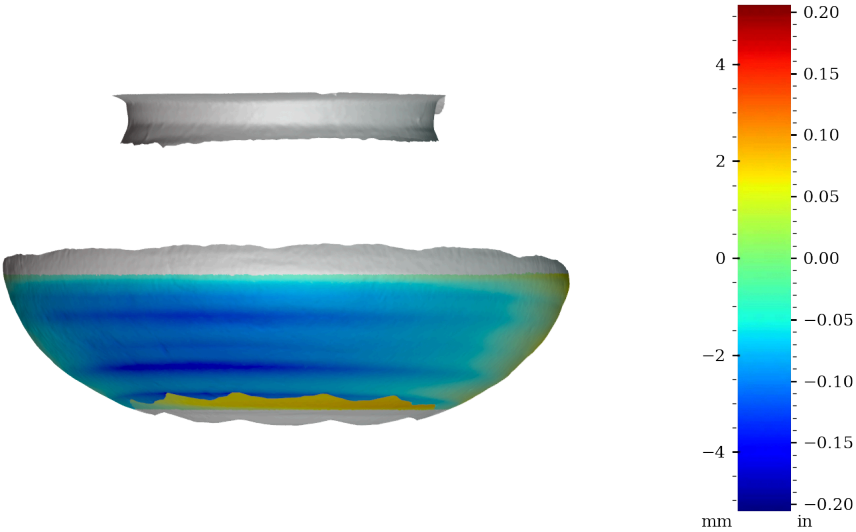


Figure 52: Surface variability heatmap of MV024, rotated 90°

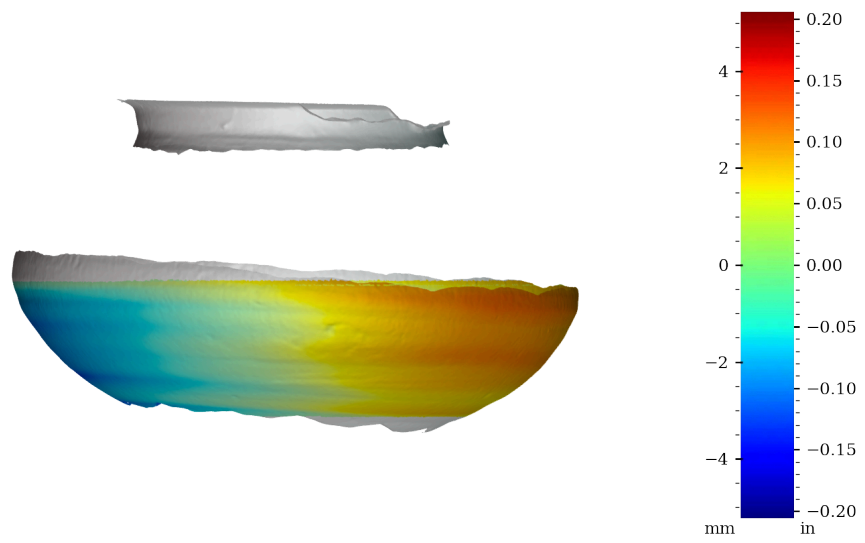


Figure 53: Surface variability heatmap of MV024, rotated 180°

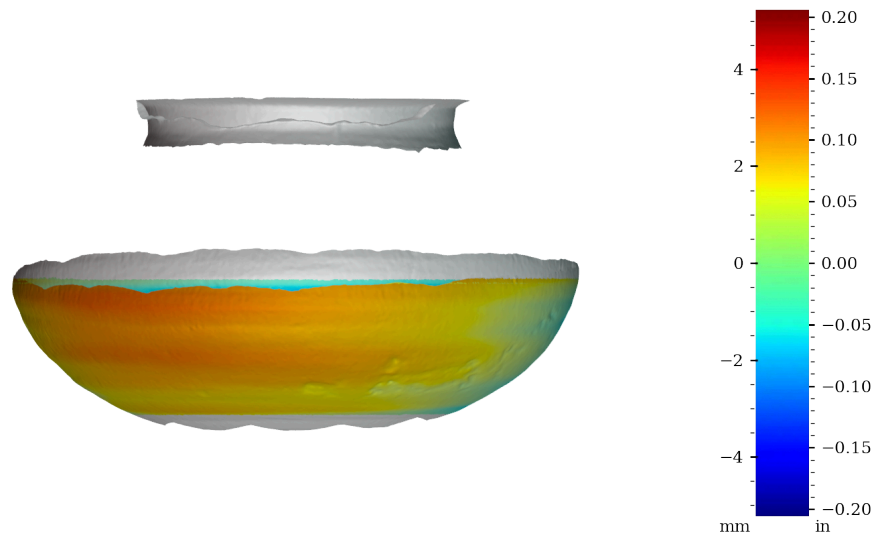


Figure 54: Surface variability heatmap of MV024, rotated 270°

Interior surface aligned separately

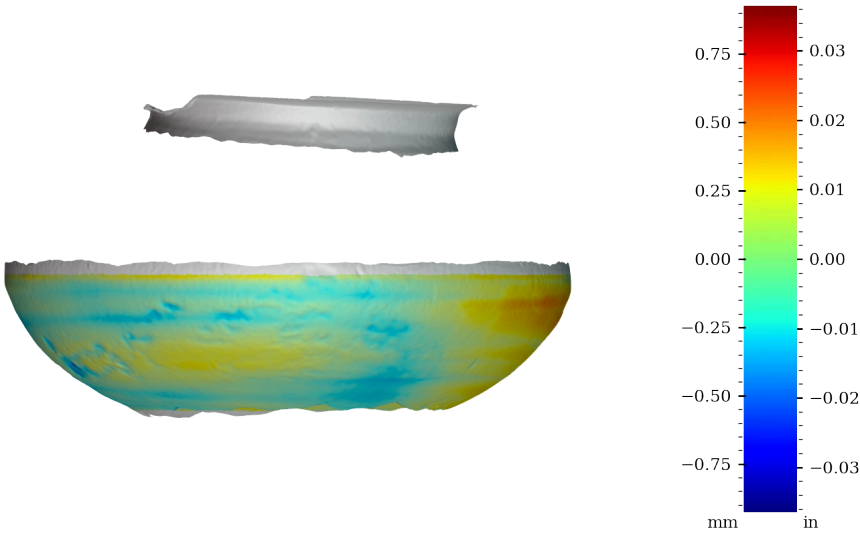


Figure 55: Surface variability heatmap of MV024, front view

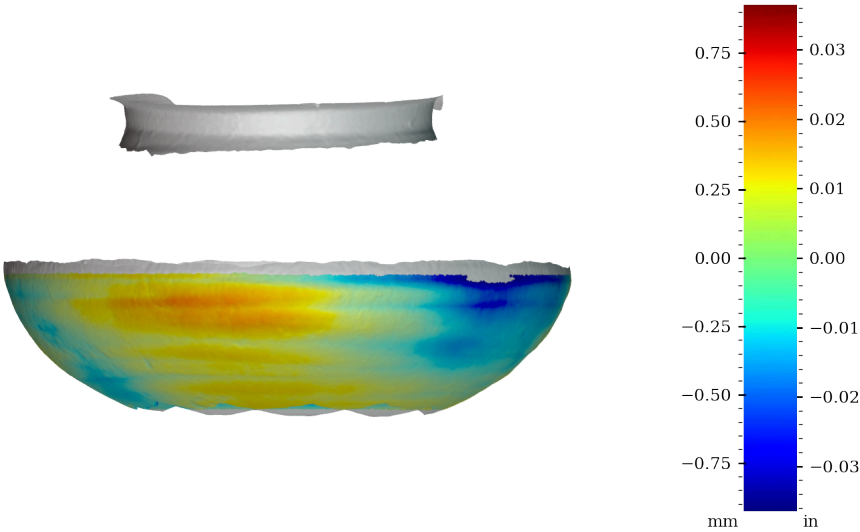


Figure 56: Surface variability heatmap of MV024, rotated 90°

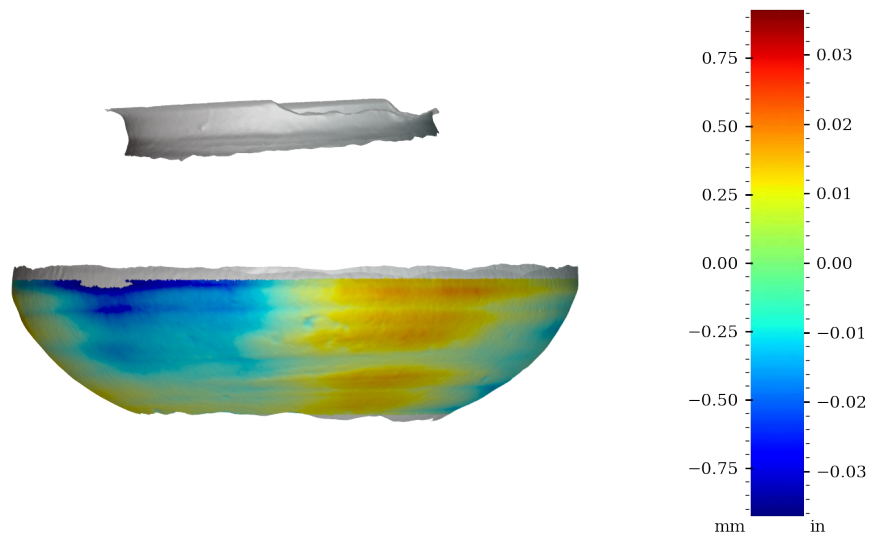


Figure 57: Surface variability heatmap of MV024, rotated 180°

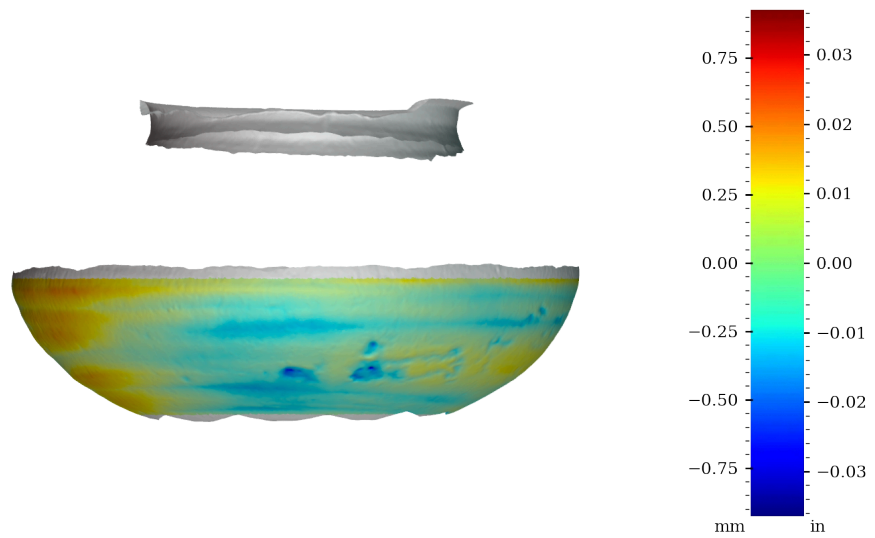


Figure 58: Surface variability heatmap of MV024, rotated 270°



## Surface variability statistics

Area	MSD	RMSD	SD	Median AD	Range	Min	Max	Sample size
	mm <sup>2</sup>	mm	mm	mm	mm	mm	mm	
Exterior	0.5433	0.737	0.443	0.341	3.405	-1.982	1.423	140737
Interior	5.4975	2.345	1.057	0.889	9.081	-5.211	3.870	212249
Interior separate	0.0703	0.265	0.157	0.100	1.703	-1.059	0.644	222773
	in <sup>2</sup>	in	in	in	in	in	in	
Exterior	0.000842	0.0290	0.0175	0.0134	0.1341	-0.0781	0.0560	140737
Interior	0.008521	0.0923	0.0416	0.0350	0.3575	-0.2051	0.1524	212249
Interior separate	0.000109	0.0104	0.0062	0.0039	0.0671	-0.0417	0.0254	222773

Table 5: Surface variability statistics, MV024

Table 5 shows the statistics of the distance from the scan vertices to the best fit object model. These statistics are briefly explained below.

### Histogram, KDE and Box-plot of measured surface variability - exterior surface

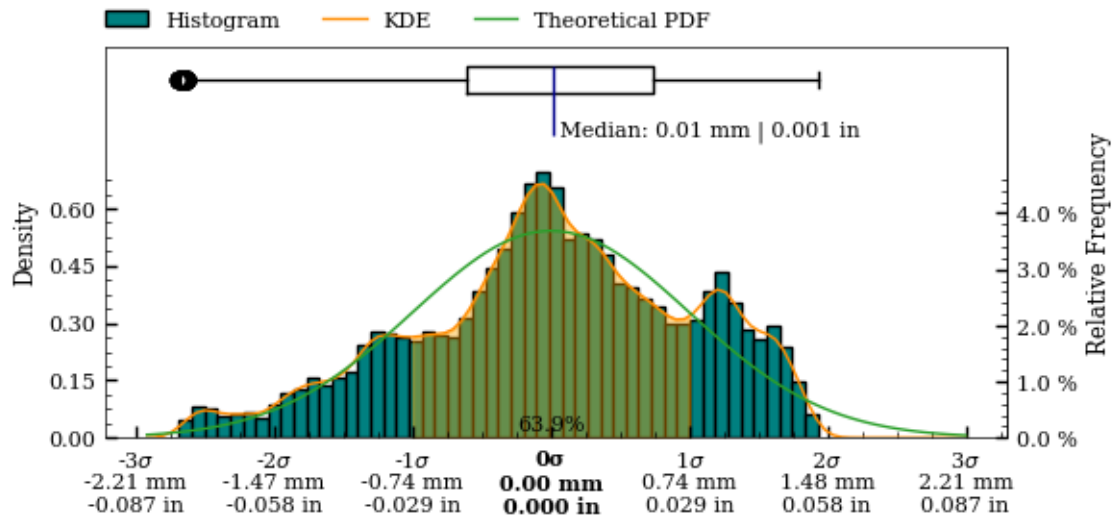


Figure 59: Exterior surface variability boxplot, kds and histogram.

### Histogram, KDE and Box-plot of measured surface variability - interior surface

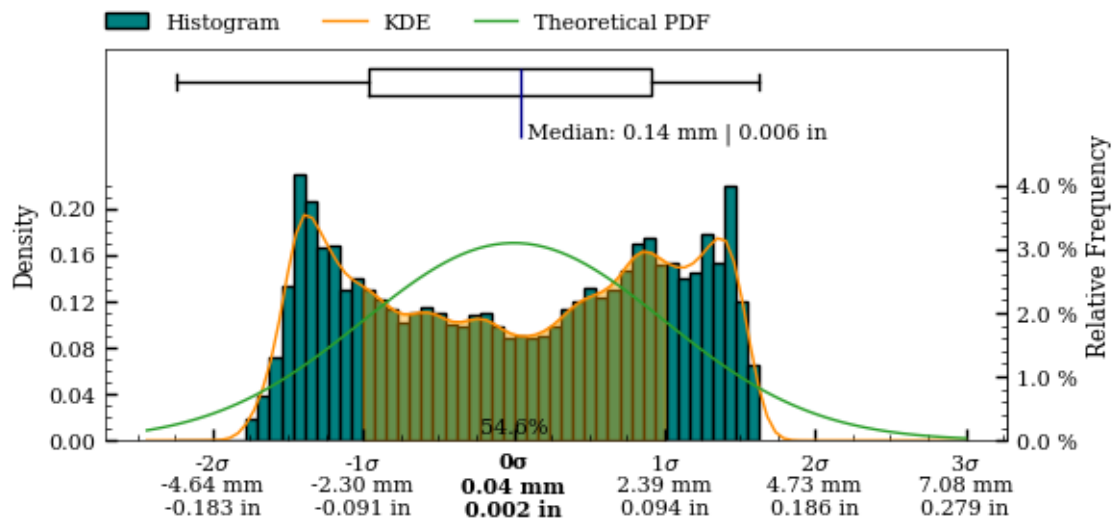


Figure 60: Interior surface variability boxplot, kds and histogram.

Histogram, KDE and Box-plot of measured surface variability - interior separately aligned surface

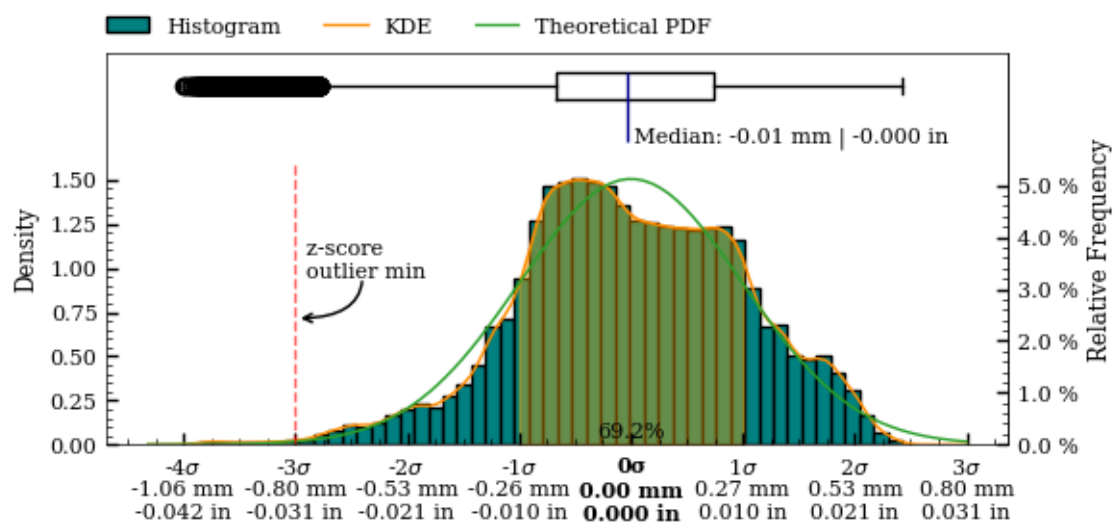


Figure 61: Interior separately aligned surface variability boxplot, kds and histogram.

## Precision Score Of The Artifact

To enable valid comparison of the manufacturing precision of different artifacts, a metric that robustly quantifies the overall precision of the object is required. The considerations for such a metric will be explored in this section.

Based on these considerations, a *Precision Score* metric will be defined.

For an object to be described as having been manufactured with high precision, several qualities must be present *concurrently*, and throughout the *entire* geometry of the final object. A given object may exhibit high levels of one or more *components* of precision, but be lacking in others. For example:

- An object may present high levels of coaxiality, but lack circularity.
- An object may exhibit good circularity, but show imperfections in the surface structure.
- An object may be smoothed to perfection *without* any circularity or coaxiality.
- An object may exhibit high levels of all of the above metrics in *some* areas, but not in others.

Therefore, a precision score metric **must** account for *all* aspects of the individual, underlying precision metrics (circularity, concentricity, coaxiality and surface variability) throughout the *entire* surface area of the object.

The composite high order polynomial model, used to generate the surface variability map (described in Surface Variability, p. 46) is the best continuous mathematical representation of the object available to us (lacking any original design plans, as would normally be available in metrological analysis). This idealized model encompasses all of the above component metrics.

In the creation of the model, all scan data-points are taken into account (excluding areas with extensive damage), making it the best possible idealized representation we can achieve. When this model has been accurately created, the deviation between the model and the scanned data-points can be calculated over the non-discretized polynomials, *without* the need for an “original” CAD model (and importantly, unless such a CAD model *actually* corresponded to the original design intent, it would be an insufficient comparison basis).

Within the context of defining a valid, overall precision metric, this approach satisfies the incorporation of all of the necessary metrics:

- **Circularity:** Because the reconstructed polynomial model is revolved around the Z-plane, the idealized representation is perfectly circular, and thus incorporates the circularity component.
- **Concentricity and coaxiality:** Because the Z-axis (datum axis) is the center axis of the model, it incorporates the concentricity and coaxiality components.
- **Surface variability:** Because the model is continuous and non-discretized, it can be used accurately for all points of the scan data, and incorporates the surface variability component.

The level of precision ultimately achieved in a physical object does not share a linear relationship with its manufacturing requirements. Since continuously higher levels of final precision becomes progressively harder to achieve, an overall precision metric must take this relationship into account.

A robust statistical metric that satisfies this requirement is the *Mean Squared Deviation* (MSD or MSE). Here specifically, we can utilize the mean square of the deviations between the model ( $\hat{y}$ ) and the data-points ( $y_i$ ).

Combining all of the above considerations, we can express a well-defined *Precision Score* metric, that provides an immediately accessible way to understand the overall precision of an object, while being statistically valid. Since the Mean Squared Deviation tends towards zero as the overall precision increases, the inverse of the Mean Squared Deviation is taken to obtain a precision score metric that increases as precision increases<sup>12</sup>:

$$\text{Precision Score} = \frac{n}{\sum_{i=1}^n (y_i - \hat{y})^2}$$

---




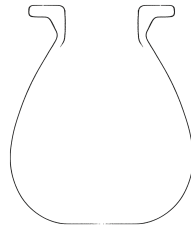






<sup>12</sup>The precision score unit is  $\frac{1}{\text{mm}^2}$

The precision score of MV024 have been calculated separately for:

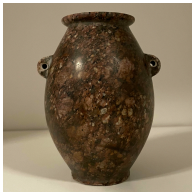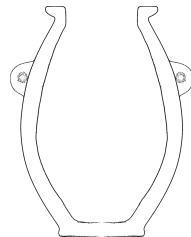- Precision score, exterior surface: 1.84
- Precision score, separately aligned interior surface: 14
- Precision score, interior surface: 0.18
- Precision score, full surface: 4

The precision score of a Zeiss 1.00000 inch reference sphere have been calculated to 43,943 (RMSE = 0.00477 mm / 0.00010 in). The scan was obtained by Max Fomitchev-Zamilov using a Keyence VL –500 scanner with a rated accuracy of 10 microns. The precision analysis of the reference sphere scan indicates at the maximum possible precision score obtainable.

Table 6 shows the precision score of this artifact (MV024), compared to the two most precise, and the two least precise vessels currently analyzed.

Artifact		Material	Precision Score	Link to Report
		PV001 Red Granite	<b>1980</b>  Full: 1177 Exterior: 1980 Interior separate: 798 Interior: 722	Report Publication
		PV006 Dark grey granite	<b>621</b>  Full: 610 Exterior: 621 Interior separate: 479 Interior: 152	Report Publication
		MV024 Basalt	<b>1.84</b>  Full: 4 Exterior: 1.84 Interior separate: 14 Interior: 0.18	Report Publication
		RV003 Marble breccia	<b>1.46</b>  Full: 1.49 Exterior: 1.46 Interior separate: 1.53 Interior: 0.54	Report Publication
		MV010 Calcite (Egyptian Alabaster)	<b>1.17</b>  Full: 1.32 Exterior: 1.17 Interior separate: 11 Interior: 0.17	Report Publication

# Analysis Roadmap

While the current iteration of this work already provides valuable results, continued future additions and improvements will enhance their utility further. This section details planned iterative updates and improvements, to both the reports themselves, and to the underlying methodology and software they are created with.

## Alignment Section

- Detailed exploration of different circle regression algorithms
- If handles are present on the vessel, exploring alignment of the vessels so the handle positions match each other
- Add optimization of the perpendicular surface deviation, with the best results of the coaxial alignment
- Align by minimizing circularity results (of rotated sample slice, to compensate for sample height distortions)

## Measurements of Precision

- Section detailing how measurements perpendicular to the surface curvature are obtained
- Detailed surface area analysis, exploring the residual patterns throughout subsequent sample slices of the artifact surface
- Wall thickness deviation color map
- Robust outlier identification on circularity, to better handle analysis of damaged areas of the artifacts in addition to removal of interior crystalline structure points present in CT scans
- Layout updates to the charts and tables

## Visibility of Outliers and Damaged Sections

- Identification and marking of damaged parts
- Visualization of outliers on the artifact surface

## Exploration of Mathematical Primitives

- Analysis of selected curvatures and flat surfaces on the vessel in both the horizontal and vertical planes
  - Circles
  - Parabolas
  - Ellipsoids
  - Hyperbolas
  - Cones
- Implementation of robust regressions models suitable for this domain, based on RANSAC.

## Metrics on Primary Features

- Measurements of features in the horizontal plane
- Measurements of features in the vertical plane
- Measurements of angles
- Measurements of volume

## Exploration of Potential Design Ratios

- $\pi$ ,  $\varphi$ ,  $e$ , 1, 2, 3, 4 etc.

## Raw Dataset Attachments

- Including all measurement and sample coordinates as CSV-files embedded in the report
- Including an STL file of the aligned object alongside the report, for easier external replication and validation of the research results

## Appendix A - Comparison Of Circularity Measurements (Z-plane vs. surface-perpendicular)

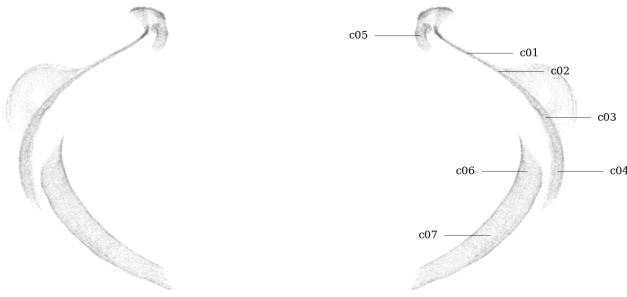


Figure 62: Circularity measurement sample locations, full mesh aligned to exterior surface



Figure 63: Circularity measurement sample location, separately aligned interior mesh

### Samples perpendicular to the surface curvature

Tag	Area	Measured deviation <sup>8</sup>	Residuals				Sample size	Slice		
			Range	RMSD <sup>9</sup>	MAD <sup>10</sup>	SD		Height	Z coord.	Radius <sup>11</sup>
		mm	mm	mm	mm	mm		mm	mm	mm
c01	exterior	Ø92.259±0.506	0.807	0.195	0.073	0.122	176	0.200	61.728	46.130
c02	exterior	Ø108.626±0.405	0.807	0.227	0.095	0.117	144	0.200	56.919	54.313
c03	exterior	Ø133.219±1.689	2.899	0.757	0.238	0.348	539	0.200	44.837	66.610
c04	exterior	Ø139.726±1.924	3.338	0.986	0.363	0.488	818	0.200	30.773	69.863
c05	interior	Ø67.729±1.663	3.172	1.005	0.310	0.426	1262	0.200	66.292	33.865
c05_s	interior sep.	Ø69.505±4.399	7.570	2.704	1.251	1.365	678	0.200	66.292	34.753
c06	interior	Ø123.726±3.815	6.295	2.300	0.752	0.980	1311	0.200	30.773	61.863
c06_s	interior sep.	Ø125.125±0.927	1.593	0.385	0.135	0.231	1689	0.200	30.773	62.562
c07	interior	Ø104.222±3.542	6.633	2.374	0.740	0.976	705	0.200	14.036	52.111
c07_s	interior sep.	Ø103.599±0.427	0.786	0.197	0.070	0.101	801	0.200	14.036	51.800

Table 7: Detailed circularity measurements at selected samples in z-plane, vessel MV024.

### Samples in the Z-plane

Tag	Area	Measured deviation <sup>8</sup>	Residuals				Sample size	Slice		
			Range	RMSD <sup>9</sup>	MAD <sup>10</sup>	SD		Height	Z coord.	Radius <sup>11</sup>
		mm	mm	mm	mm	mm		mm	mm	mm
c01	exterior	Ø92.408±1.300	2.036	0.437	0.184	0.277	865	0.200	61.728	46.204
c02	exterior	Ø108.537±0.940	1.680	0.419	0.161	0.220	579	0.200	56.919	54.269
c03	exterior	Ø133.159±1.954	3.509	0.898	0.278	0.407	707	0.200	44.837	66.580
c04	exterior	Ø139.560±1.846	3.341	1.004	0.357	0.492	847	0.200	30.773	69.780
c05	interior	Ø67.750±1.619	3.098	0.988	0.292	0.416	1226	0.200	66.292	33.875
c05_s	interior sep.	Ø70.140±3.824	6.654	2.100	0.885	1.017	882	0.200	66.292	35.070
c06	interior	Ø122.975±4.106	6.277	2.331	0.773	1.080	1277	0.200	30.773	61.487
c06_s	interior sep.	Ø125.329±1.004	1.596	0.398	0.152	0.255	1817	0.200	30.773	62.665
c07	interior	Ø104.468±5.392	10.067	3.638	1.141	1.475	1650	0.200	14.036	52.234
c07_s	interior sep.	Ø103.761±1.196	1.632	0.315	0.103	0.190	1679	0.200	14.036	51.880

Table 8: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV024.

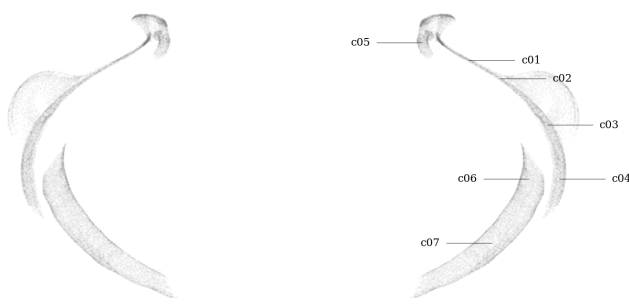


Figure 64: Circularity measurement sample locations, full mesh aligned to exterior surface



Figure 65: Circularity measurement sample location, separately aligned interior mesh

## Samples perpendicular to the surface curvature

Tag	Area	Measured deviation <sup>8</sup>	Residuals				Sample size	Slice		
			Range	RMSD <sup>9</sup>	MAD <sup>10</sup>	SD		Height	Z coord.	Radius <sup>11</sup>
		in	in	in	in	in		in	in	in
c01	exterior	Ø3.6323±0.0199	0.0318	0.0077	0.0029	0.0048	176	0.0079	2.4302	1.8161
c02	exterior	Ø4.2766±0.0159	0.0318	0.0089	0.0037	0.0046	144	0.0079	2.2409	2.1383
c03	exterior	Ø5.2448±0.0665	0.1142	0.0298	0.0094	0.0137	539	0.0079	1.7652	2.6224
c04	exterior	Ø5.5010±0.0757	0.1314	0.0388	0.0143	0.0192	818	0.0079	1.2115	2.7505
c05	interior	Ø2.6665±0.0655	0.1249	0.0396	0.0122	0.0168	1262	0.0079	2.6099	1.3333
c05_s	interior sep.	Ø2.7364±0.1732	0.2980	0.1065	0.0492	0.0537	678	0.0079	2.6099	1.3682
c06	interior	Ø4.8711±0.1502	0.2478	0.0906	0.0296	0.0386	1311	0.0079	1.2115	2.4356
c06_s	interior sep.	Ø4.9262±0.0365	0.0627	0.0151	0.0053	0.0091	1689	0.0079	1.2115	2.4631
c07	interior	Ø4.1032±0.1394	0.2611	0.0935	0.0291	0.0384	705	0.0079	0.5526	2.0516
c07_s	interior sep.	Ø4.0787±0.0168	0.0309	0.0078	0.0028	0.0040	801	0.0079	0.5526	2.0394

Table 9: Detailed circularity measurements at selected samples in z-plane, vessel MV024.

## Samples in the Z-plane

Tag	Area	Measured deviation <sup>8</sup>	Residuals				Sample size	Slice		
			Range	RMSD <sup>9</sup>	MAD <sup>10</sup>	SD		Height	Z coord.	Radius <sup>11</sup>
		in	in	in	in	in		in	in	in
c01	exterior	Ø3.6381±0.0512	0.0802	0.0172	0.0072	0.0109	865	0.0079	2.4302	1.8191
c02	exterior	Ø4.2731±0.0370	0.0661	0.0165	0.0063	0.0086	579	0.0079	2.2409	2.1366
c03	exterior	Ø5.2425±0.0769	0.1381	0.0354	0.0110	0.0160	707	0.0079	1.7652	2.6212
c04	exterior	Ø5.4945±0.0727	0.1315	0.0395	0.0141	0.0194	847	0.0079	1.2115	2.7472
c05	interior	Ø2.6673±0.0637	0.1220	0.0389	0.0115	0.0164	1226	0.0079	2.6099	1.3337
c05_s	interior sep.	Ø2.7614±0.1506	0.2620	0.0827	0.0349	0.0400	882	0.0079	2.6099	1.3807
c06	interior	Ø4.8415±0.1617	0.2471	0.0918	0.0304	0.0425	1277	0.0079	1.2115	2.4208
c06_s	interior sep.	Ø4.9342±0.0395	0.0628	0.0157	0.0060	0.0101	1817	0.0079	1.2115	2.4671
c07	interior	Ø4.1129±0.2123	0.3963	0.1432	0.0449	0.0581	1650	0.0079	0.5526	2.0565
c07_s	interior sep.	Ø4.0851±0.0471	0.0643	0.0124	0.0041	0.0075	1679	0.0079	0.5526	2.0425

Table 10: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV024.

# Comparison of circularity on the full vessel surface

Metric

## Samples perpendicular to the surface curvature

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	mm	mm	mm	mm	mm	mm	mm	mm	mm		
Exterior	2.049	0.639	3.345	0.255	0.086	0.507	0.629	0.143	1.017	200	0.200
Interior	2.388	1.293	7.112	0.320	0.175	1.040	0.636	0.410	2.582	120	0.200
Interior separate	1.086	0.588	8.003	0.147	0.073	1.343	0.252	0.153	2.749	170	0.200

Table 11: Detailed circularity measurements at selected samples in z-plane, vessel MV024.

## Samples in the z-plane

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	mm	mm	mm	mm	mm	mm	mm	mm	mm		
Exterior	3.218	1.282	3.608	0.422	0.162	0.576	0.891	0.255	1.055	199	0.200
Interior	8.026	0.184	13.566	1.319	0.028	2.852	2.785	0.047	4.474	213	0.200
Interior separate	1.650	1.198	8.366	0.230	0.151	1.321	0.382	0.247	3.231	203	0.200

Table 12: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV024.

Imperial

## Samples perpendicular to the surface curvature

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	in	in	in	in	in	in	in	in	in		
Exterior	2.049	0.639	3.345	0.255	0.086	0.507	0.629	0.143	1.017	200	0.200
Interior	2.388	1.293	7.112	0.320	0.175	1.040	0.636	0.410	2.582	120	0.200
Interior separate	1.086	0.588	8.003	0.147	0.073	1.343	0.252	0.153	2.749	170	0.200

Table 13: Detailed circularity measurements at selected samples in z-plane, vessel MV024.

## Samples in the z-plane

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	in	in	in	in	in	in	in	in	in		
Exterior	3.218	1.282	3.608	0.422	0.162	0.576	0.891	0.255	1.055	199	0.200
Interior	8.026	0.184	13.566	1.319	0.028	2.852	2.785	0.047	4.474	213	0.200
Interior separate	1.650	1.198	8.366	0.230	0.151	1.321	0.382	0.247	3.231	203	0.200

Table 14: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV024.



Circularity analysis of exterior surface - perpendicular to surface curvature

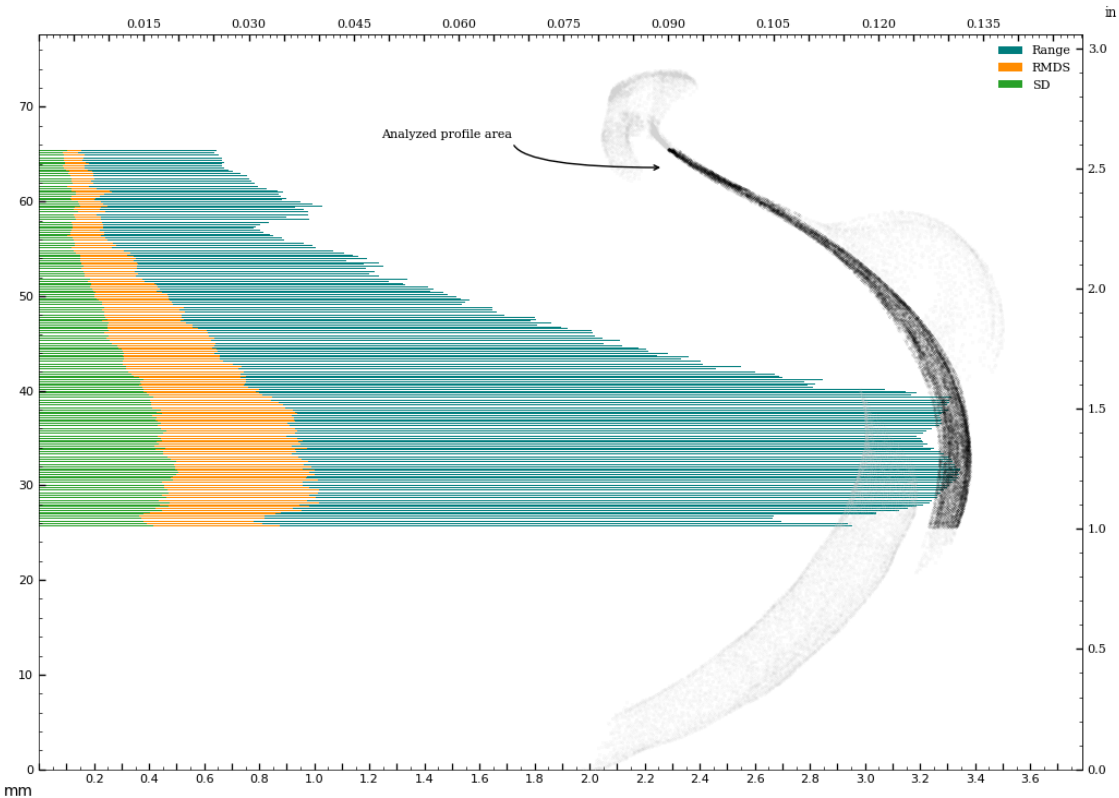


Figure 66: Circularity of exterior surface - perpendicular to surface curvature.

Circularity analysis of exterior surface - in z-plane

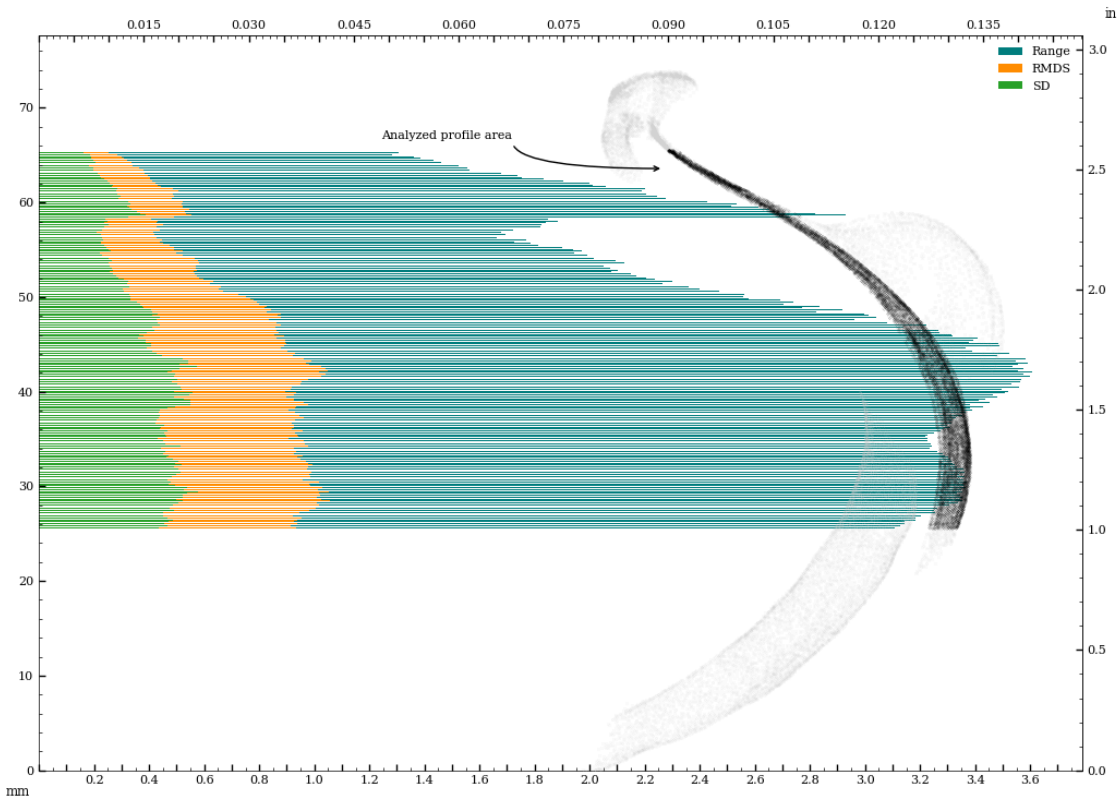


Figure 67: Circularity of exterior surface - in z-plane.

Circularity analysis of exterior surface, perpendicular to surface curvature, Standard Deviation and Root Mean Squared Deviation

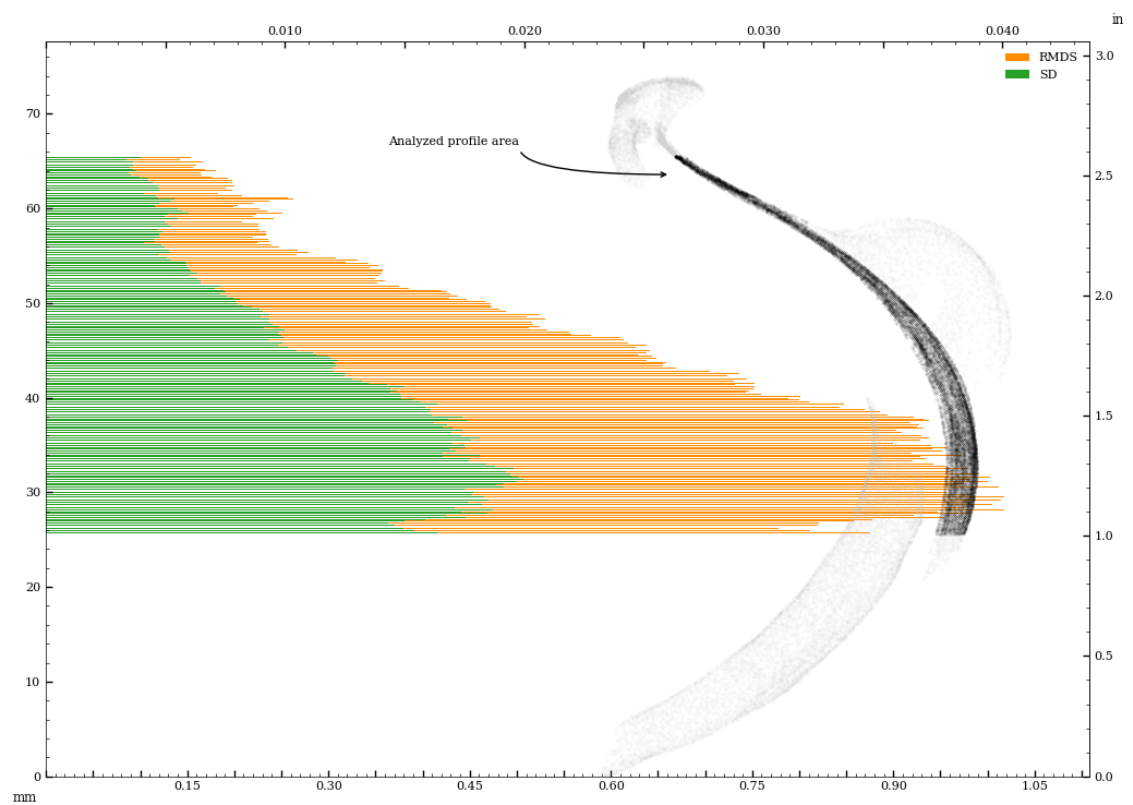


Figure 68: Vessel circularity of exterior surface, perpendicular to surface curvature, standard deviation and median absolute deviation.

Circularity analysis of exterior surface, in z-plane, Standard Deviation and Root Mean Squared Deviation

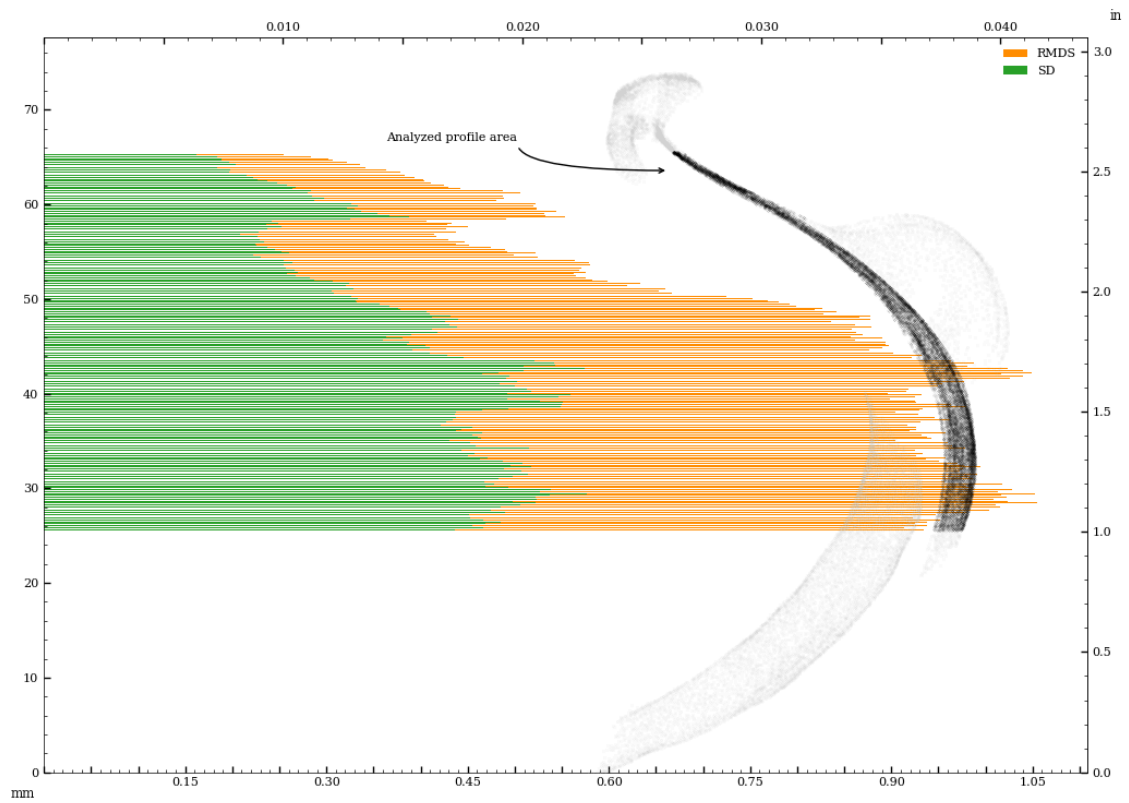


Figure 69: Vessel circularity of exterior surface, in z-plane, standard deviation and median absolute deviation.

Circularity analysis of interior surface - perpendicular to surface curvature

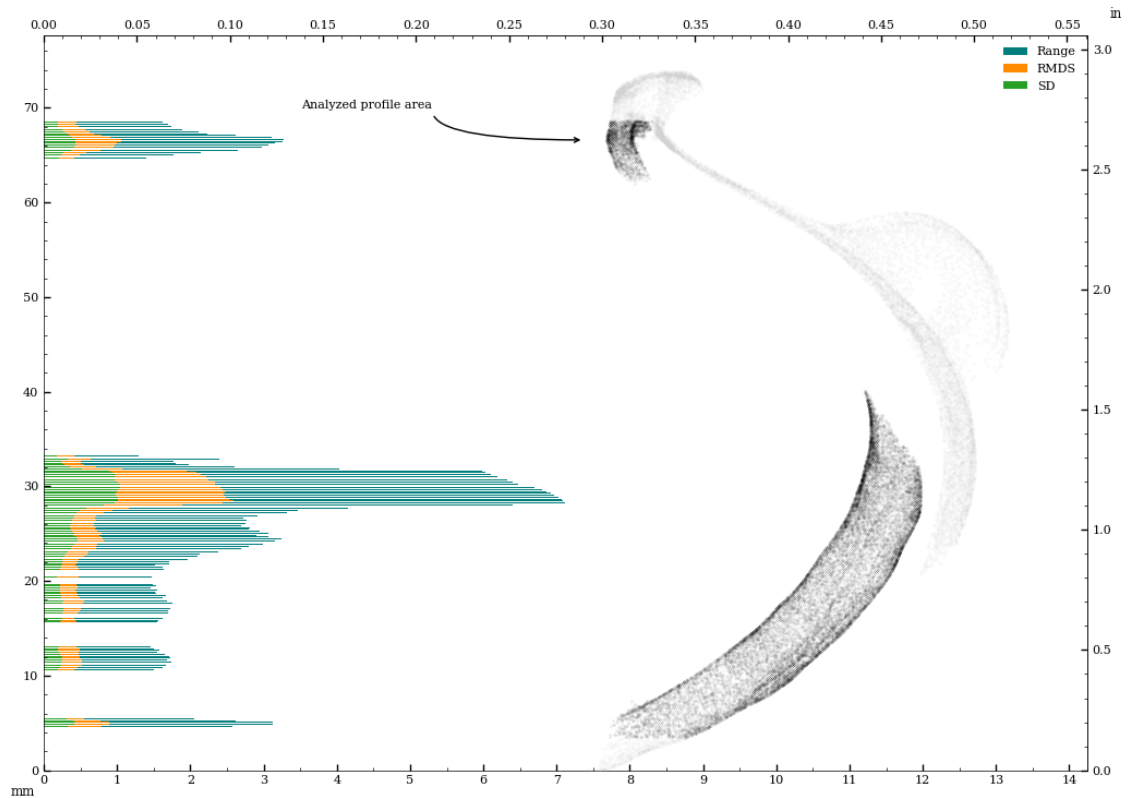


Figure 70: Circularity of interior surface - perpendicular to surface curvature.

Circularity analysis of interior surface - in z-plane

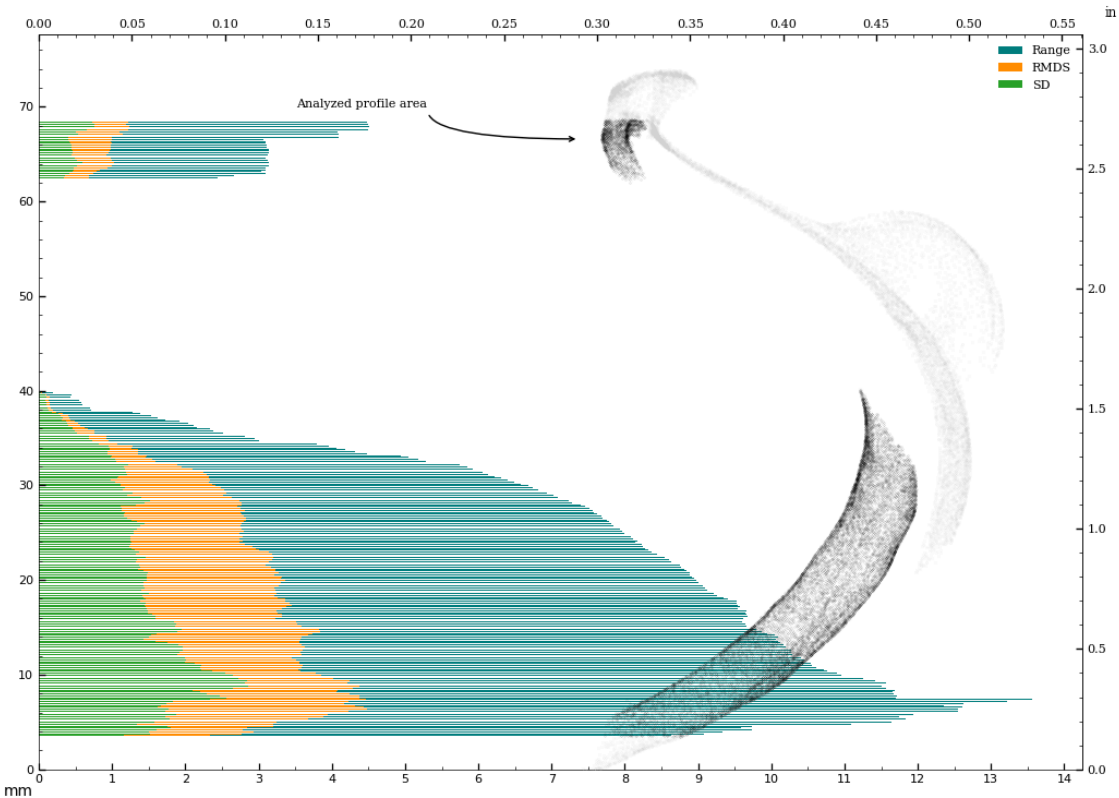


Figure 71: Circularity of interior surface - in z-plane.

Circularity analysis of interior surface, perpendicular to surface curvature, Standard Deviation and Root Mean Squared Deviation

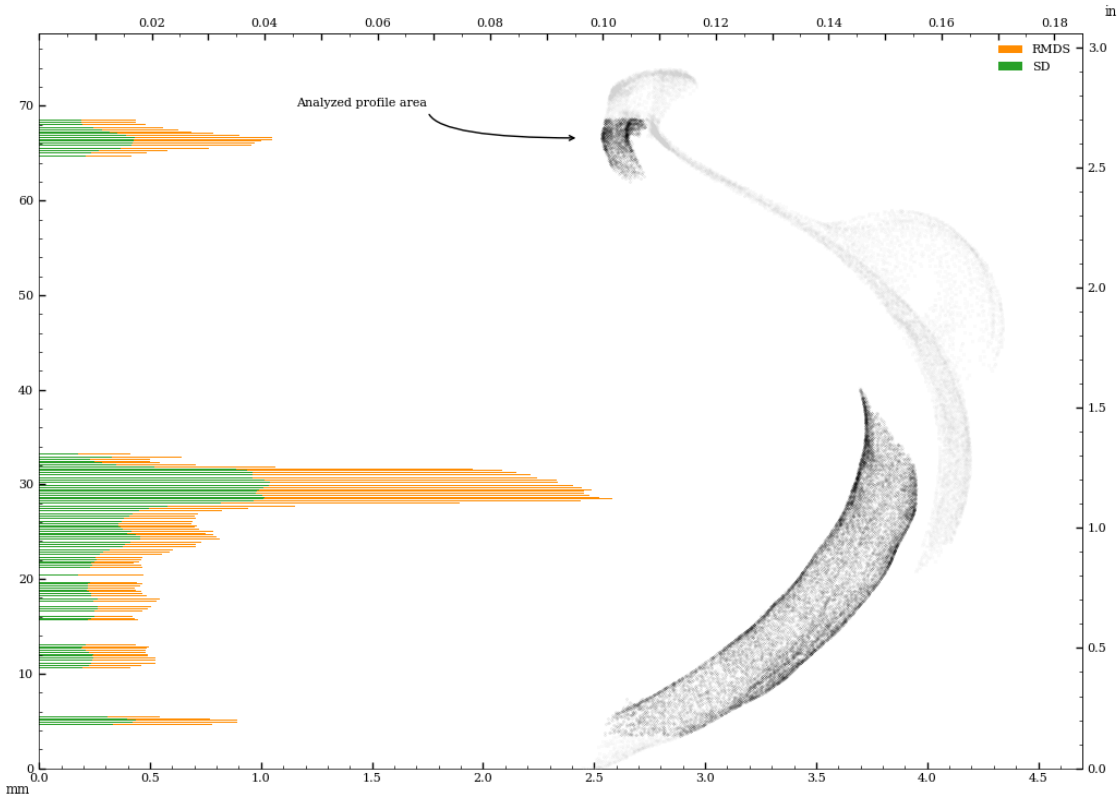


Figure 72: Vessel circularity of interior surface, perpendicular to surface curvature, standard deviation and median absolute deviation.

Circularity analysis of interior surface, in z-plane, Standard Deviation and Root Mean Squared Deviation

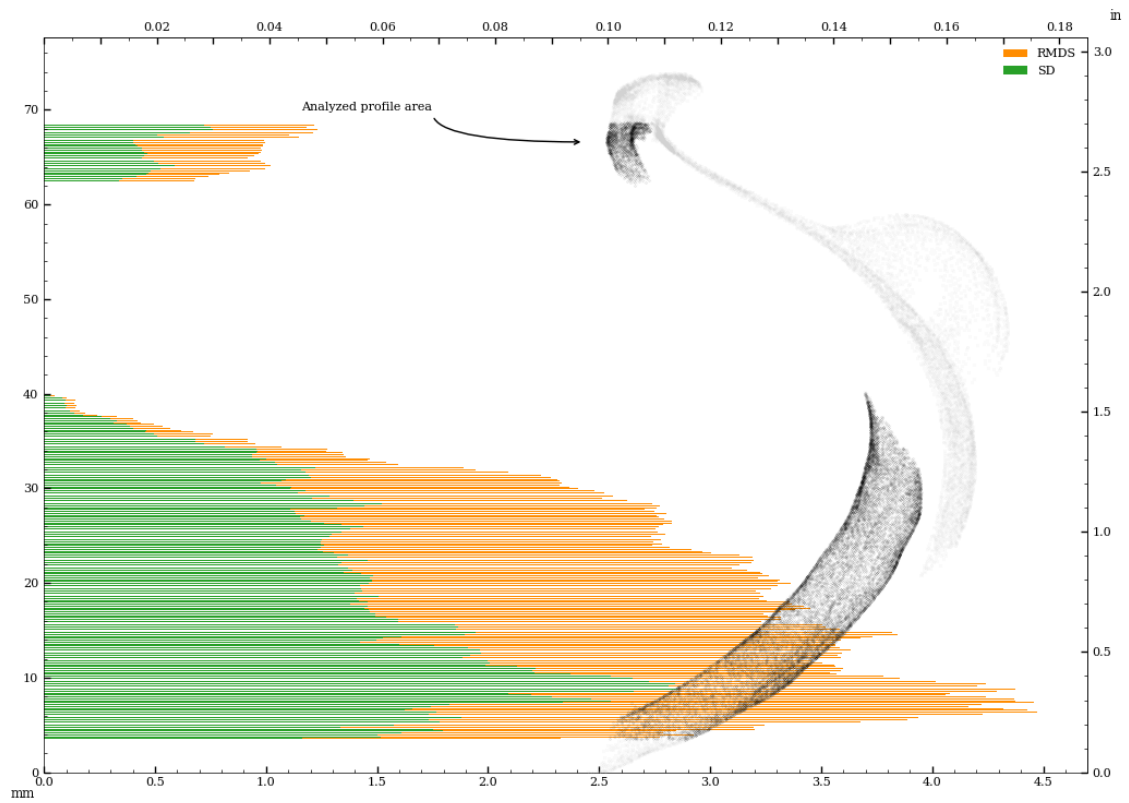


Figure 73: Vessel circularity of interior surface, in z-plane, standard deviation and median absolute deviation.

Circularity analysis of interior separately aligned surface - perpendicular to surface curvature

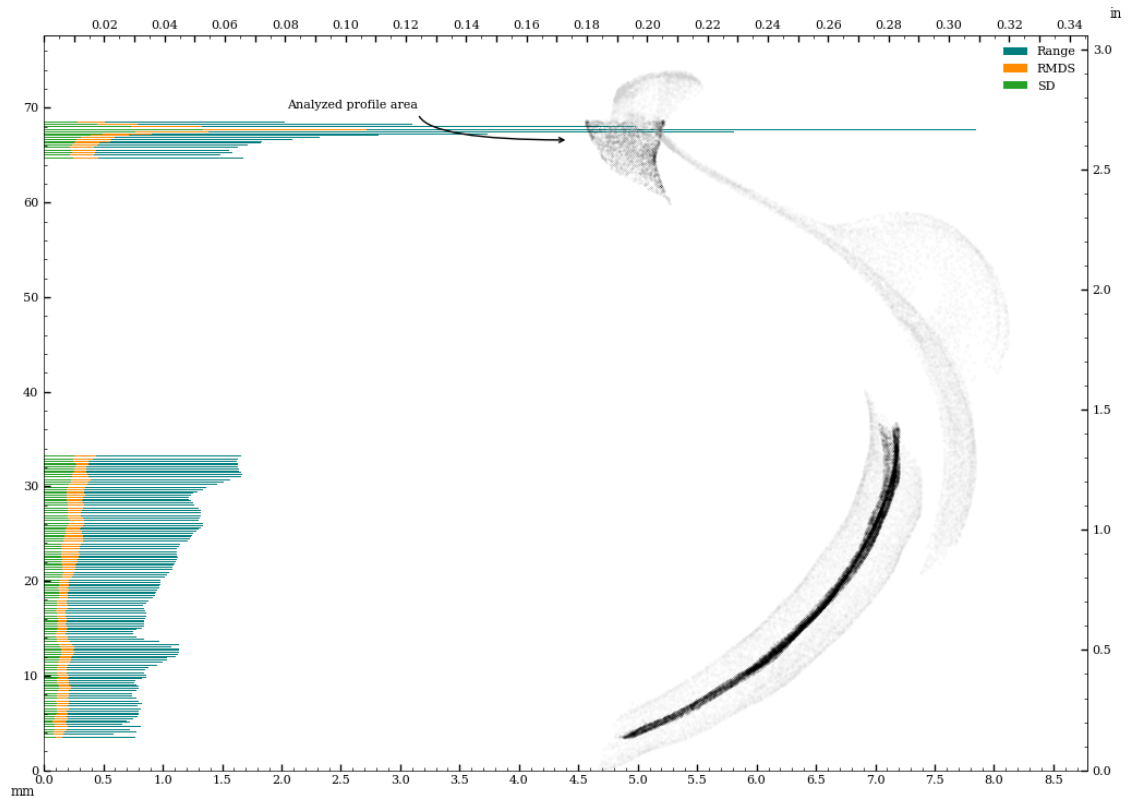


Figure 74: Circularity of interior\_separate surface - perpendicular to surface curvature.

Circularity analysis of interior separately aligned surface - in z-plane

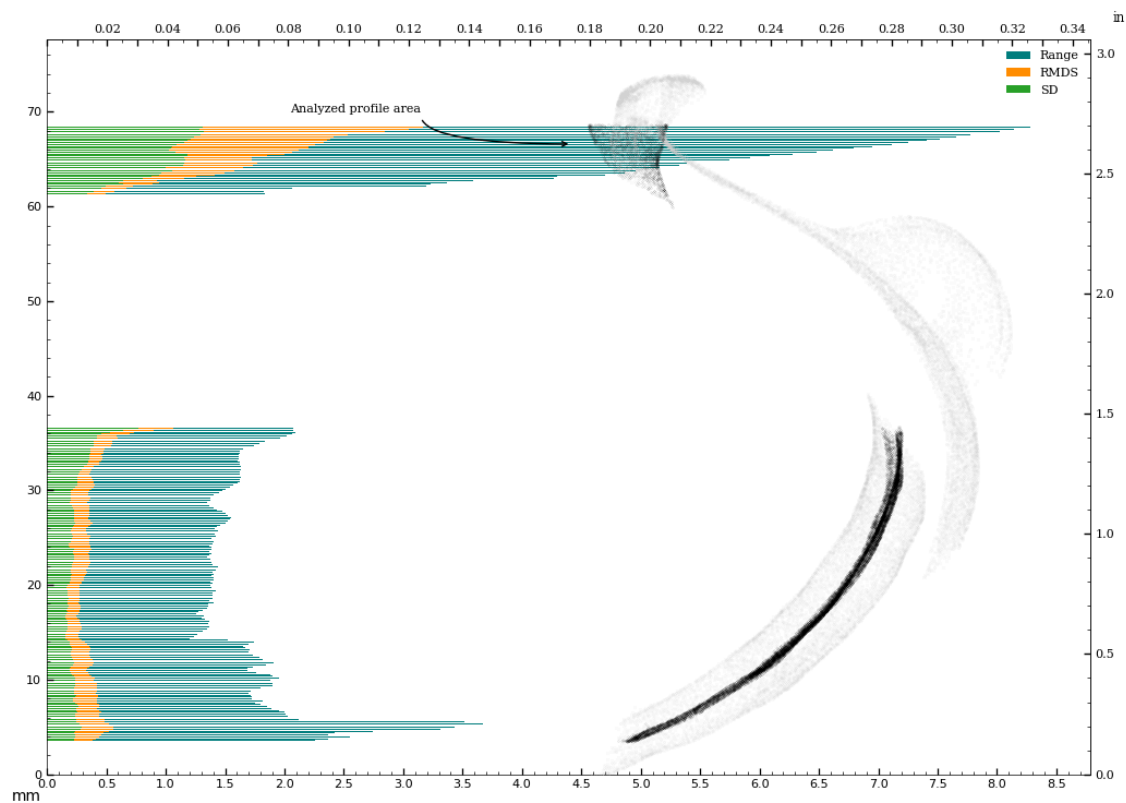


Figure 75: Circularity of interior\_separate surface - in z-plane.

Circularity analysis of interior separately aligned surface, perpendicular to surface curvature, Standard Deviation and Root Mean Squared Deviation

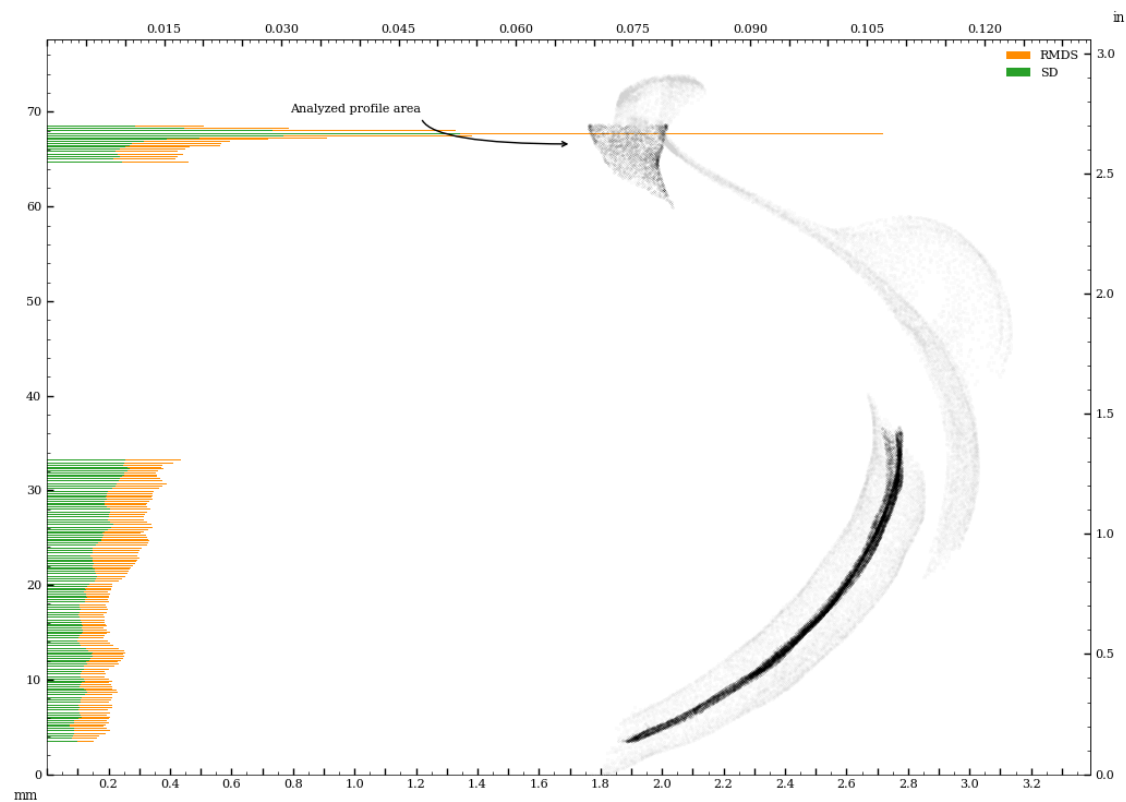


Figure 76: Vessel circularity of interior\_separate surface, perpendicular to surface curvature, standard deviation and median absolute deviation.

Circularity analysis of interior separately aligned surface, in z-plane, Standard Deviation and Root Mean Squared Deviation

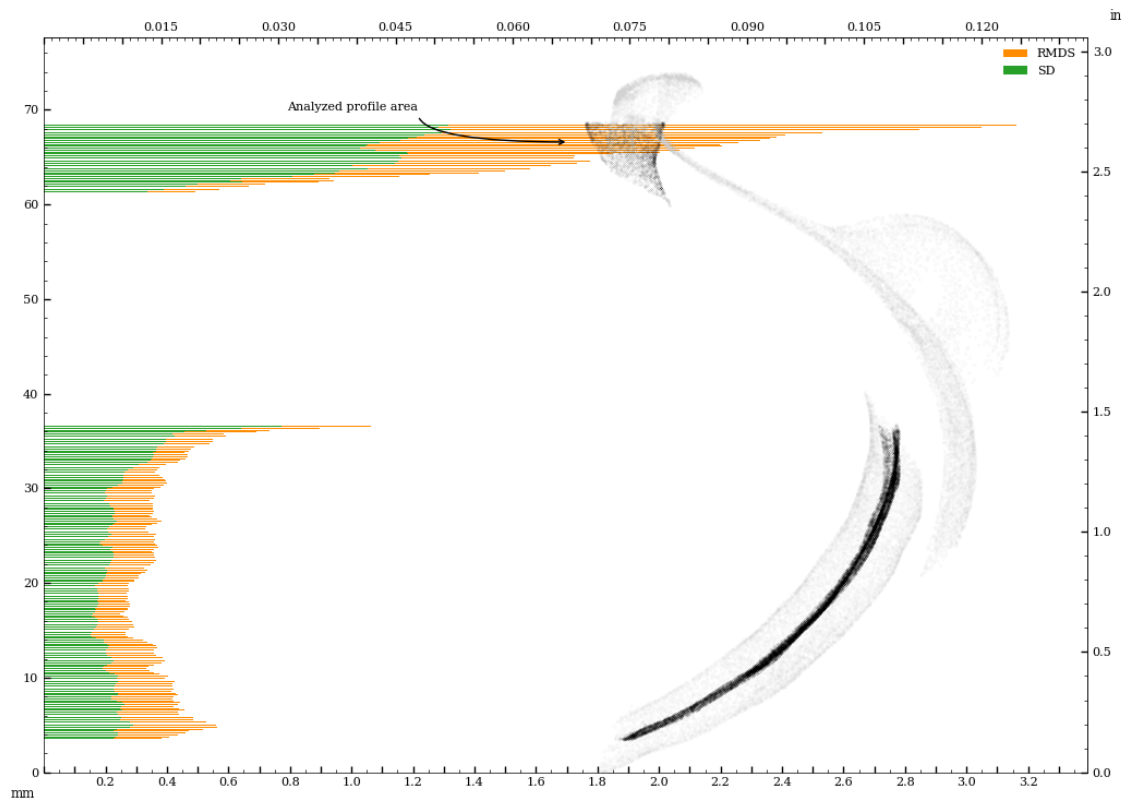


Figure 77: Vessel circularity of interior\_separate surface, in z-plane, standard deviation and median absolute deviation.

## Appendix B - Comparison Of Concentricity Measurements (Z-plane vs. surface-perpendicular)

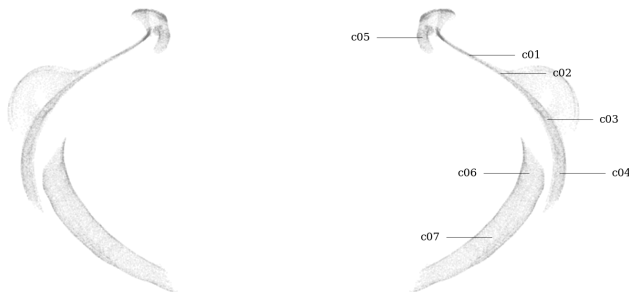


Figure 78: Circularity measurement sample locations, full mesh aligned to exterior surface



Figure 79: Circularity measurement sample location, separately aligned interior mesh

### Concentricity measurements perpendicular to surface curvature

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						Center (x,y)
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	
		mm		mm	mm	mm	mm	mm	mm	μm
c01	z-axis	0.439	865	2.305	2.134	0.574	0.562	0.302	0.296	304, -316
c02	z-axis	0.206	579	1.805	1.805	0.434	0.434	0.239	0.239	169, -119
c03	z-axis	0.183	707	3.540	3.540	0.908	0.908	0.410	0.410	-135, 124
c04	z-axis	0.053	847	3.448	3.448	1.007	1.007	0.506	0.506	-16, -50
c05	z-axis	1.369	1226	4.043	3.937	1.317	1.325	0.563	0.554	-1318, -371
c05_s	z-axis	3.488	882	7.494	7.494	2.826	2.826	1.058	1.058	2998, -1783
c06	z-axis	3.257	1277	6.499	6.499	2.121	2.121	0.964	0.964	-3093, 1019
c06_s	z-axis	0.250	1817	1.635	1.635	0.401	0.401	0.244	0.244	-248, -28
c07	z-axis	5.000	1650	9.376	9.376	3.076	3.076	1.439	1.439	-4858, 1181
c07_s	z-axis	0.110	1679	1.612	1.486	0.336	0.328	0.197	0.190	25, -107
c04	c06	3.258								3077, -1069

### Concentricity measurements in z-plane

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						Center (x,y)
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	
		mm		mm	mm	mm	mm	mm	mm	μm
c01	z-axis	0.439	865	2.305	2.134	0.574	0.562	0.302	0.296	304, -316
c02	z-axis	0.206	579	1.805	1.805	0.434	0.434	0.239	0.239	169, -119
c03	z-axis	0.183	707	3.540	3.540	0.908	0.908	0.410	0.410	-135, 124
c04	z-axis	0.053	847	3.448	3.448	1.007	1.007	0.506	0.506	-16, -50
c05	z-axis	1.369	1226	4.043	3.937	1.317	1.325	0.563	0.554	-1318, -371
c05_s	z-axis	3.488	882	7.494	7.494	2.826	2.826	1.058	1.058	2998, -1783
c06	z-axis	3.257	1277	6.499	6.499	2.121	2.121	0.964	0.964	-3093, 1019
c06_s	z-axis	0.250	1817	1.635	1.635	0.401	0.401	0.244	0.244	-248, -28
c07	z-axis	5.000	1650	9.376	9.376	3.076	3.076	1.439	1.439	-4858, 1181
c07_s	z-axis	0.110	1679	1.612	1.486	0.336	0.328	0.197	0.190	25, -107
c04	c06	3.258								3077, -1069





Figure 80: Circularity measurement sample locations, full mesh aligned to exterior surface


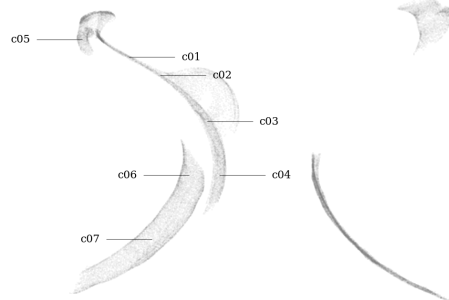


Figure 81: Circularity measurement sample location, separately aligned interior mesh

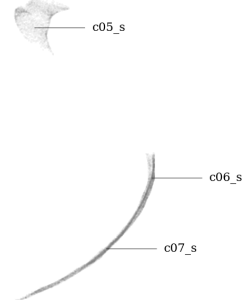

## Concentricity measurements perpendicular to surface curvature

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
			in	in	in	in	in	in	in	thou
c01	z-axis	0.0173	865	0.0907	0.0840	0.0226	0.0221	0.0119	0.0117	12.0, -12.5
c02	z-axis	0.0081	579	0.0711	0.0711	0.0171	0.0171	0.0094	0.0094	6.6, -4.7
c03	z-axis	0.0072	707	0.1394	0.1394	0.0357	0.0357	0.0161	0.0161	-5.3, 4.9
c04	z-axis	0.0021	847	0.1358	0.1358	0.0396	0.0396	0.0199	0.0199	-0.6, -2.0
c05	z-axis	0.0539	1226	0.1592	0.1550	0.0519	0.0522	0.0221	0.0218	-51.9, -14.6
c05_s	z-axis	0.1373	882	0.2950	0.2950	0.1113	0.1113	0.0417	0.0417	118.0, -70.2
c06	z-axis	0.1282	1277	0.2558	0.2558	0.0835	0.0835	0.0379	0.0379	-121.8, 40.1
c06_s	z-axis	0.0098	1817	0.0644	0.0644	0.0158	0.0158	0.0096	0.0096	-9.8, -1.1
c07	z-axis	0.1968	1650	0.3691	0.3691	0.1211	0.1211	0.0567	0.0567	-191.3, 46.5
c07_s	z-axis	0.0043	1679	0.0634	0.0585	0.0132	0.0129	0.0077	0.0075	1.0, -4.2
c04	c06	0.1283								121.1, -42.1

## Concentricity measurements in z-plane

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
			in	in	in	in	in	in	in	thou
c01	z-axis	0.0173	865	0.0907	0.0840	0.0226	0.0221	0.0119	0.0117	12.0, -12.5
c02	z-axis	0.0081	579	0.0711	0.0711	0.0171	0.0171	0.0094	0.0094	6.6, -4.7
c03	z-axis	0.0072	707	0.1394	0.1394	0.0357	0.0357	0.0161	0.0161	-5.3, 4.9
c04	z-axis	0.0021	847	0.1358	0.1358	0.0396	0.0396	0.0199	0.0199	-0.6, -2.0
c05	z-axis	0.0539	1226	0.1592	0.1550	0.0519	0.0522	0.0221	0.0218	-51.9, -14.6
c05_s	z-axis	0.1373	882	0.2950	0.2950	0.1113	0.1113	0.0417	0.0417	118.0, -70.2
c06	z-axis	0.1282	1277	0.2558	0.2558	0.0835	0.0835	0.0379	0.0379	-121.8, 40.1
c06_s	z-axis	0.0098	1817	0.0644	0.0644	0.0158	0.0158	0.0096	0.0096	-9.8, -1.1
c07	z-axis	0.1968	1650	0.3691	0.3691	0.1211	0.1211	0.0567	0.0567	-191.3, 46.5
c07_s	z-axis	0.0043	1679	0.0634	0.0585	0.0132	0.0129	0.0077	0.0075	1.0, -4.2
c04	c06	0.1283								121.1, -42.1