

MV029 - Tall Shouldered Jar

An Exploration of Precision



Author: Stine Gerdes, arcsai.org

License: Creative Commons BY-NC-SA 4.0

Date: 2025-07-21

Version: 01.20



Petrie Museum, CC BY-NC-SA

Contents

Artifact Information 2

Alignment In The Cartesian Coordinate System 3

Statistics used throughout the report 5

Precision 6

 Circularity 6

 Concentricity 28

 Coaxiality 39

 Surface Variability 43

 Precision Score Of The Artifact 52

Analysis Roadmap 54

Appendix A - Comparison Of Circularity Measurements (Z-plane vs. surface-perpendicular) 55

Appendix B - Comparison Of Concentricity Measurements (Z-plane vs. surface-perpendicular) 65

Artifact Information

Artifact Data

Collection	
Provenance ¹	Petrie Museum of Egyptian Archaeology (London), recovered by Flinders Petrie
Provenience ²	
Attribution	(possible) Naqada I

Museum information

Ref.	LDUCE-UC15655
Description	Basalt tubular vase, with two horizontally perforated lug handles
URL	https://collections.ucl.ac.uk/Details/collect/23856

Maijers vessel classification³

Short classification	Tall Shouldered Jar
Long classification	The vessel is created in a closed form classified as a tall jar with a shouldered shape, a rounded rim.

Physical properties

Precision score ⁴	6
Height (approximate)	143 mm 5.63 in
Width (approximate)	109 mm 4.29 in
Material	Basalt
Mohs Hardness ⁵	6 - 7 (Basalt)
Weight	

Scan information

Source	Max Fomitchev-Zamilov, 3D Scans of the Naqada Period Stone Vessels from the Petrie Museum of Egyptian and Sudanese Archeology, 2025.
Source file name	UC15655-Io.stl
Scan method	CMM
Scanner	Keyence VL -500
Rated scan accuracy	10 µm 0.41 thou
Scan date	2025-05-12
Scanned by	Max Fomitchev-Zamilov

Mesh decimation	None, raw scan file used in the analysis
Number of vertices	578 140
Mesh density ⁶	180 µm 7.09 thou
Max vertex distance	1046 µm 41.199 thou
Min vertex distance	9 µm 0.363 thou
Vertices per cm ²	831 (approximated)
Vertices per in ²	5361 (approximated)

¹The verifiable chain of custody of an artifact

²The location or site where an artifact was recovered

³Vessel artifact classification developed by W. Arnold Maijer and described in his publication Masters of Stone, ISBN 978-90-829212-0-5

⁴The precision score metric is described in Precision Score Of The Artifact, p. 53

⁵The Mohs scale is an ordinal scale, from 1 to 10, describing the materials resistance to abrasion (the ability of harder material to scratch softer material)

⁶Median distance between vertices

Alignment In The Cartesian Coordinate System

For precise and valid measurements of the vessel's geometry to be possible, the points of the scanned dataset must first and foremost be placed optimally in a Cartesian coordinate system. Several alignment methods and algorithms have been tested on a number of different vessels to determine the best way to achieve optimal alignment.

Any misalignment of the artifact will increase the error of the precision measurements, due to the distortion/wobble effect caused by the misaligned object. To visualize this distortion, we can consider a representation of the three-dimensional point cloud data, folded to a two-dimensional plane. This folded representation is obtained by rotating all scanned points around an assumed center axis to $y = 0, x > 0$, thus resulting in a two-dimensional profile representation of all scanned vertices in the object.

Figure 1 illustrates this effect on a ideal ellipsoid. In the first image, the ellipsoid is perfectly aligned, resulting in a narrow and precise two-dimensional folded profile. As misalignments are introduced, the two-dimensional profile increases in width, visually showing the distortion, causing the error in the precision measurements to increase. While easy to understand visually, this distortion can also be objectively quantified, and as such used to compare the fitness of different assumed center axes against each other, and further to create an automated and solid process for optimal Cartesian alignment of the scan data.

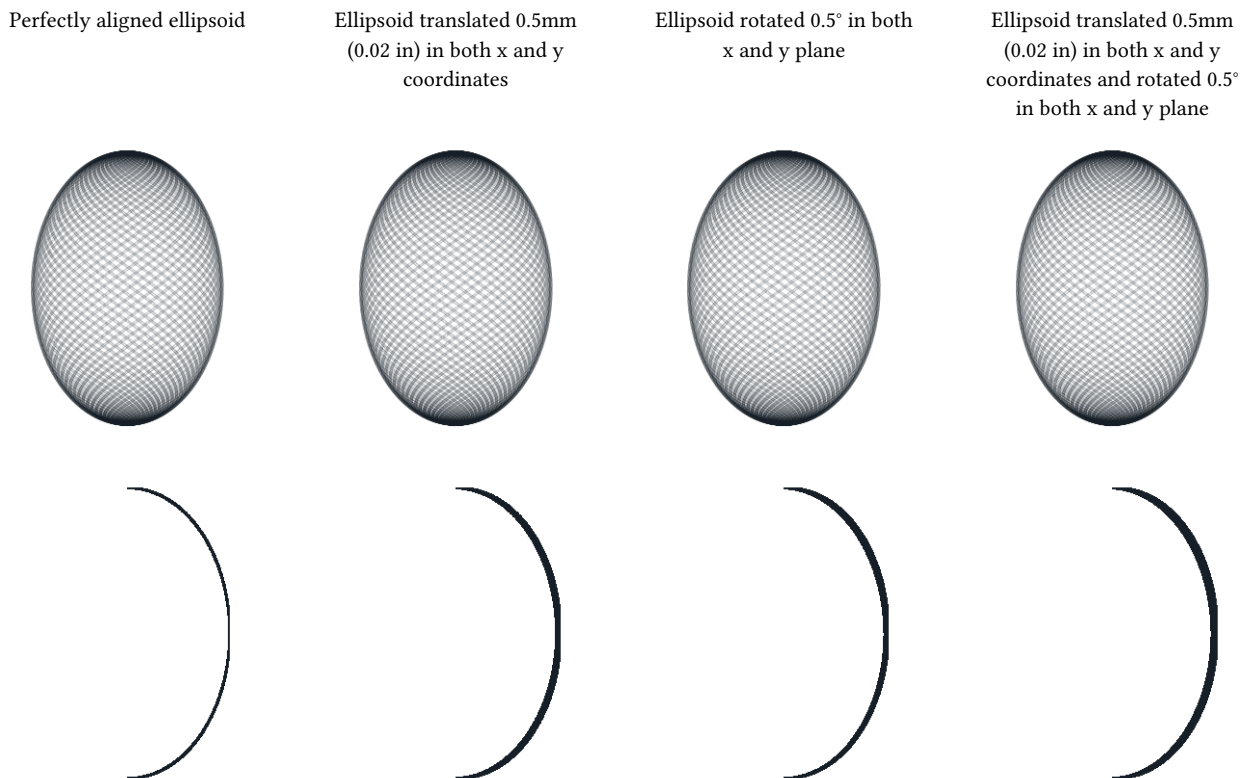


Figure 1: Distortion caused by a misalignment of the artifact

In contemporary metrology analysis of modern production objects, it is common to align the object in a Cartesian coordinate system by fitting a flat surface of the object to a reference plane in the coordinate system, cylindrical features to an ideal cylinder etc., or by using specific markers placed on the object in the design process. This methodology, however, is inadequate for the ancient objects in question. Most scanned artifacts, do not have a valid flat surface which could be aligned to a plane in the Cartesian coordinate system; most surfaces seem to be curved. Some artifacts do have a flat base, however this is often a worn area of the artifact and practical tests have shown that alignment to such surfaces will not produce optimal alignment of the scan data.

As conventional methods of alignment do not always yield good results with these types of artifacts, a more adequate method of alignment has been developed to enable precise measurements and statistical analysis of the scan data.

To find the optimal position of the vessel in the coordinate system, a range of rotation and translation tests are carried out to find the best fit of the central axis.

Based on the assumption that the analyzed object was created using a rotational process, and thus have symmetry around a central axis, the alignment of the artifact is carried out in a two-step process. An overview of this process is given below.

The artifact is placed in a Cartesian coordinate system, in an initially unaligned state. The first step in the alignment process estimates the central rotational axis of the vessel, by analyzing the coaxiality of thin cross-section slices of the vessel. The slices will be as thin as possible based on the mesh density of the scan, while still ensuring enough data points in each slice to be statistically valid.

For each slice, circular regression⁷ (estimate of best fit circle) is used to estimate the center point of this slice. Combined over the total Z-axis range of the vessel, these center points provide us with an indicator of the incline and position of the vessel's central axis.

The next step will optimize the center axis alignment by progressively minimizing the deviation (perpendicular to the surface curvature) of the two-dimensional profile, see Figure 1. By ascertaining and comparing the resulting fit of many thousands of different potential rotations, the best fit alignment of the scan data can be estimated, and an optimal center axis (in relation to the data points) can be reconstructed. The actual three-dimensional point-cloud is then aligned to this axis, by rotating and translating the scanned data points to match the Z-axis of the Cartesian coordinate system.

To enable extensive analysis of the full surface of the artifact, the mesh is split into exterior and interior surfaces. The exterior surface is aligned independently of interior data points, providing a baseline for exterior quality assessment. The interior surface is represented by two alignments:

- Aligned with the exterior mesh to analyze concentricity, and
- Aligned separately to assess its precision and compare the true tilt/displacement between interior and exterior surfaces.

⁷Circle regression algorithm used: Kenichi Kanatani, Prasanna Rangarajan, "Hyper least squares fitting of circles and ellipses" Computational Statistics & Data Analysis, Vol. 55, pages 2197-2208, (2011)

Statistics used throughout the report

This section provides an overview of the key statistical and model-evaluation metrics employed throughout the report to analyze dataset variability, model fit, and predictive accuracy.

Each measure is introduced with its mathematical formulation, practical interpretation, and explicit reference to how it is calculated in the context of the evaluated models and residuals. Together, these metrics quantify:

- Data variability (e.g., MAD, Standard Deviation, Range).
- Model accuracy (e.g., MSD, RMSD).
- Robustness vs. sensitivity to extreme values and central tendencies.

Mean Squared Deviation (MSD), also known as Mean Squared Error (MSE).

$$\text{MSD} = \frac{\sum_{i=1}^n (y_i - \hat{y})^2}{n}$$

The Mean Squared Deviation (MSD) measures the average magnitude of squared differences between observed (y_i) and predicted (\hat{y}) values, calculated as the mean of squared residuals, and is used as a measure of discrepancy in regression and model-fitting contexts.

This measure amplifies the influence of larger deviations through squaring, emphasizes imperfections in the observed data, but retains sensitivity to outliers.

Root Mean Squared Deviation (RMSD), also known as Root Mean Squared Error (RMSE).

$$\text{RMSD} = \sqrt{\frac{\sum_{i=1}^n (y_i - \hat{y})^2}{n}}$$

The Root Mean Square Deviation (RMSD) measures the magnitude of differences between observed (y_i) and predicted (\hat{y}) values by calculating the square root of the average of squared residuals.

RMSD is a commonly used measure of discrepancy in regression and model-fitting contexts. It quantifies the average magnitude of residuals while retaining sensitivity to larger deviations (via squaring), making it particularly useful for evaluating model accuracy.

Standard Deviation (SD)

$$s = \sqrt{\frac{\sum_{i=1}^n (y_i - \bar{y})^2}{n - 1}}$$

The Standard Deviation measures the spread of data (y_i) around the mean (\bar{y}) by calculating the square root of the average of squared differences between each value and the mean.

It is sensitive to outliers as it amplifies their influence through squaring, in contrast to MAD.

Throughout this report, the Standard Deviation is calculated using the absolute residuals from regression models.

Median Absolute Deviation (MedianAD)

$$\text{MedianAD} = \text{median}(|y_i - \text{median}(y)|)$$

The Median Absolute Deviation (MAD) measures the spread of data around the median by calculating the median of absolute differences between each value and the median.

MAD is a robust measure of spread, analogous to the interquartile range (a robust measure centered on the middle 50% of data), and differs from the standard deviation in that it minimizes the impact of outliers.

Throughout this report, the MAD is calculated using the absolute values of residuals from regression models.

Range

$$\max(y_i) - \min(y_i)$$

The Range measures the spread of a dataset by calculating the difference between the maximum and minimum values.

The Range is a simple measure of spread, capturing the full extent of variability. Range is very sensitive to extreme values, as it is entirely determined by the two most extreme data points.

Throughout this report, the Range is calculated using the full range of residuals from regression models.

Precision

To explore the manufacturing precision of the artifact in depth, the following analysis have been carried out:

- Circularity around the axis of symmetry is examined in detail at selected cross-sections.
- Overall circularity around the axis of symmetry is measured for the full height of the vessel (areas of the vessel with extensive damage are not taken into account for this metric).
- Concentricity of the vessel between selected cross-sections are examined in detail to determine if the existence of an axis of rotation in the manufacture of the object can be established.
- The coaxiality of the vessel is analyzed to explore the precision of the central axis of the object.
- The surface variability is analyzed and visualized on through a heatmap.

Circularity

Circularity is the measurement of how round the surface of an object is, optionally in reference to a datum axis. The *circularity tolerance* is the radial distance of two circles, each with their centers in the datum axis, and each of them conforming, respectively, to the minimum and maximum deviations of the data-set to a true circle, see Figure 2.

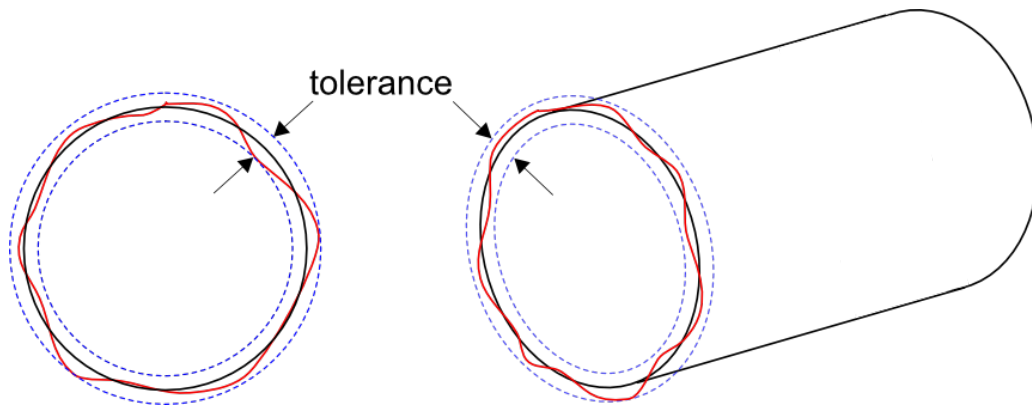


Figure 2: Circularity tolerance.

Circularity is examined at different cross-sections of the vessel, using the established Z-axis as the datum axis (axis of symmetry). The distance between the scanned points in the local datum plane is measured to determine the range between the two concentric circles encompassing the measured points, see Figure 3.

Referencing all of the individual circularity measurements to the global (reconstructed) axis of symmetry of the object, allows us to ascertain not only circularity of local features of the object, but how well circularity was *maintained* over the entire manufacturing process. This is an important distinction, which may be able to provide valuable insights into requirements of the construction methods. For reference, and seeing that the variance in local circularity also holds interest, measurements of circularity of the vessel without reference to the axis of symmetry can additionally be found in the Concentricity, p. 29.

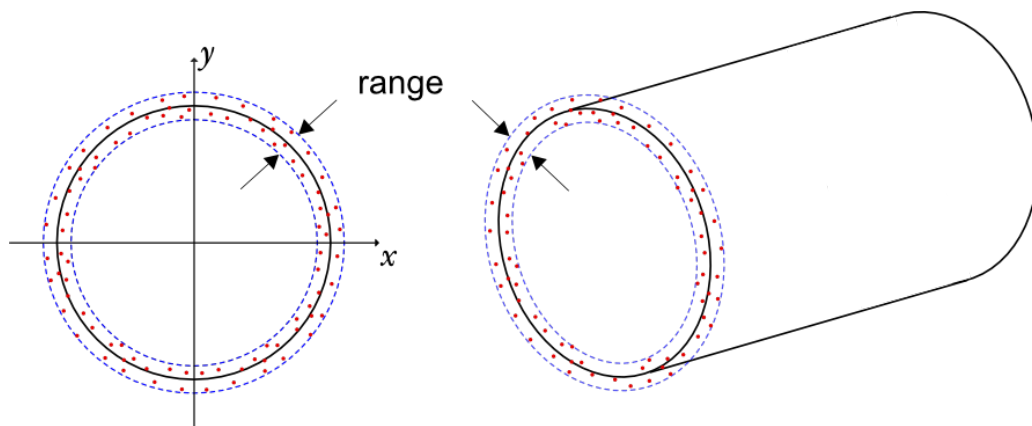


Figure 3: Circularity measurements.

If the circularity is determined from slices of the vessel exclusively in the *Z-plane* (actually measuring the cylindricity of a very thin slices of the vessel, in an attempt to approximate circularity), this would - in some areas - introduce significant distortion (increasing measurement errors) in the samples, due to the curvature of the vessel's surface.

Each sample slice of the vessel is therefore obtained perpendicular to the surface curvature, see Figure 6 to Figure 14. The measurements are taken conservatively without filtration of potential outliers.

To explore the potential distortion caused by obtaining samples in the Z-plane only, please refer to Appendix A, where measurements in the Z-plane and measurements perpendicular to surface curvature are compared side by side.

Detailed circularity measurements of selected points

Circularity measurements across a range of selected slices of the vessel (see Table 1) have been analyzed in-depth, and detailed plots of each measurement is provided. Furthermore, full circularity measurements are shown for each available scanned surface including a detailed plot to visualize the circularity of all areas of the vessel.

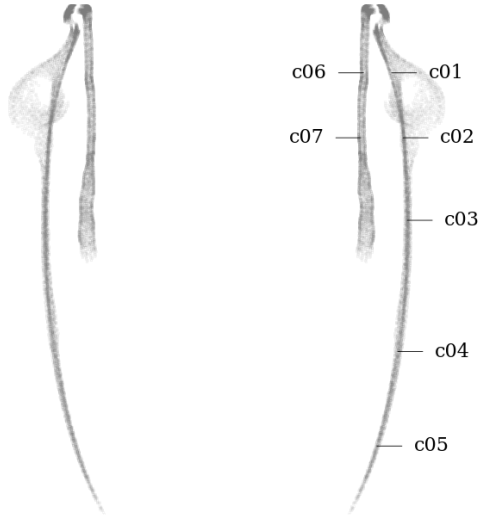


Figure 4: Circularity measurement sample locations, full mesh aligned with exterior surface



Figure 5: Circularity measurement sample location, separately aligned interior mesh

Metric

Tag	Area	Measured deviation ⁸	Residuals				Sample size	Slice		
			Range	RMSD ⁹	MAD ¹⁰	SD		Height	Z coord.	Radius ¹¹
		mm	mm	mm	mm	mm		mm	mm	mm
c01	exterior	Ø83.862±1.229	1.880	0.568	0.134	0.254	274	0.200	113.354	41.931
c02	exterior	Ø89.699±0.696	1.178	0.247	0.103	0.160	467	0.200	96.888	44.849
c03	exterior	Ø91.830±0.817	1.625	0.381	0.161	0.241	531	0.200	75.949	45.915
c04	exterior	Ø86.973±0.882	1.717	0.443	0.200	0.244	447	0.200	42.665	43.487
c05	exterior	Ø76.429±0.525	0.996	0.277	0.112	0.151	283	0.200	18.694	38.214
c06	interior	Ø69.658±0.902	1.719	0.604	0.151	0.231	551	0.200	113.354	34.829
c06_s	interior sep.	Ø69.823±0.246	0.409	0.084	0.038	0.052	587	0.200	113.354	34.911
c07	interior	Ø68.315±0.946	1.727	0.611	0.156	0.229	555	0.200	96.888	34.158
c07_s	interior sep.	Ø68.618±0.249	0.457	0.149	0.048	0.056	528	0.200	96.888	34.309

Imperial

Tag	Area	Measured deviation ⁸	Residuals				Sample size	Slice		
			Range	RMSD ⁹	MAD ¹⁰	SD		Height	Z coord.	Radius ¹¹
		in	in	in	in	in		in	in	in
c01	exterior	Ø3.3017±0.0484	0.0740	0.0224	0.0053	0.0100	274	0.0079	4.4628	1.6508
c02	exterior	Ø3.5315±0.0274	0.0464	0.0097	0.0041	0.0063	467	0.0079	3.8145	1.7657
c03	exterior	Ø3.6154±0.0322	0.0640	0.0150	0.0063	0.0095	531	0.0079	2.9901	1.8077
c04	exterior	Ø3.4241±0.0347	0.0676	0.0175	0.0079	0.0096	447	0.0079	1.6797	1.7121
c05	exterior	Ø3.0090±0.0207	0.0392	0.0109	0.0044	0.0059	283	0.0079	0.7360	1.5045
c06	interior	Ø2.7424±0.0355	0.0677	0.0238	0.0060	0.0091	551	0.0079	4.4628	1.3712
c06_s	interior sep.	Ø2.7489±0.0097	0.0161	0.0033	0.0015	0.0021	587	0.0079	4.4628	1.3745
c07	interior	Ø2.6896±0.0373	0.0680	0.0241	0.0061	0.0090	555	0.0079	3.8145	1.3448
c07_s	interior sep.	Ø2.7015±0.0098	0.0180	0.0059	0.0019	0.0022	528	0.0079	3.8145	1.3507

Table 1: Detailed circularity measurements at selected samples of MV029.

Figure 6 to Figure 14 shows a detailed plots of each circularity measurement.

⁸Sample diameter Ø± maximum measured deviation from measured radius

⁹Root mean square deviation (RMSD) also called Root mean square error (RMSE)

¹⁰Median absolute deviation

¹¹Median sample radius from z-axis

Graphical overview of circularity measurement c01

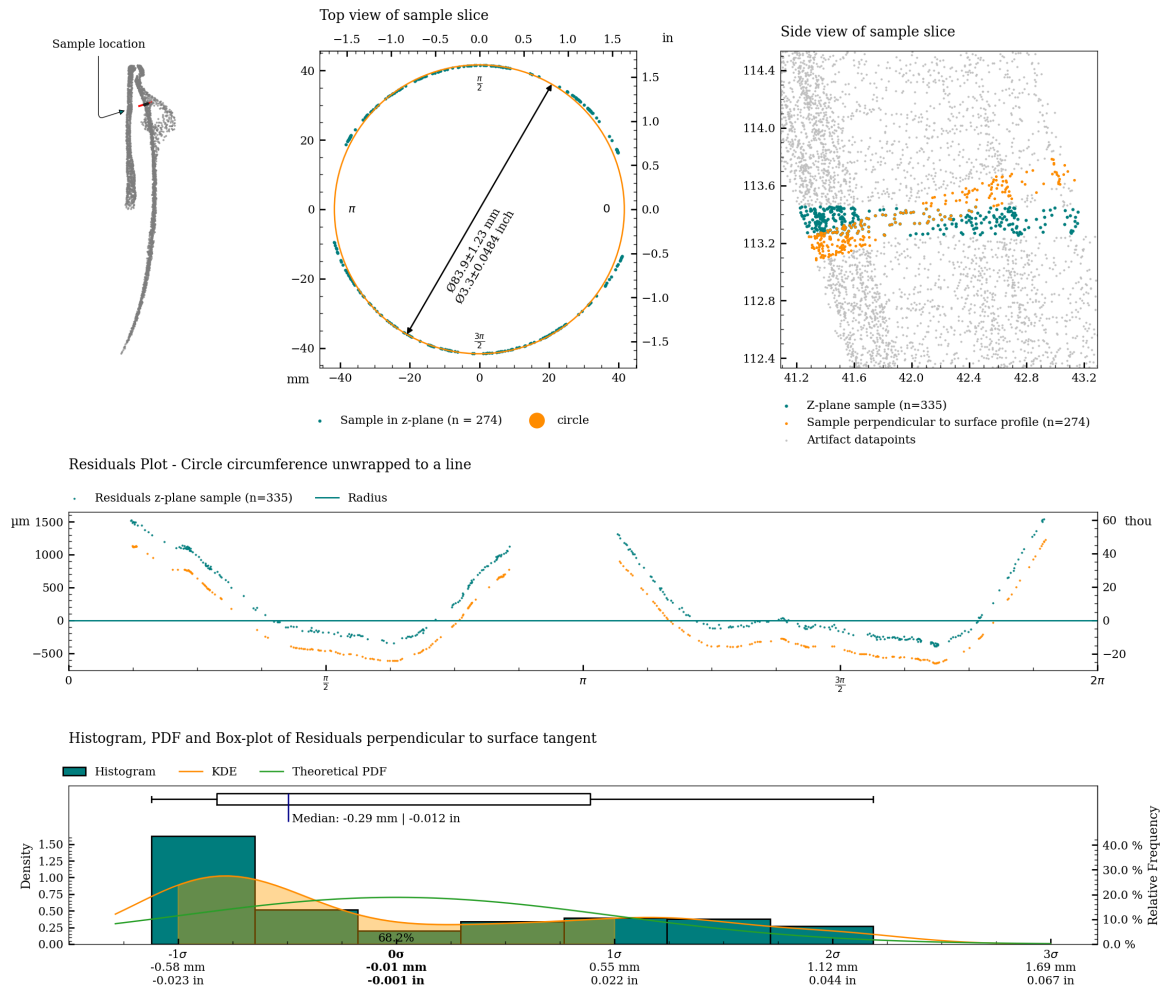


Figure 6: Charts with statistics for the measurement of c01.

Graphical overview of circularity measurement c02

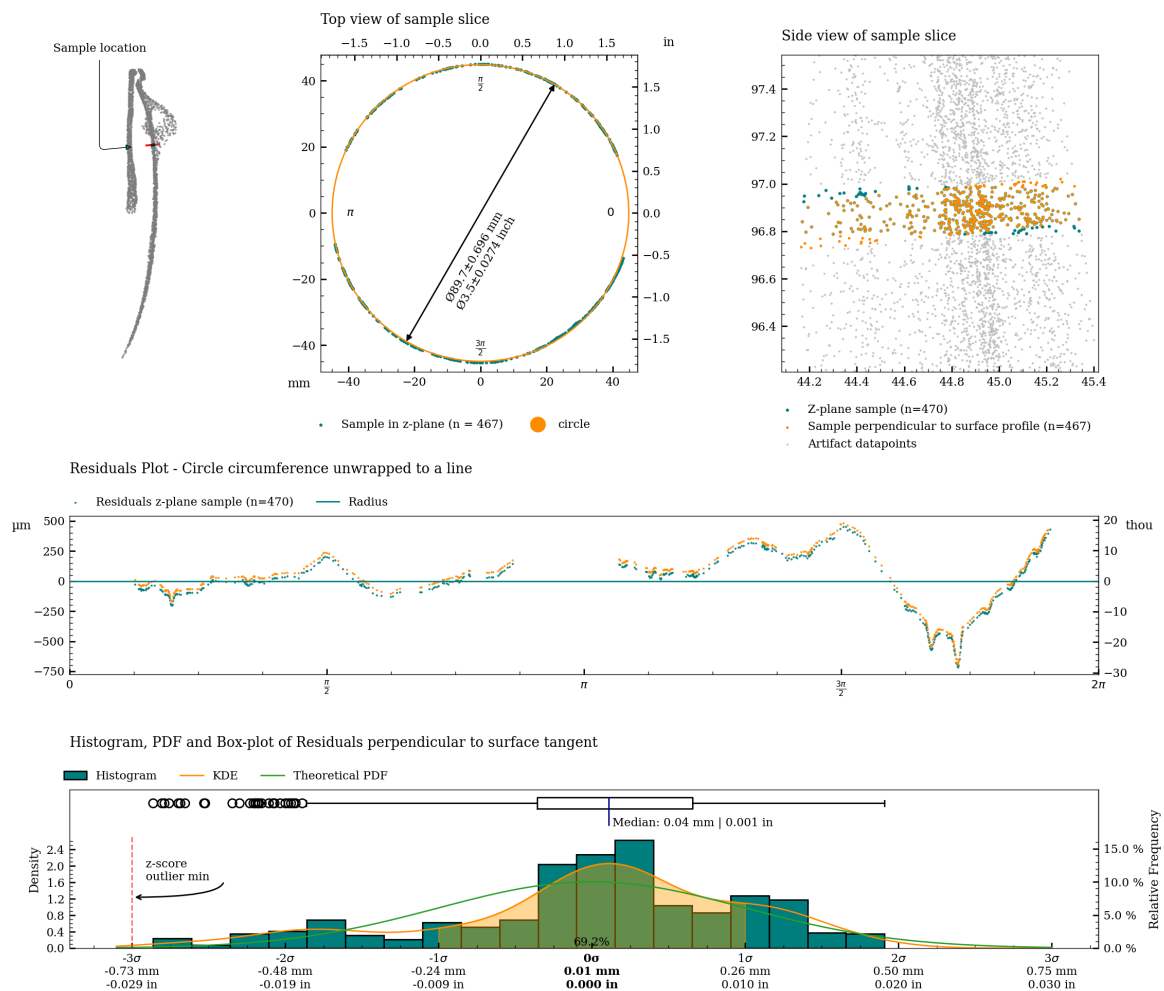


Figure 7: Charts with statistics for the measurement of c02.

Graphical overview of circularity measurement c03

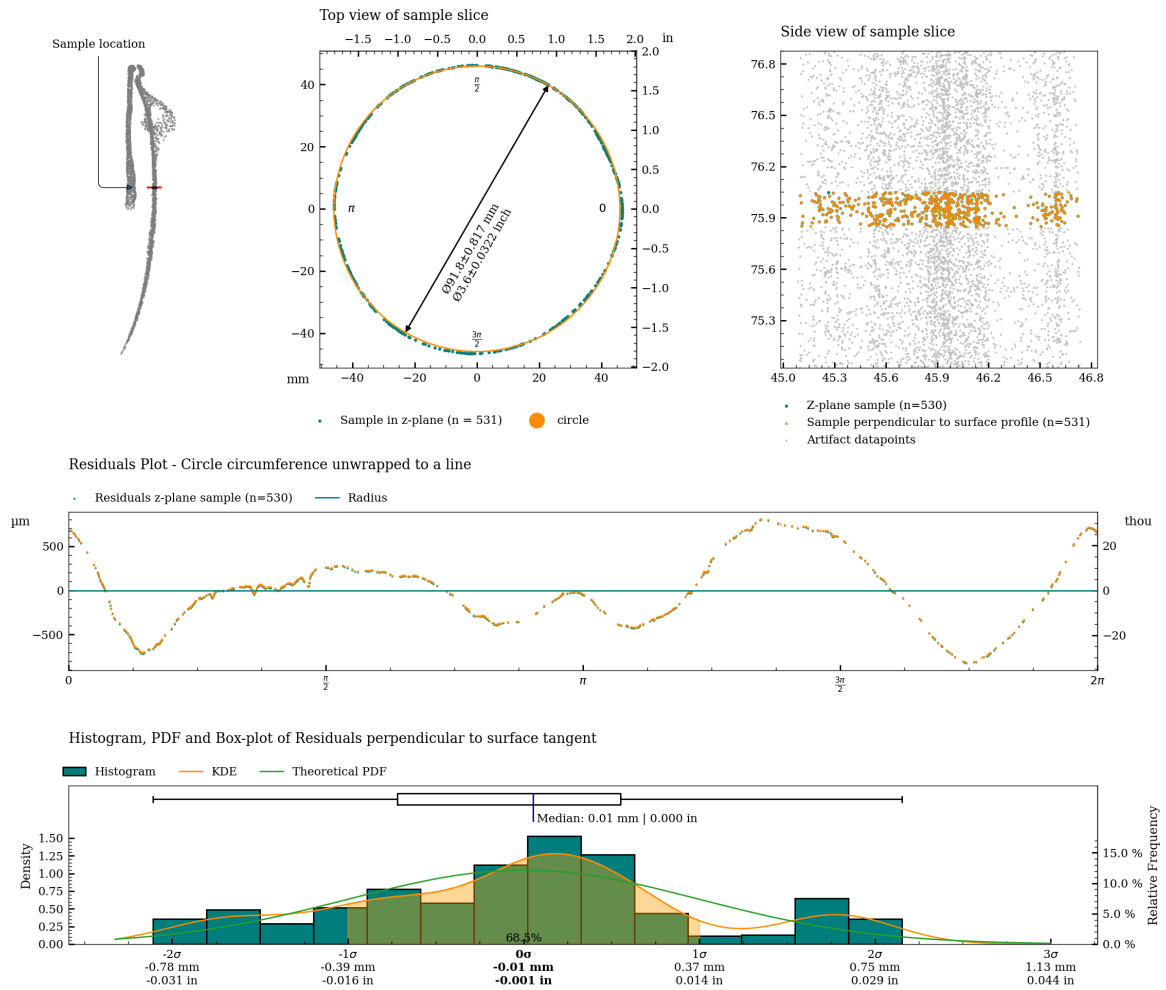


Figure 8: Charts with statistics for the measurement of c03.

Graphical overview of circularity measurement c04

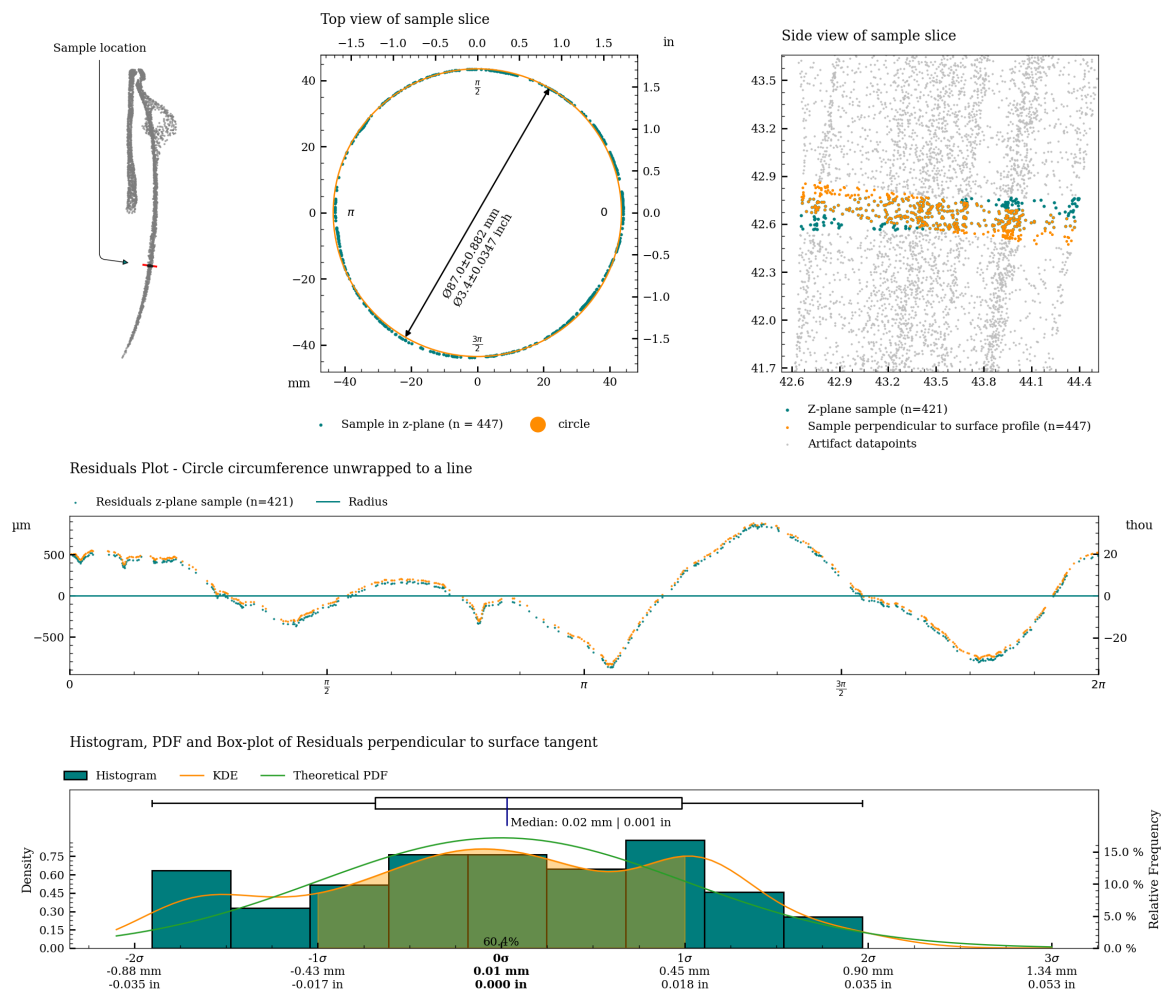


Figure 9: Charts with statistics for the measurement of c04.

Graphical overview of circularity measurement c05

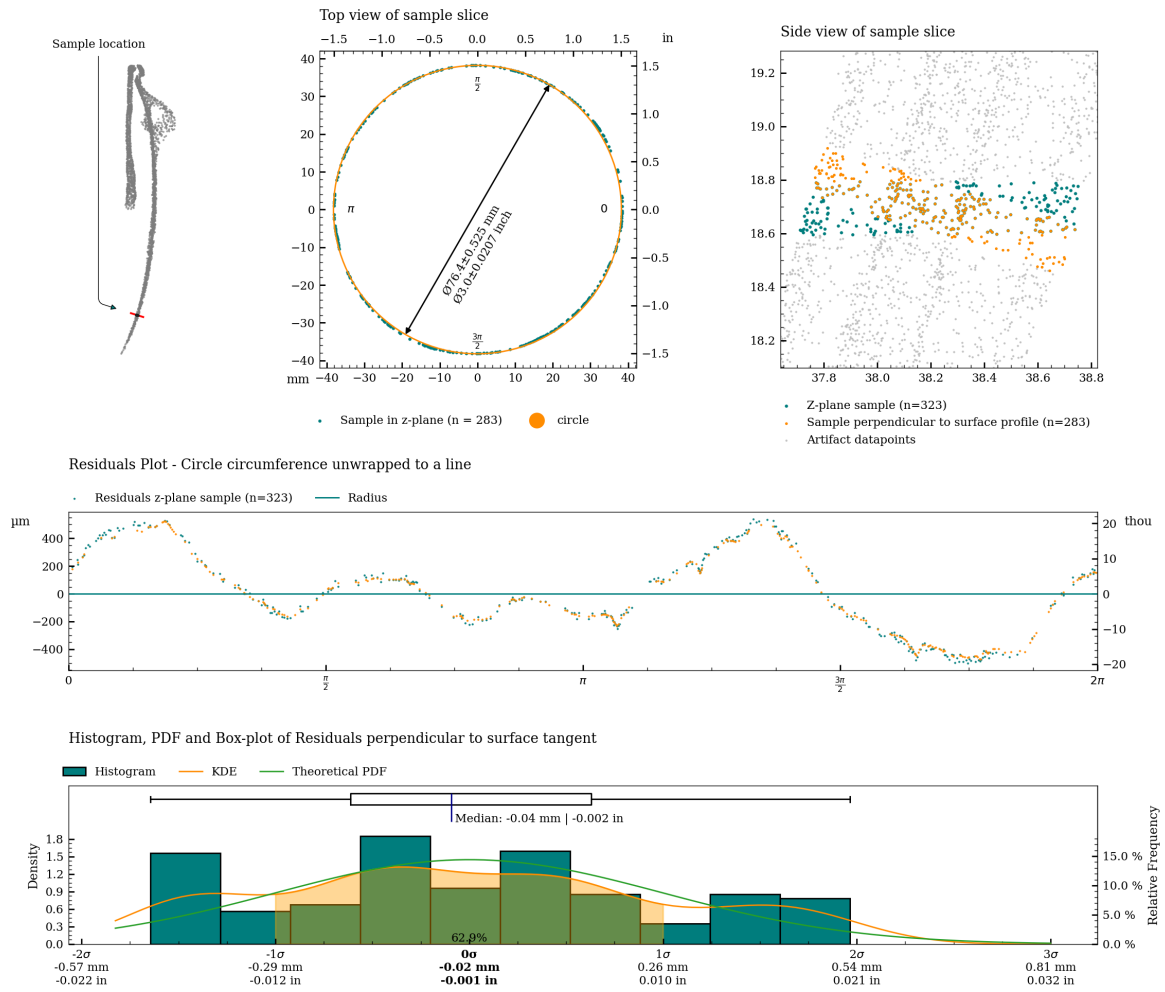


Figure 10: Charts with statistics for the measurement of c05.

Graphical overview of circularity measurement c06

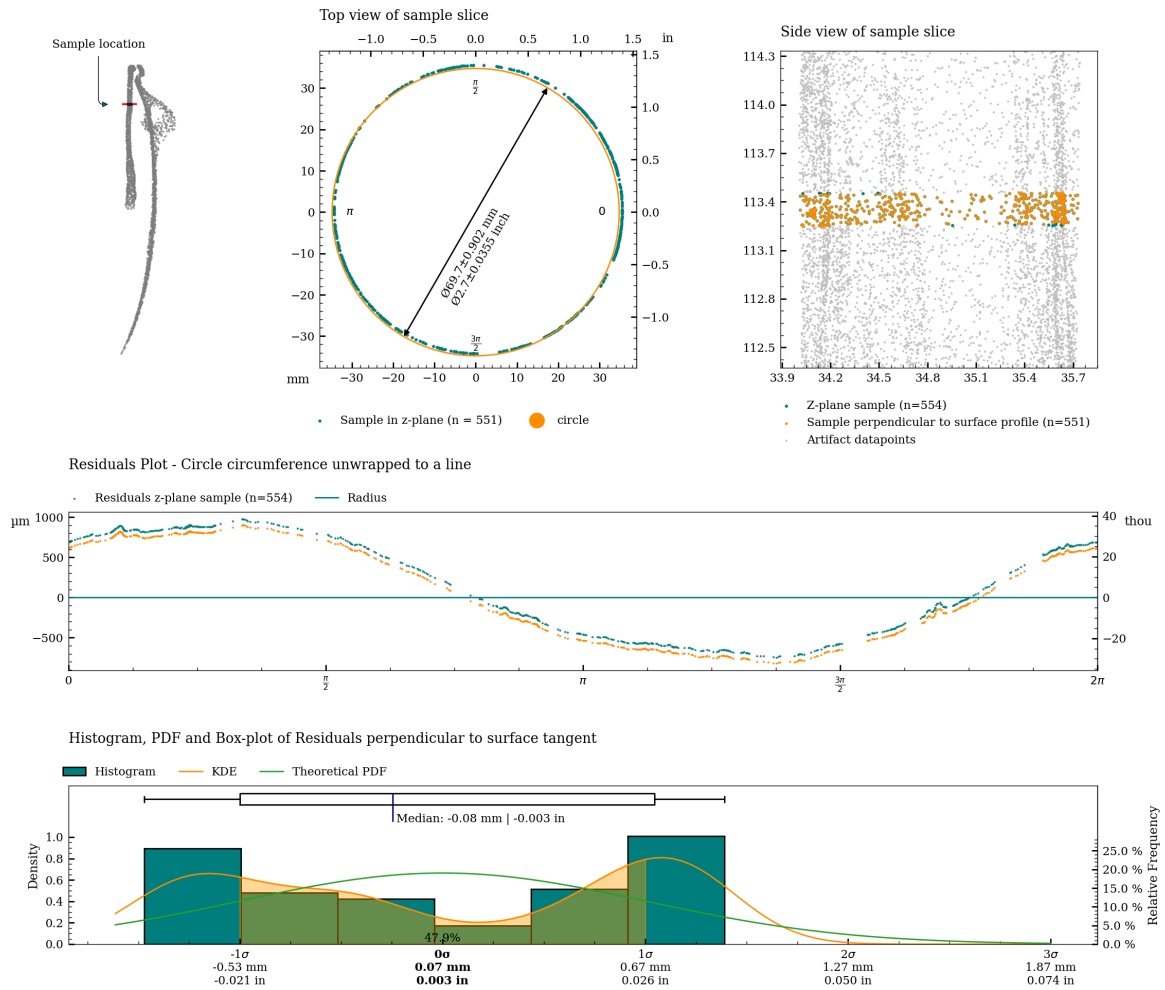


Figure 11: Charts with statistics for the measurement of c06.

Graphical overview of circularity measurement c06_s

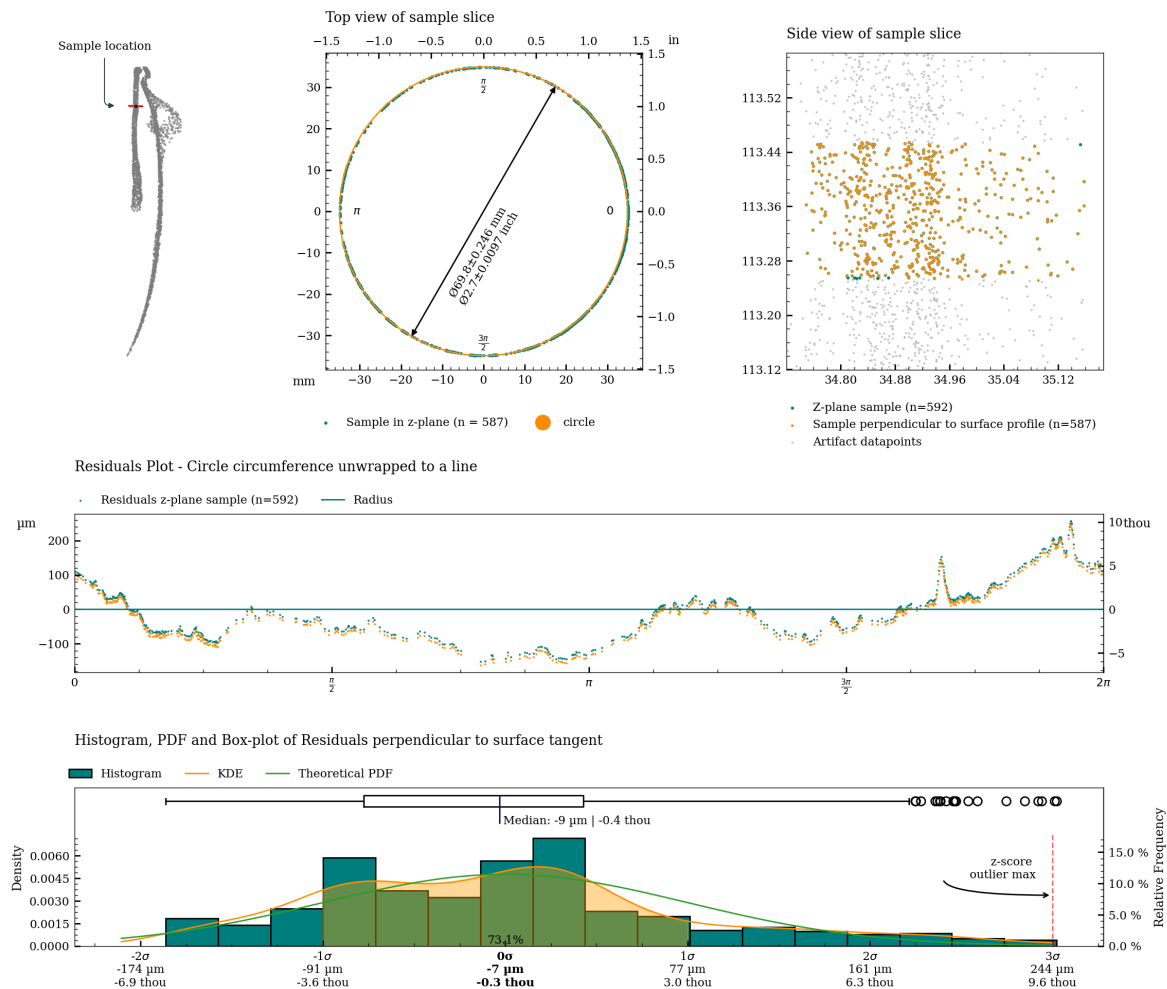


Figure 12: Charts with statistics for the measurement of c06_s.

Graphical overview of circularity measurement c07

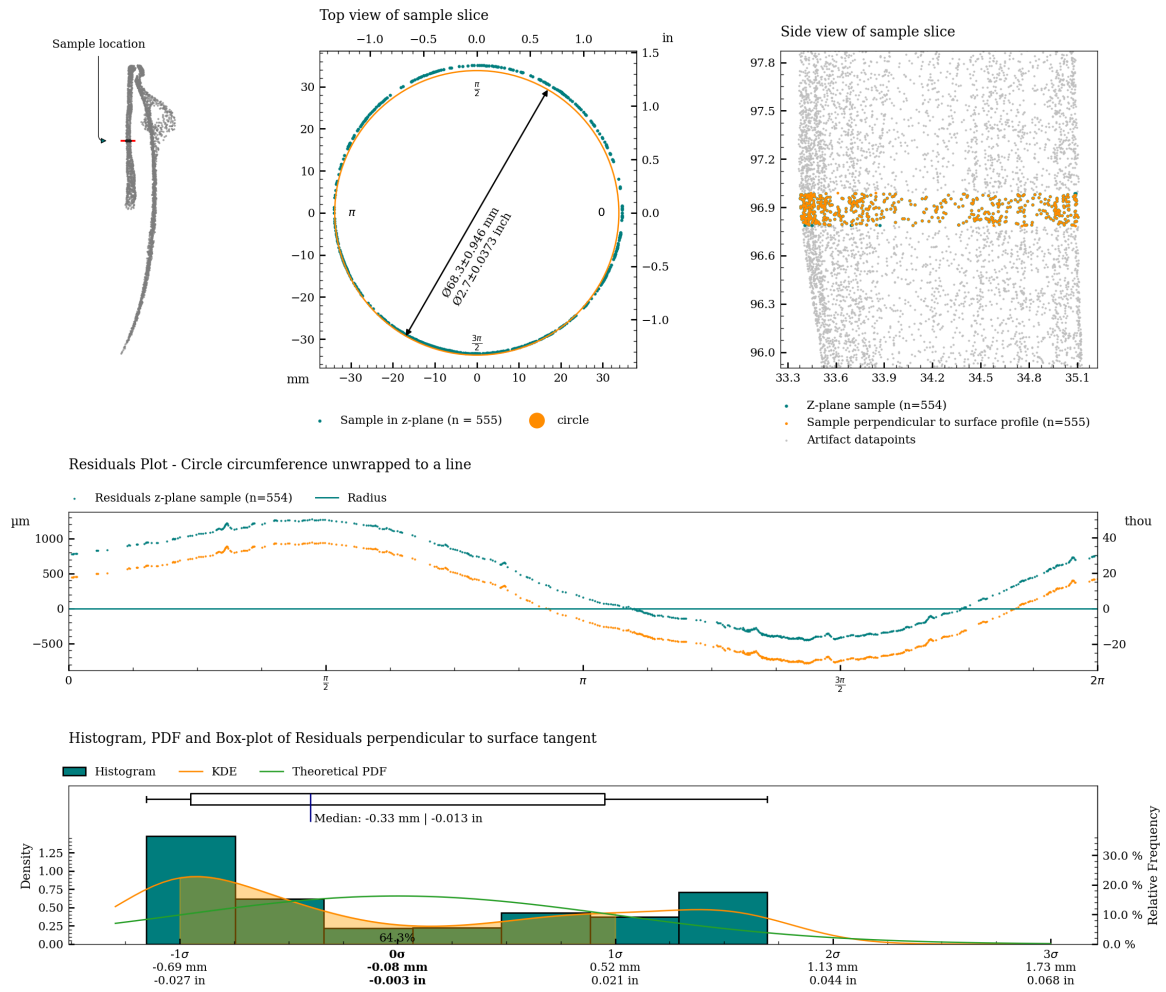


Figure 13: Charts with statistics for the measurement of c07.

Graphical overview of circularity measurement c07_s

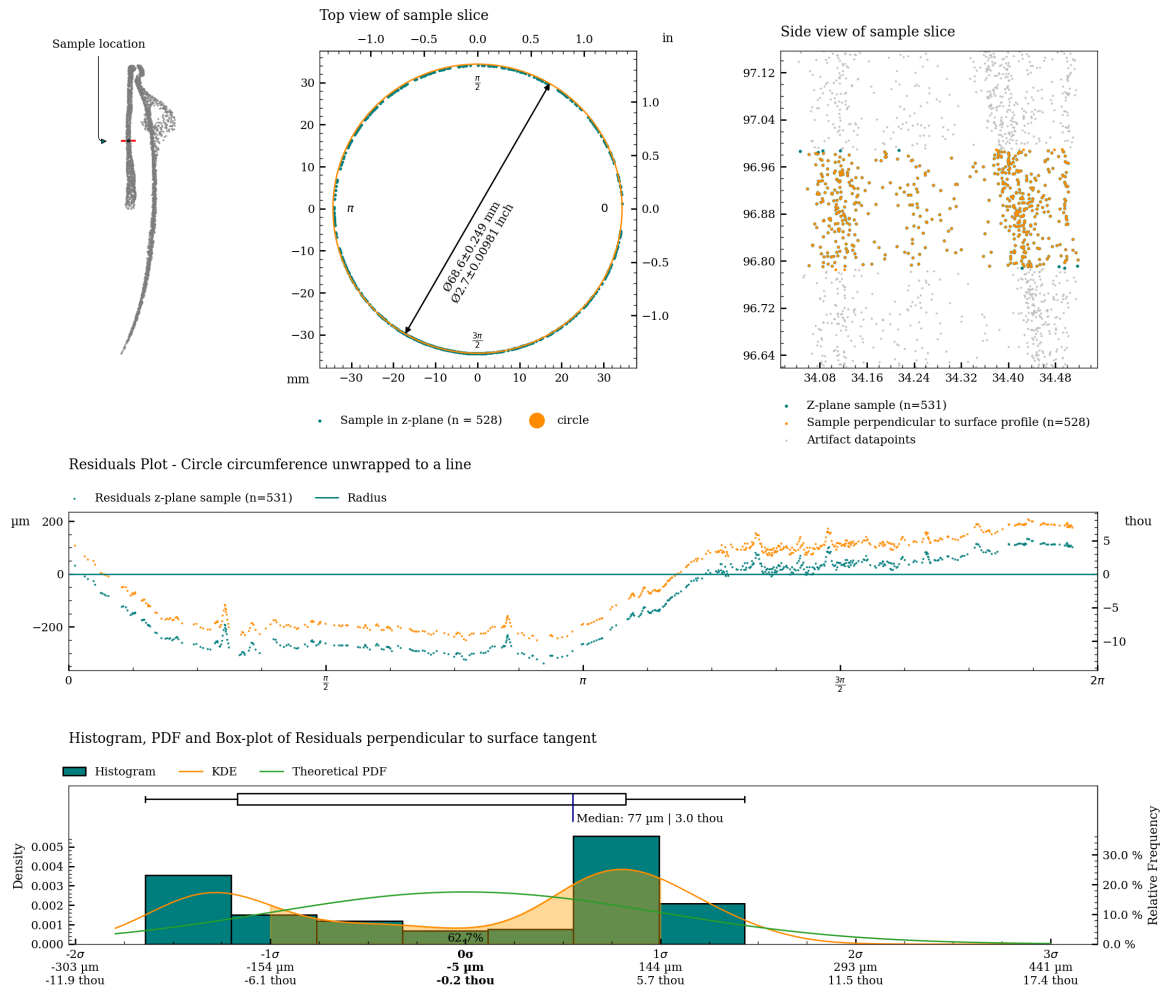


Figure 14: Charts with statistics for the measurement of c07_s.

Table 2 shows statistical measures of the circularity of the vessel, measured along the full height (areas on the artifact scan containing damaged parts have been removed to the best extent possible to reduce the influence of the measurement).

Metric											
Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	mm	mm	mm	mm	mm	mm	mm	mm	mm		
Exterior	1.622	0.771	2.478	0.227	0.105	0.375	0.403	0.188	0.628	588	0.200
Interior	1.779	1.605	3.794	0.262	0.207	0.575	0.617	0.539	1.333	266	0.200
Interior separate	0.537	0.192	1.151	0.074	0.024	0.164	0.158	0.045	0.347	267	0.200

Imperial											
Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	in	in	in	in	in	in	in	in	in		
Exterior	1.622	0.771	2.478	0.227	0.105	0.375	0.403	0.188	0.628	588	0.200
Interior	1.779	1.605	3.794	0.262	0.207	0.575	0.617	0.539	1.333	266	0.200
Interior separate	0.537	0.192	1.151	0.074	0.024	0.164	0.158	0.045	0.347	267	0.200

Table 2: Perpendicular Circularity analysis of MV029.

Circularity analysis of exterior surface

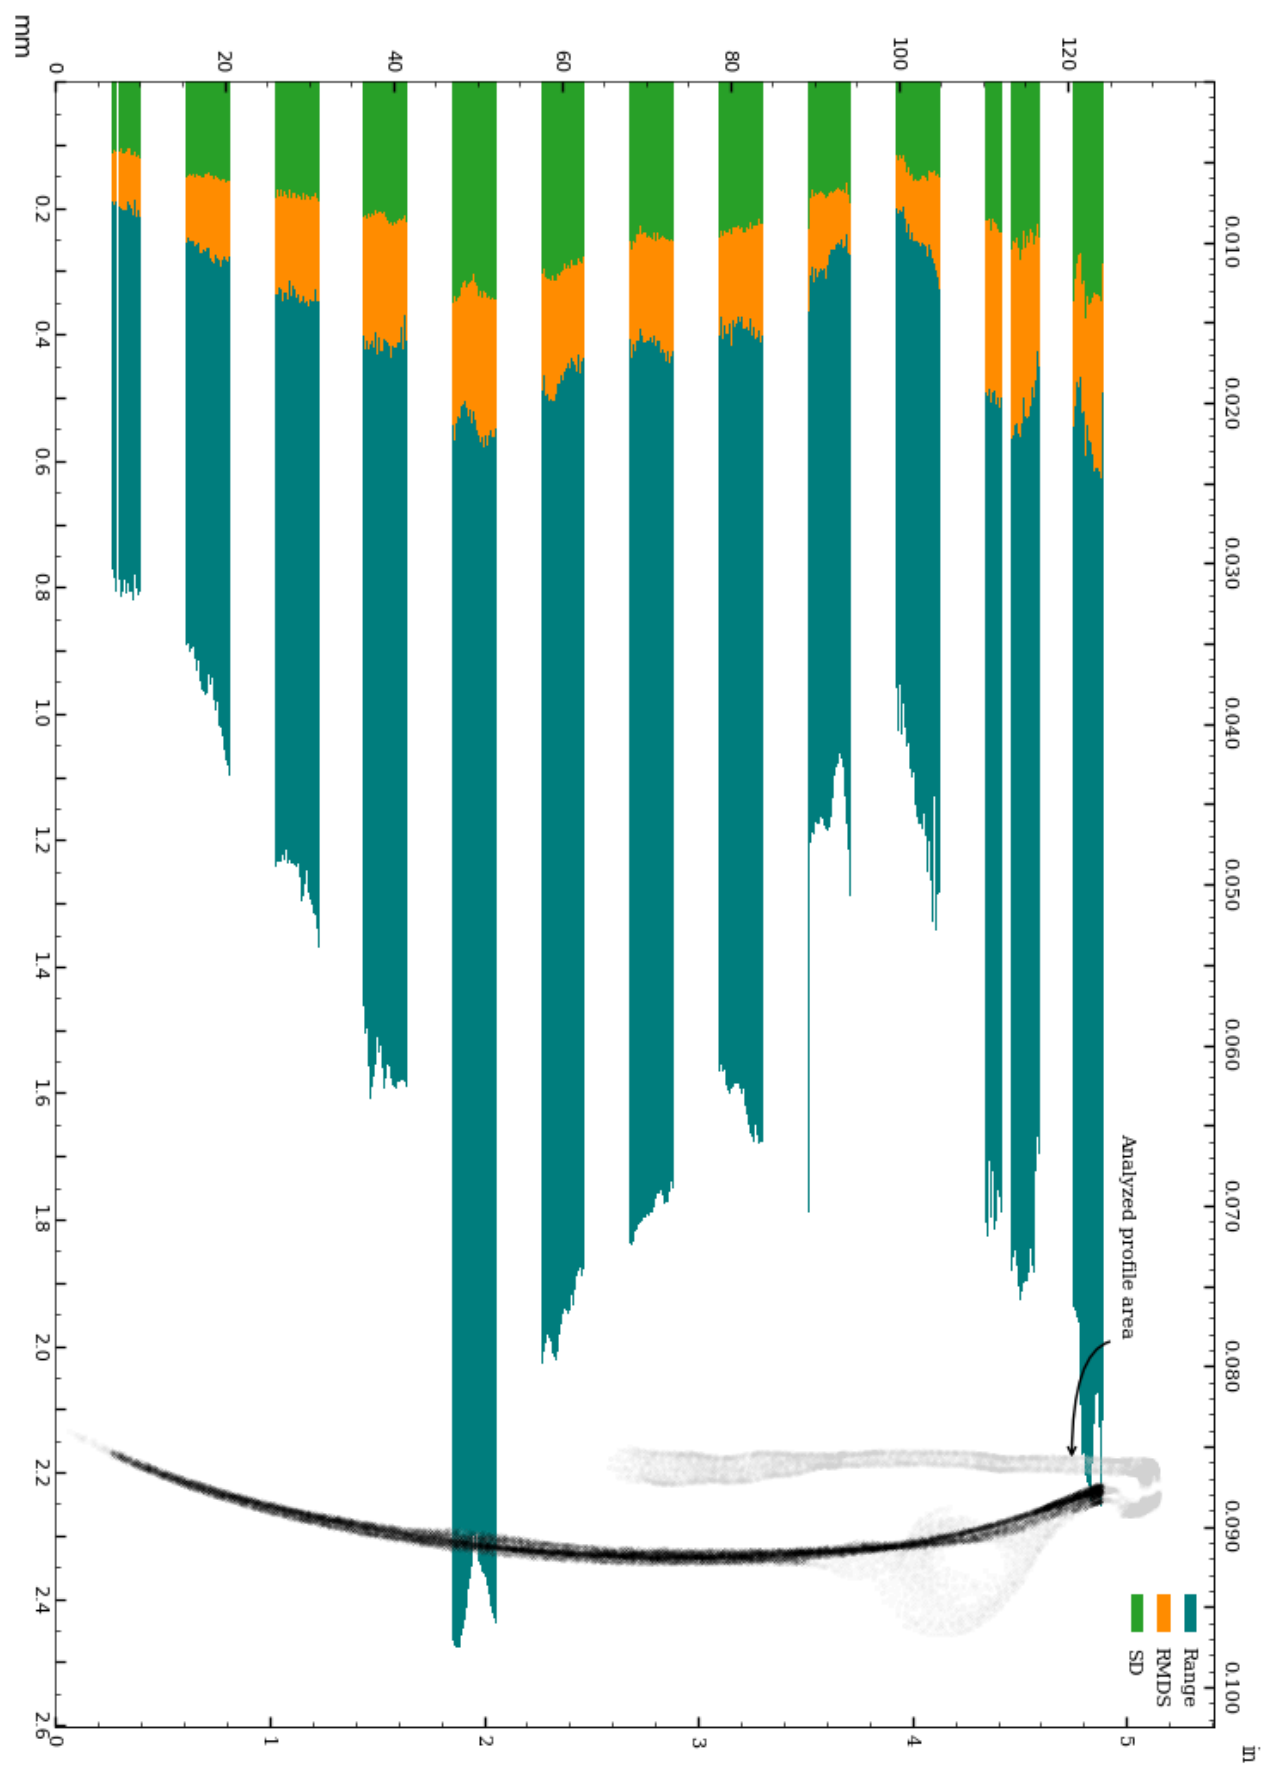


Figure 15: Circularity of exterior surface.

Circularity analysis of exterior surface, Standard Deviation and Root Mean Squared Deviation

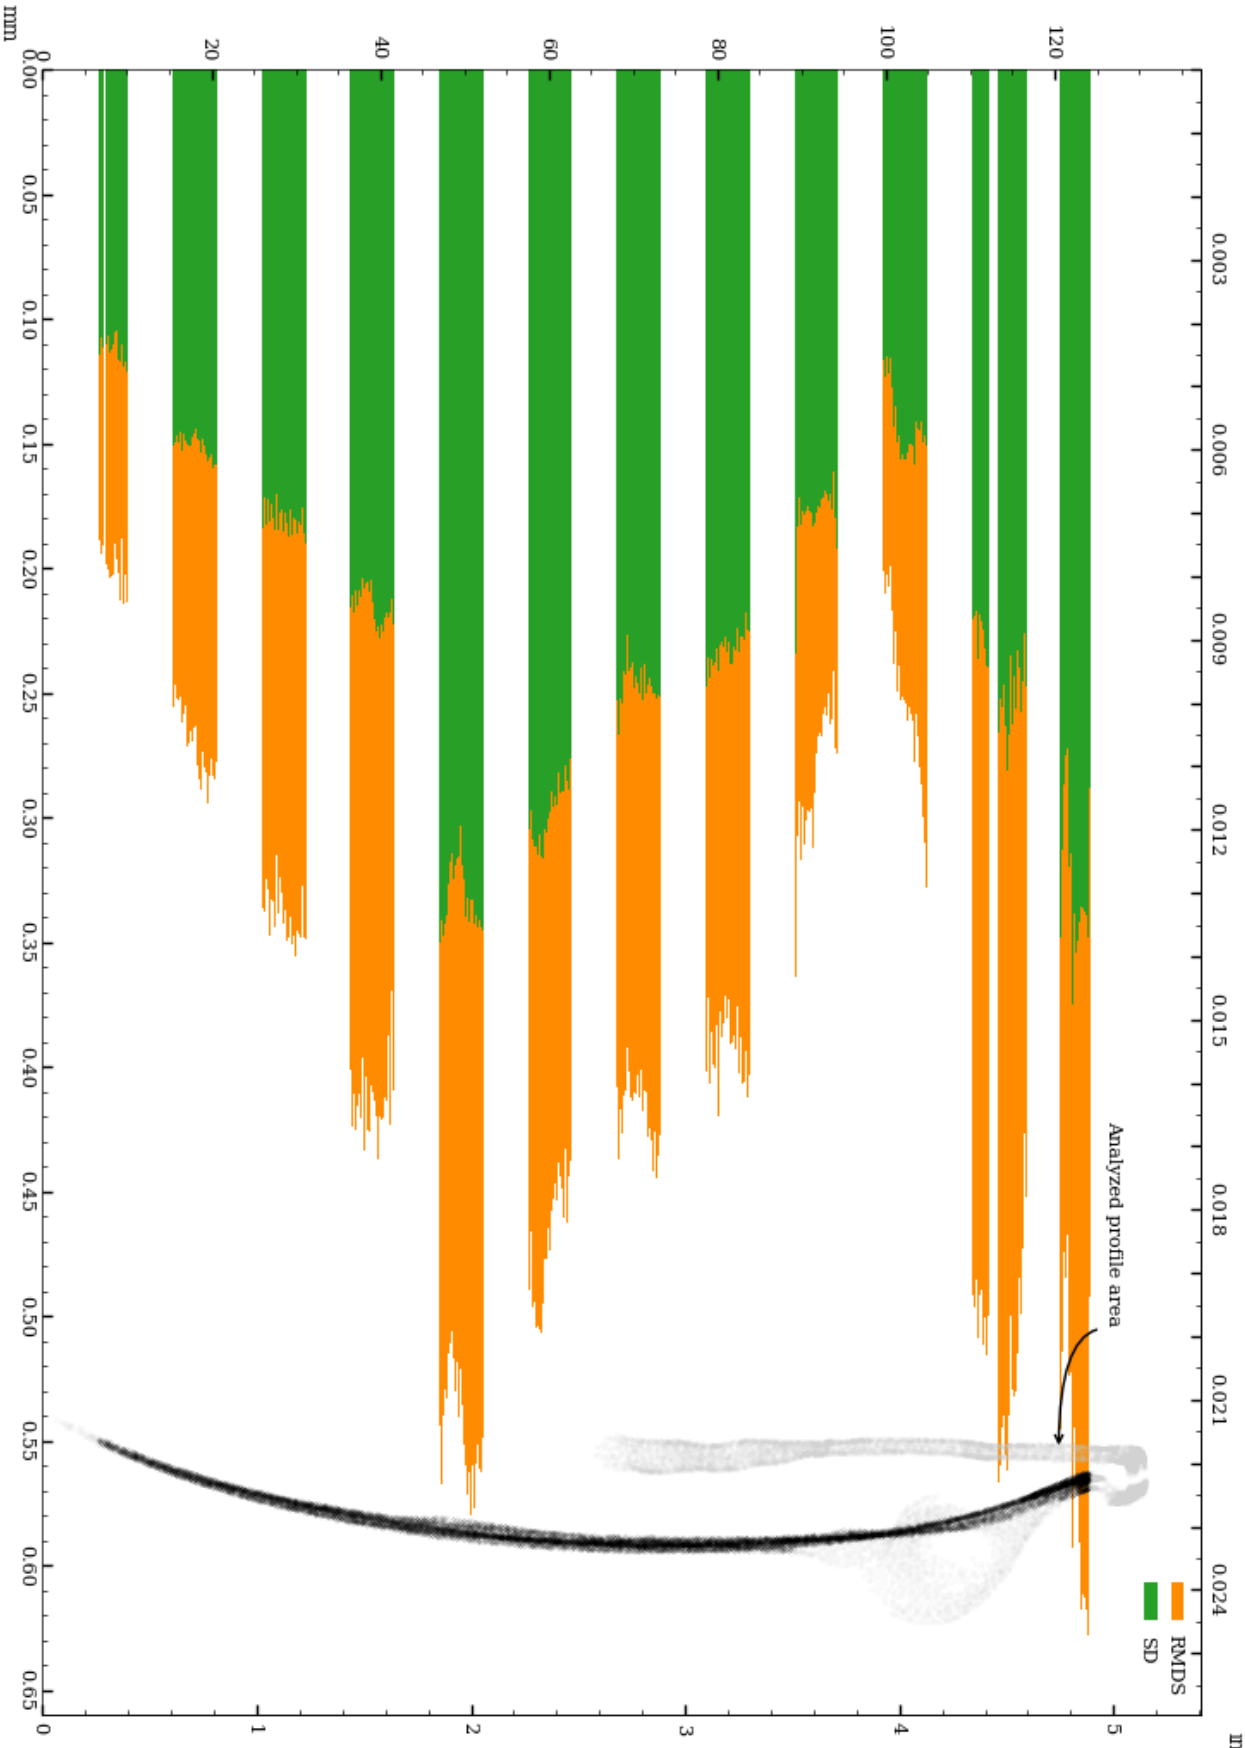


Figure 16: Vessel circularity of exterior surface, standard deviation and median absolute deviation.

The distributions of the circularity measurements across 588 slices of the exterior surface are shown below.

Range measurement distribution across 588 slices of exterior surface

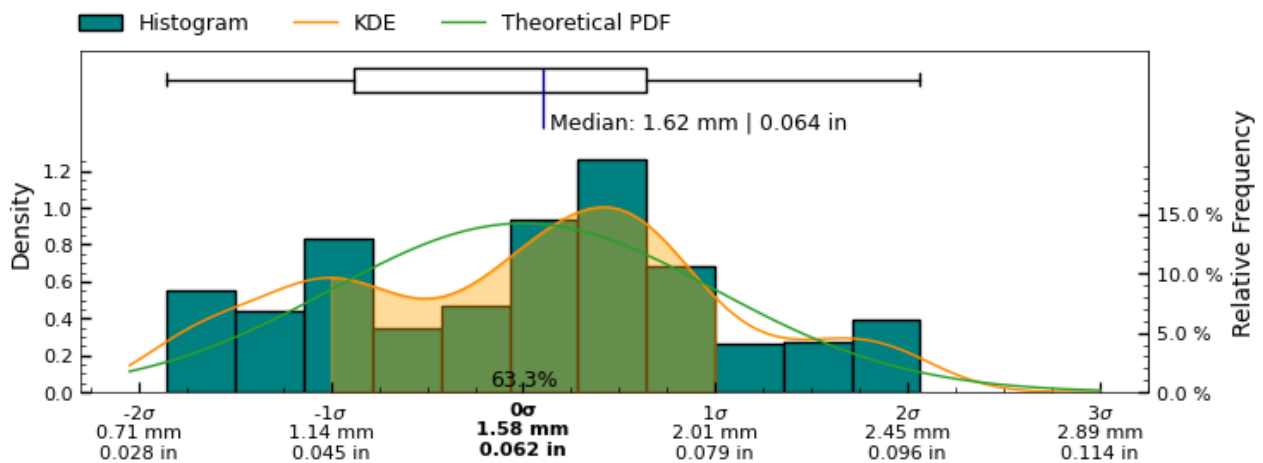


Figure 17: Range measurement distribution across measured slices of exterior surface

Standard Deviation measurement distribution across 588 slices of exterior surface

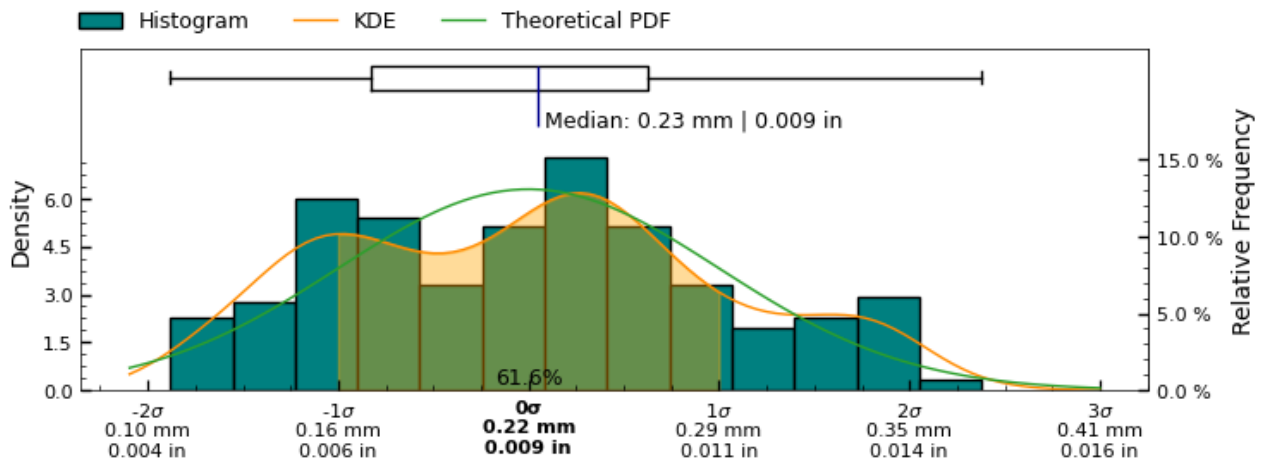


Figure 18: Standard Deviation measurement distribution across measured slices of " + exterior + " surface

Root Mean Squared Deviation measurement distribution across 588 slices of exterior surface

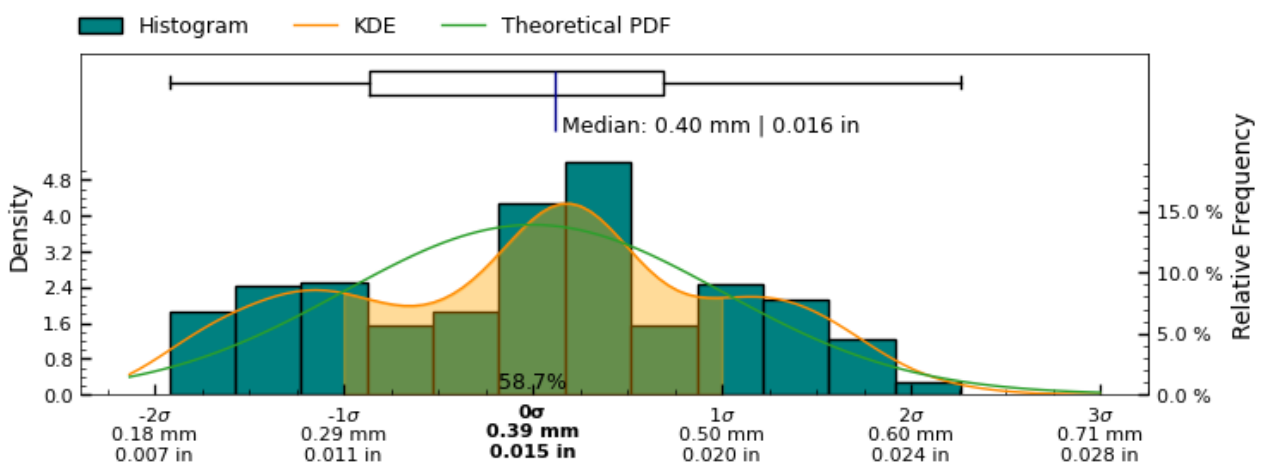


Figure 19: Root Mean Squared Deviation measurement distribution across measured slices of exterior surface

Circularity analysis of interior surface

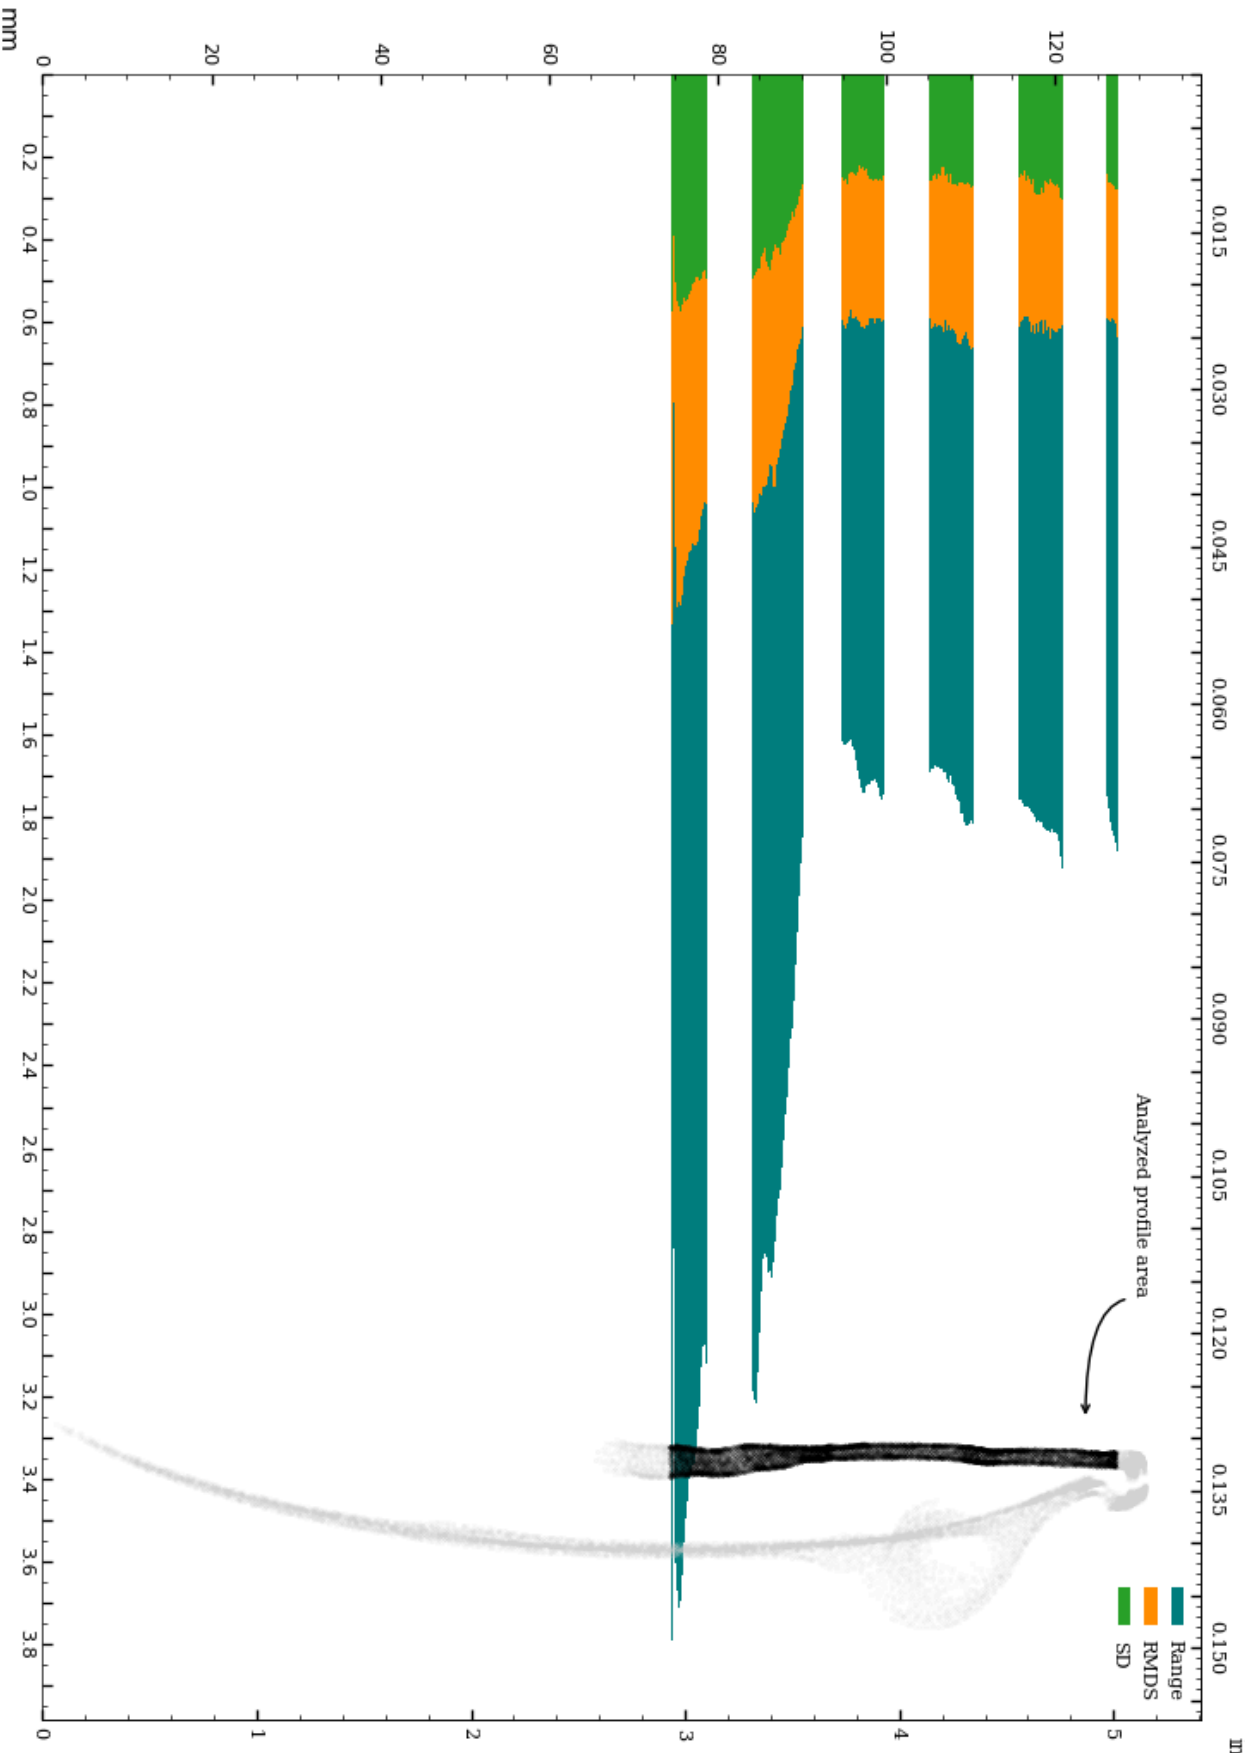


Figure 20: Circularity of interior surface.

Circularity analysis of interior surface, Standard Deviation and Root Mean Squared Deviation

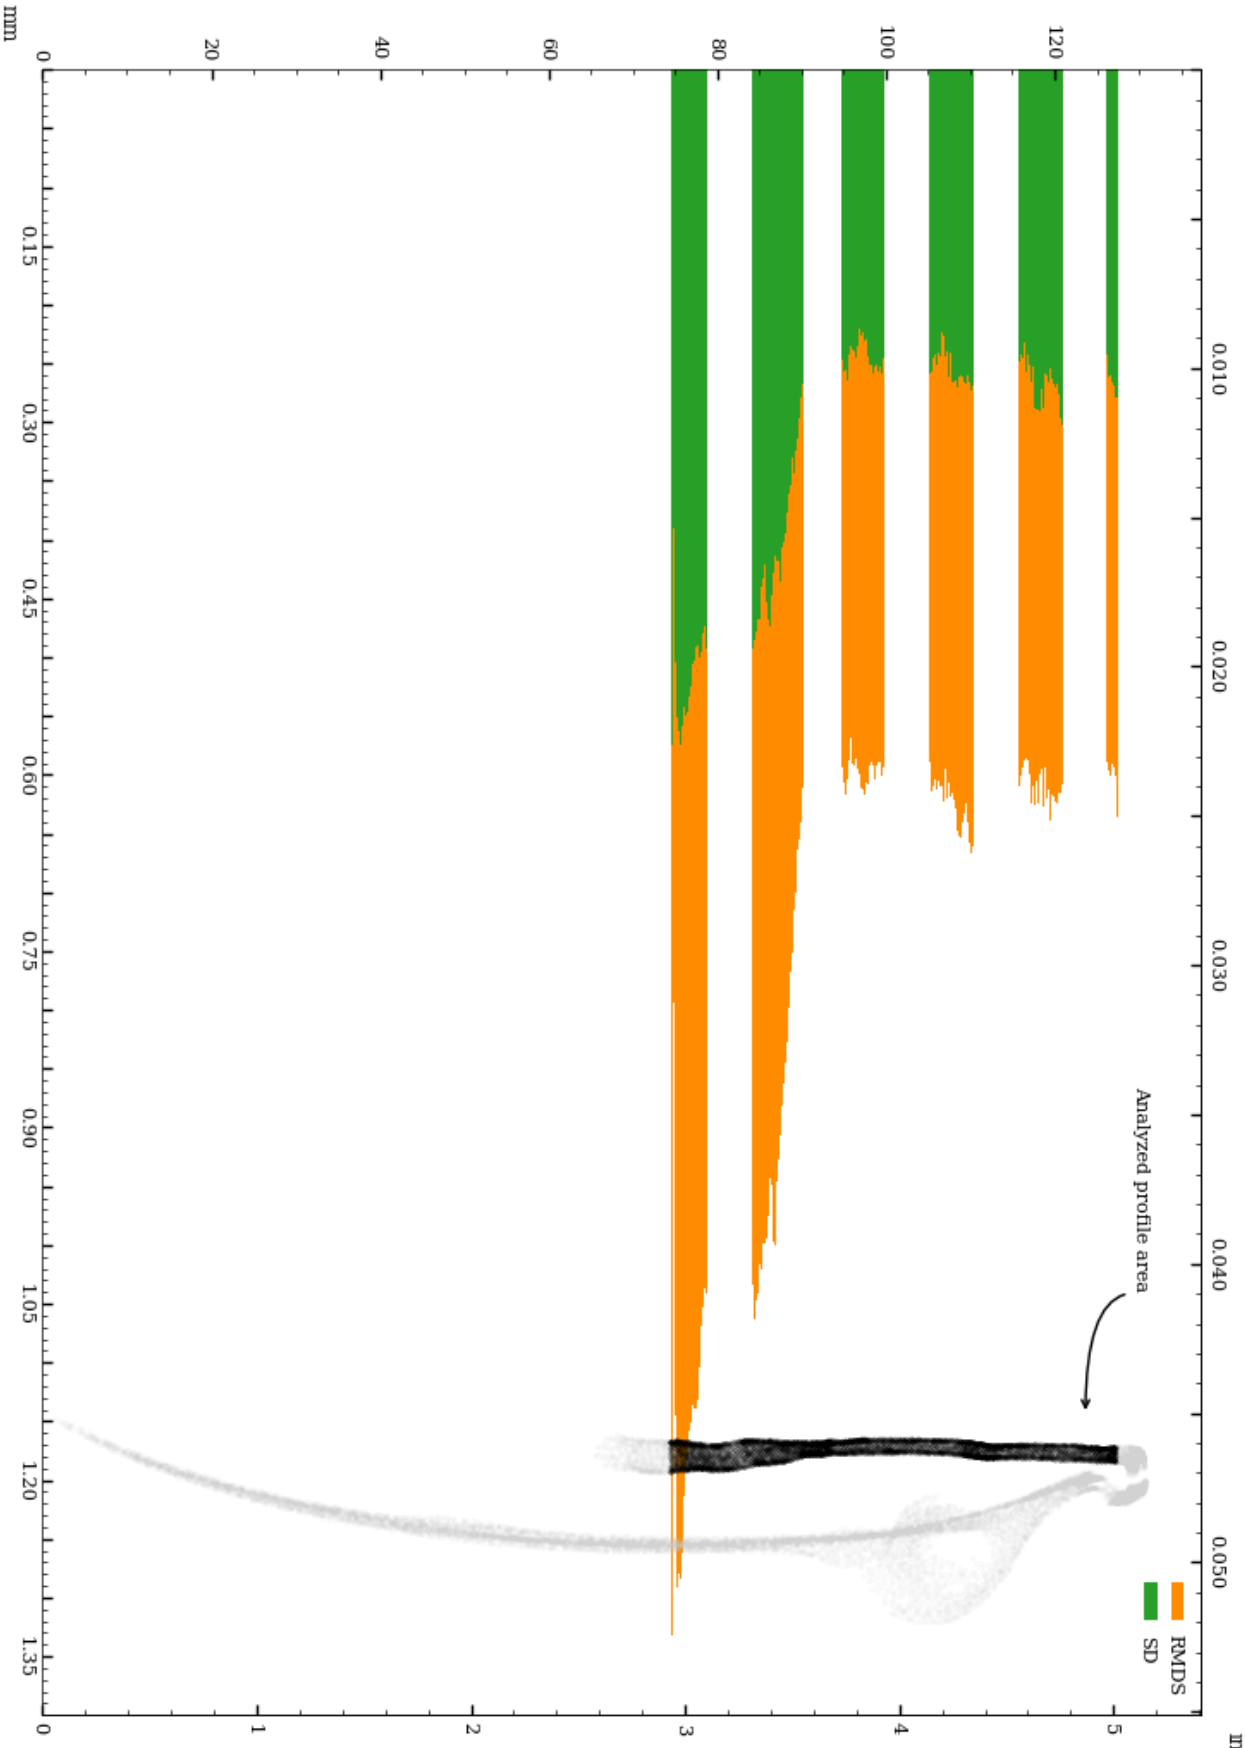


Figure 21: Vessel circularity of interior surface, standard deviation and median absolute deviation.

The distributions of the circularity measurements across 266 slices of the interior surface are shown below.

Range measurement distribution across 266 slices of interior surface

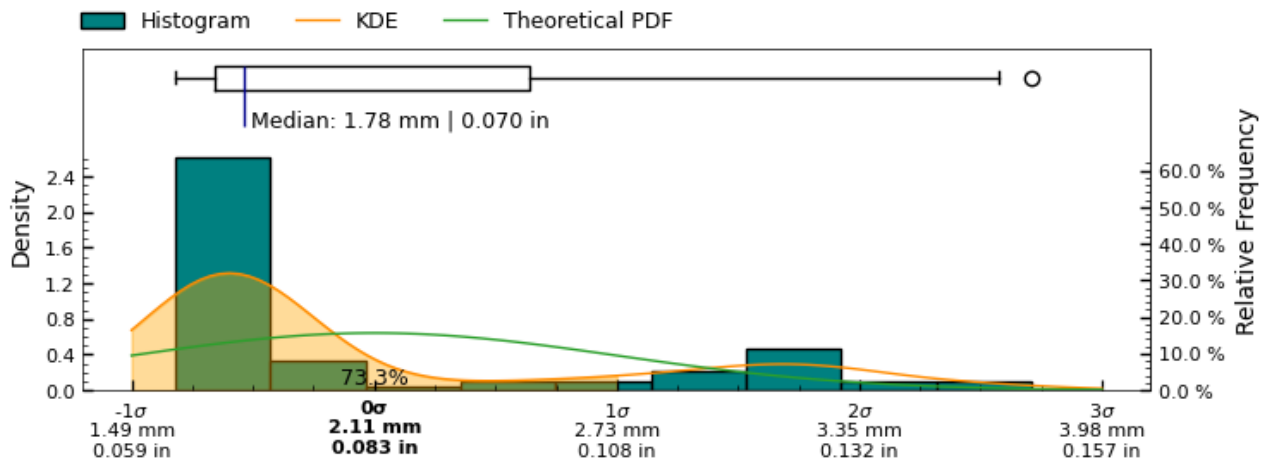


Figure 22: Range measurement distribution across measured slices of interior surface

Standard Deviation measurement distribution across 266 slices of interior surface

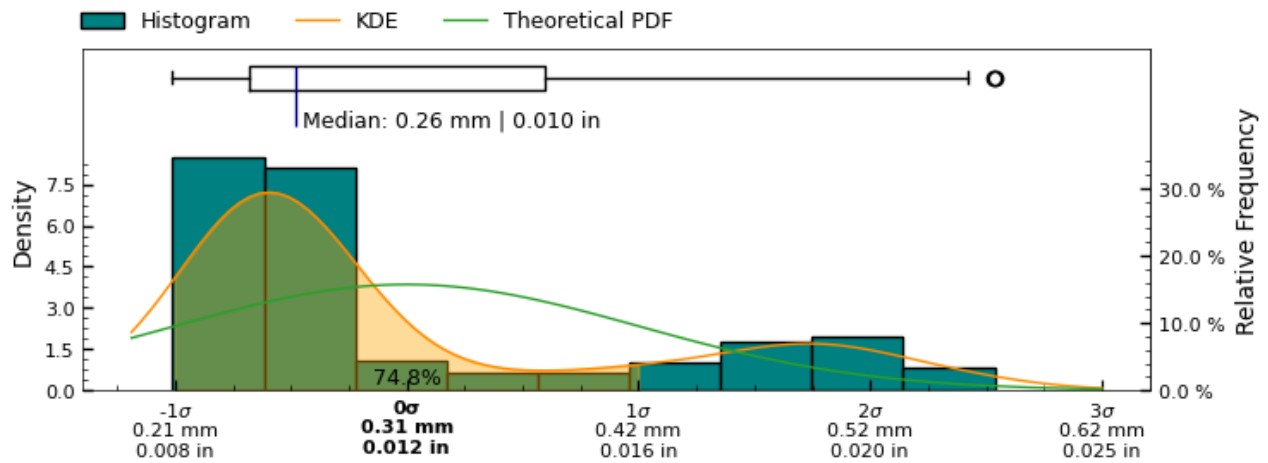


Figure 23: Standard Deviation measurement distribution across measured slices of " + interior + " surface

Root Mean Squared Deviation measurement distribution across 266 slices of interior surface

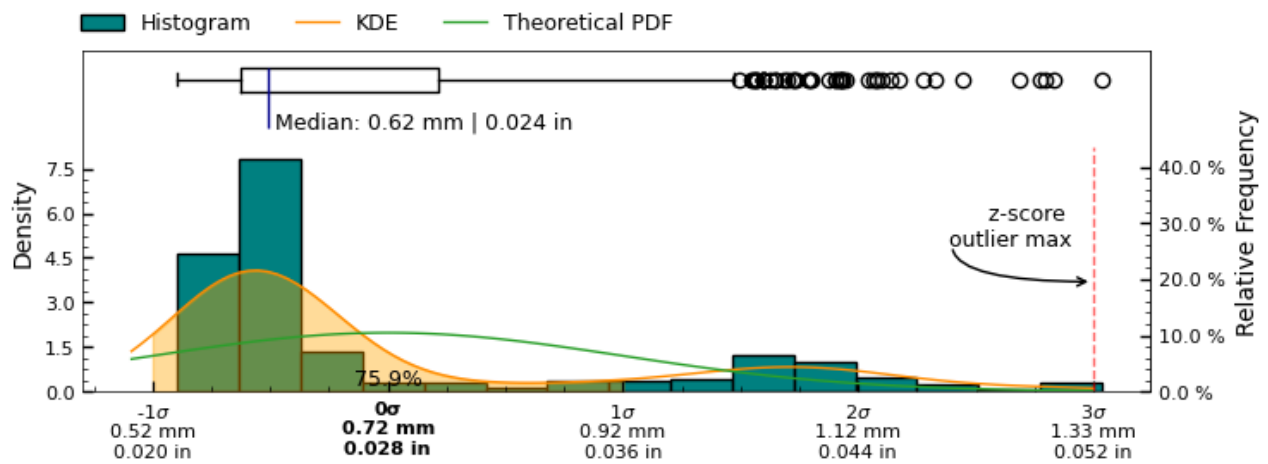


Figure 24: Root Mean Squared Deviation measurement distribution across measured slices of interior surface

Circularity analysis of interior separately aligned surface

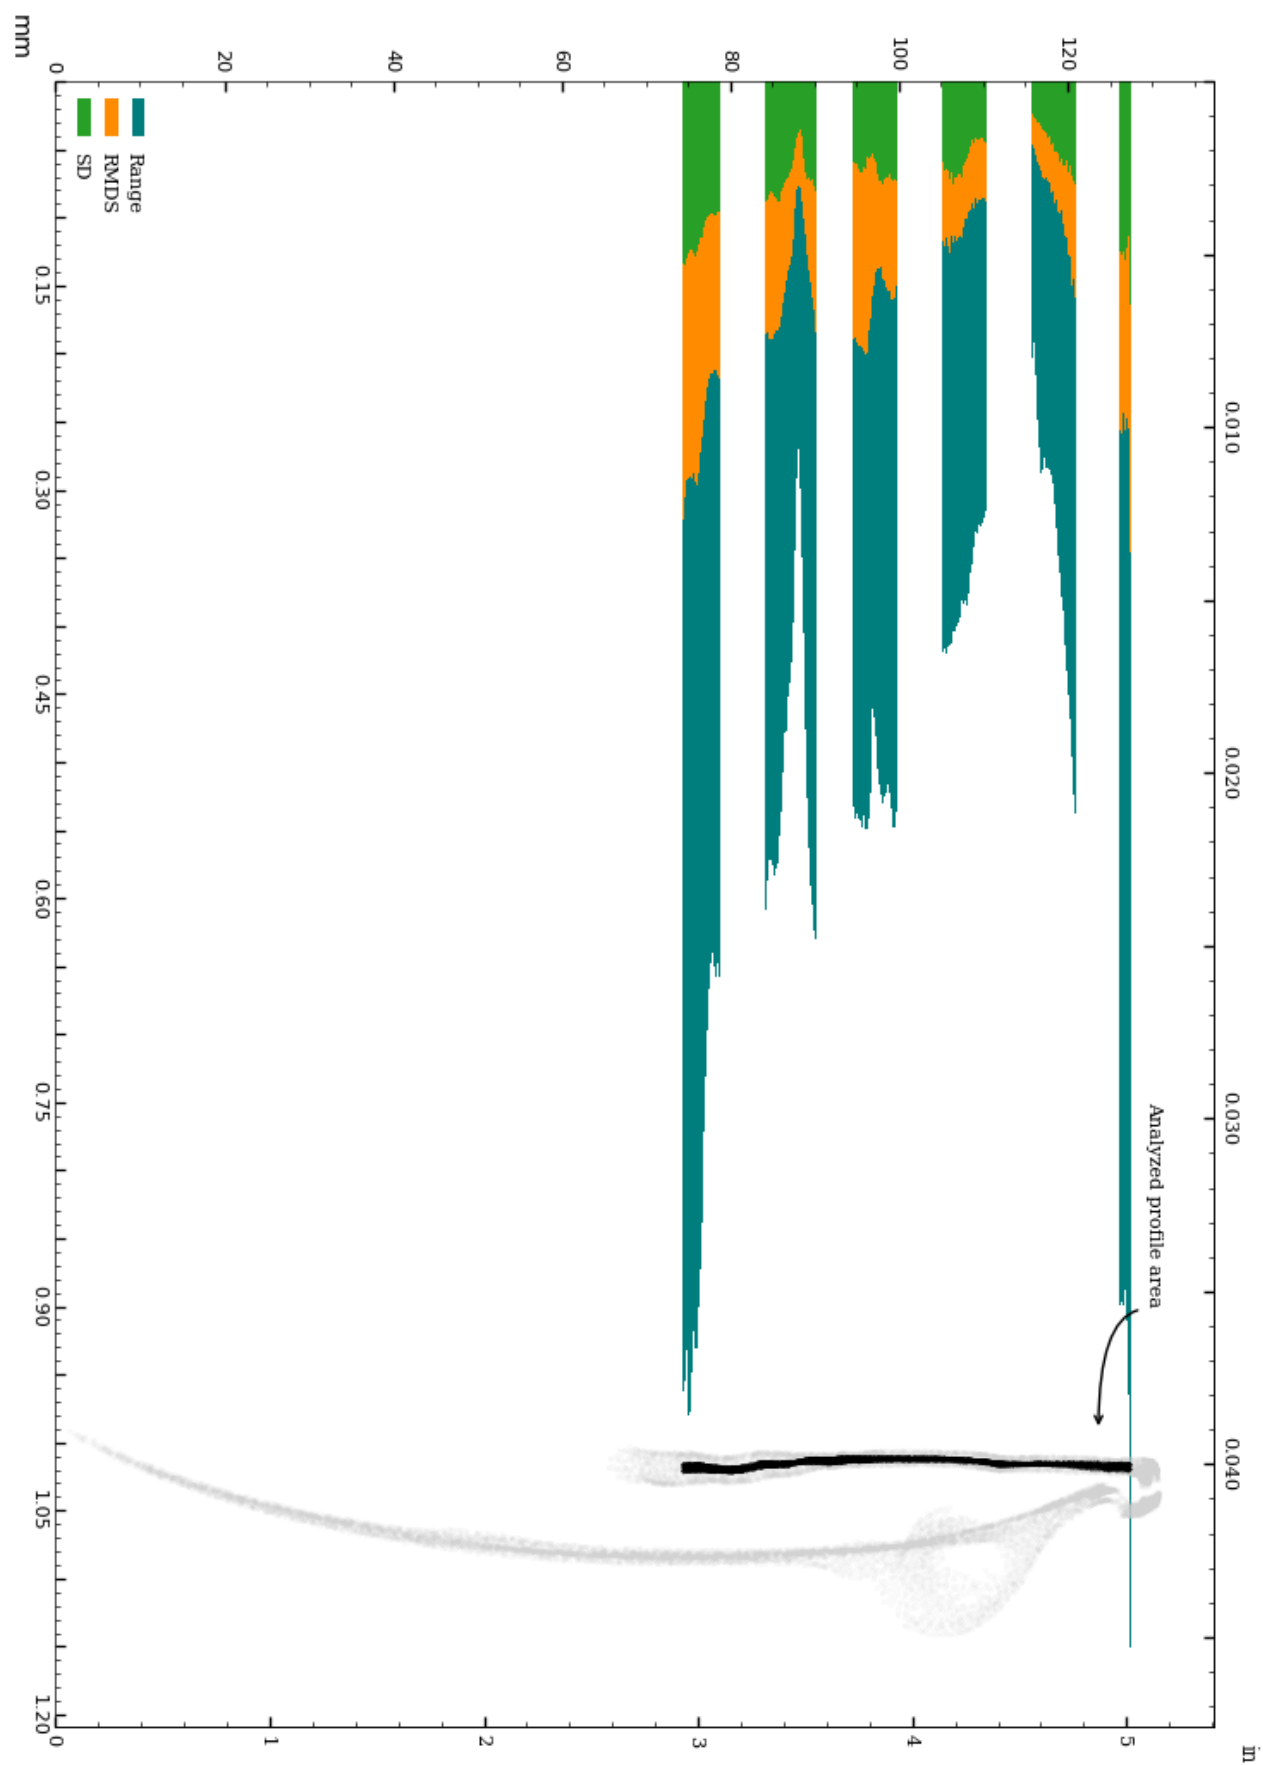


Figure 25: Circularity of interior_separate surface.

Circularity analysis of interior separately aligned surface, Standard Deviation and Root Mean Squared Deviation

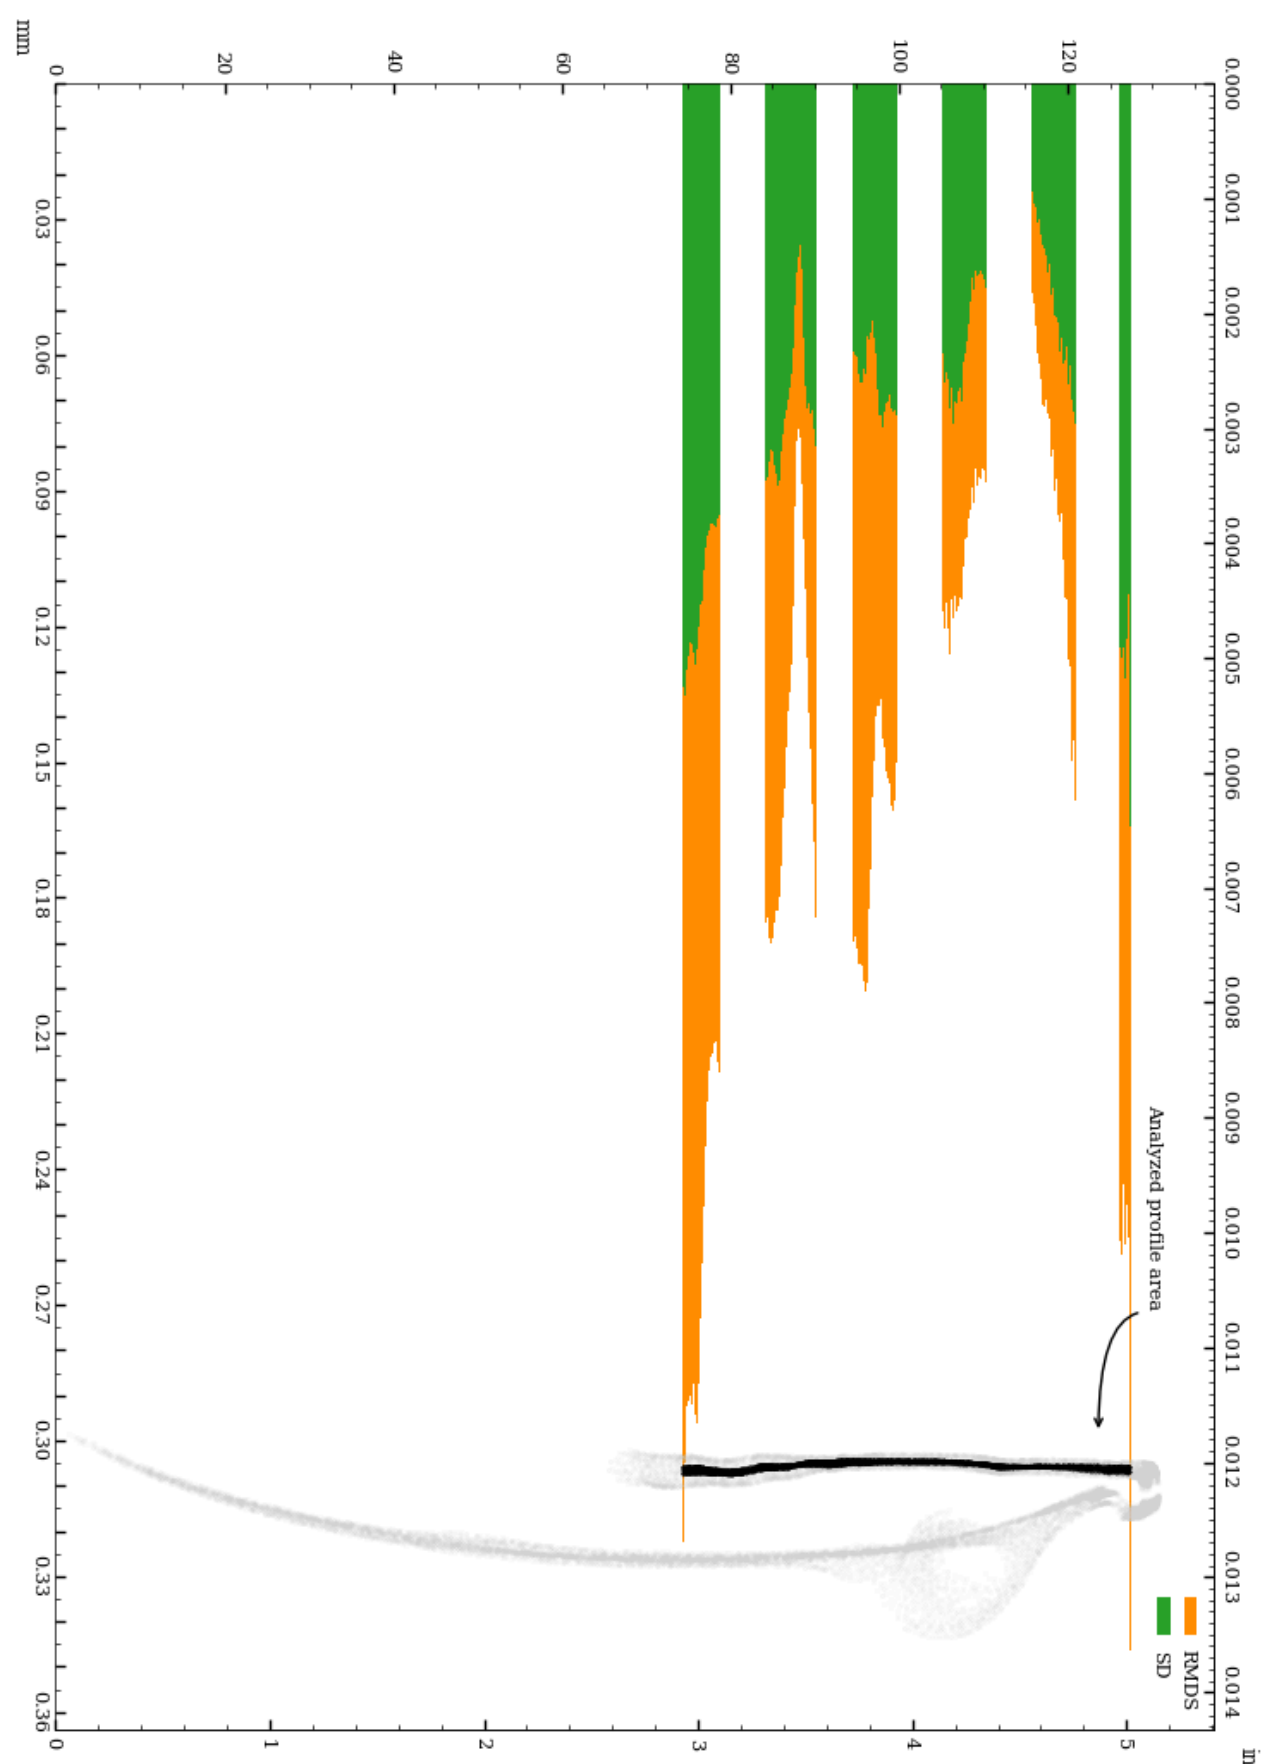


Figure 26: Vessel circularity of interior_separate surface, standard deviation and median absolute deviation.

The distributions of the circularity measurements across 267 slices of the interior_separate surface are shown below.

Range measurement distribution across 267 slices of interior separately aligned surface

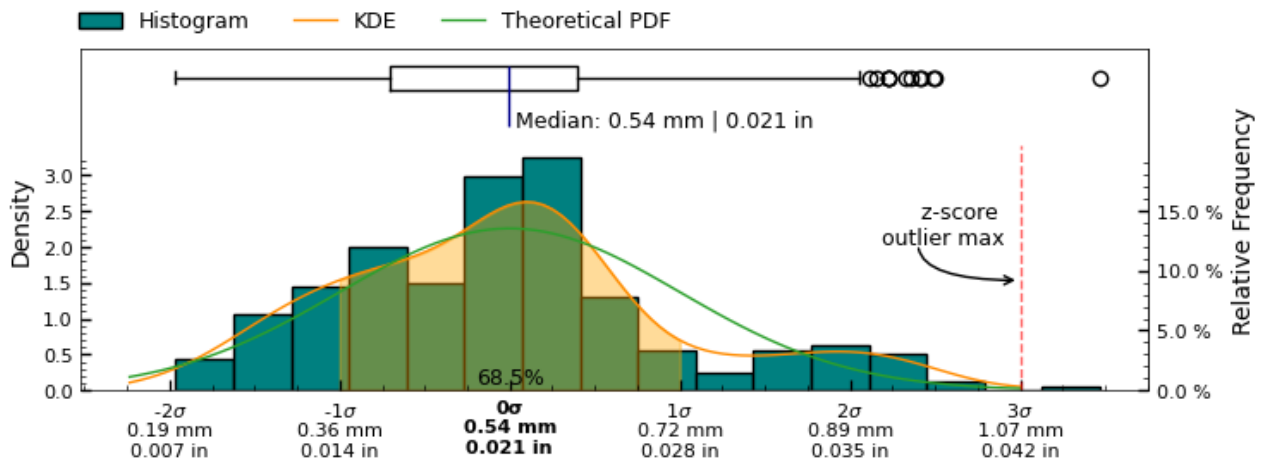


Figure 27: Range measurement distribution across measured slices of interior_separate surface

Standard Deviation measurement distribution across 267 slices of interior separately aligned surface

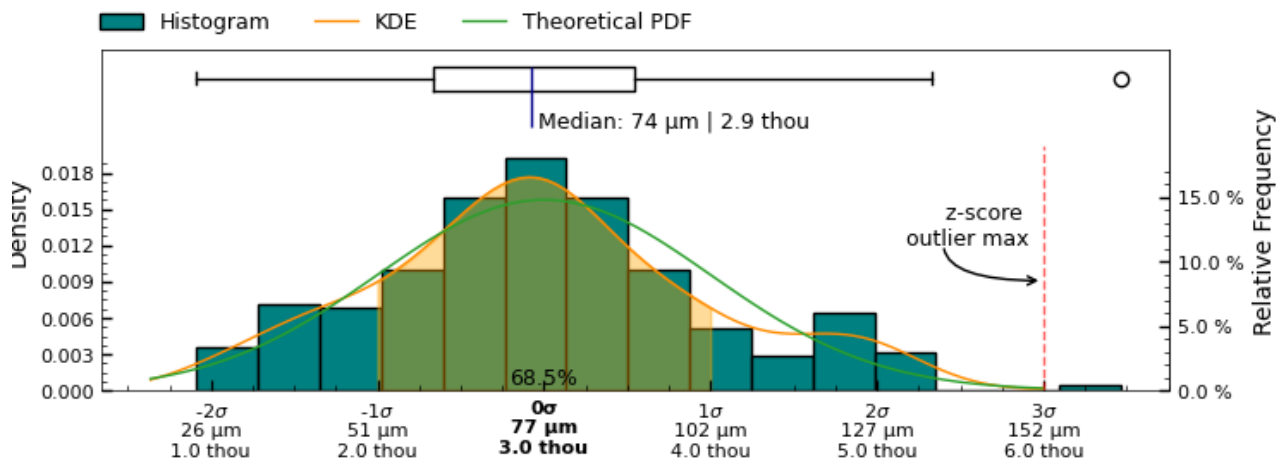


Figure 28: Standard Deviation measurement distribution across measured slices of " + interior_separate + " surface

Root Mean Squared Deviation measurement distribution across 267 slices of interior separately aligned surface

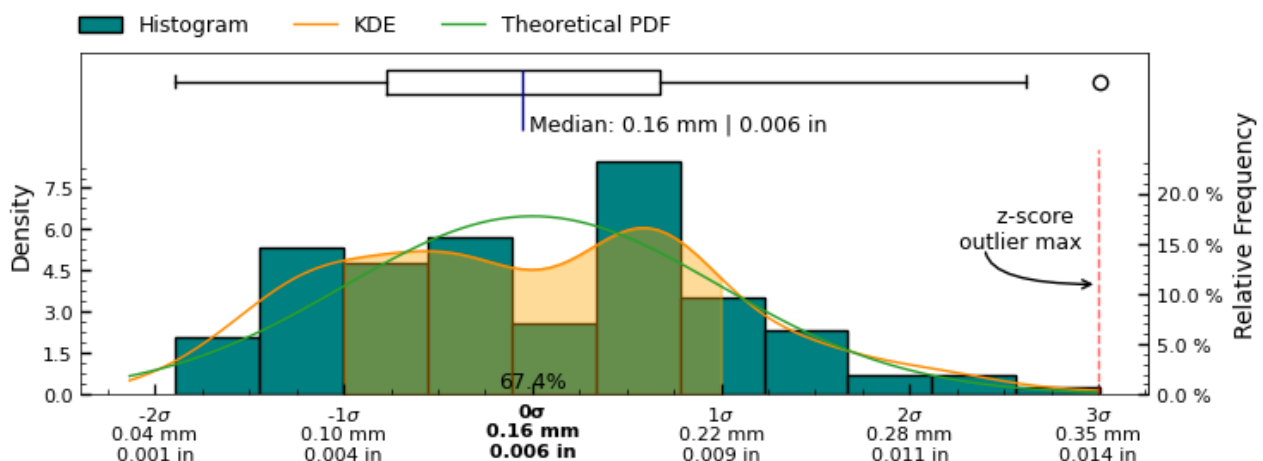


Figure 29: Root Mean Squared Deviation measurement distribution across measured slices of interior separately aligned surface

Concentricity

The concentricity metric describes the deviation in the center-point of the referenced features. As such, it is a measure to determine if several features of the object share the same center point/axis, and how closely. See Figure 30 for a visual representation of this metric.

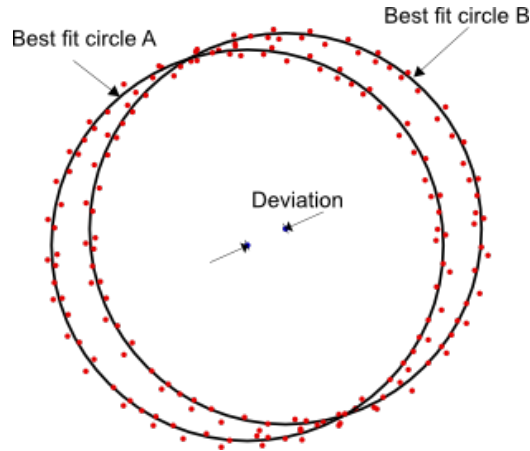


Figure 30: Concentricity measures the deviation (distance) between the center of two circles.

Determination of concentricity has been carried out by establishing the best fit circles of sample slices, using RANSAC (Random sample consensus) algorithm for outlier detection of a least squares circle regression on the scanned data-points at each cross-section, to estimate centers of each cross-section.

The concentricity between both the interior and exterior circular cross-sections is explored for cross-section measurements with the same Z-coordinates.

Additionally, the concentricity between each cross-section measurement defined in Figure 4 and the datum axis $(x, y) = (0, 0)$ has been calculated to establish the deviation of the feature center from the datum axis.

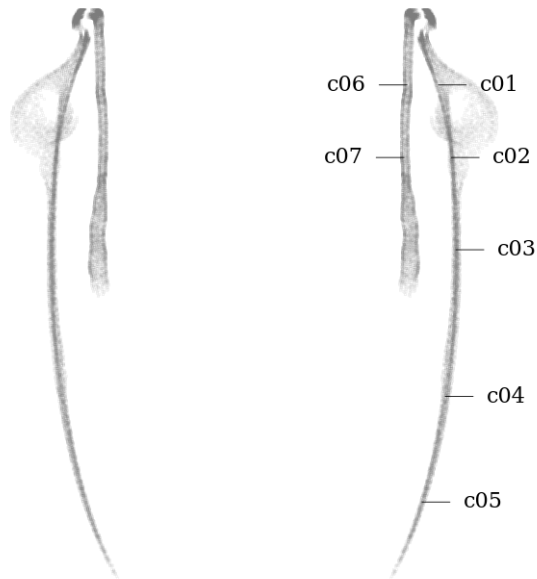


Figure 31: Circularity measurement sample locations, full mesh aligned to exterior surface



Figure 32: Circularity measurement sample location, separately aligned interior mesh

Metric

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
		mm		mm	mm	mm	mm	mm	mm	μm
c01	z-axis	0.285	274	2.104	2.104	0.665	0.665	0.327	0.327	195, 209
c02	z-axis	0.122	467	1.173	1.034	0.248	0.228	0.169	0.152	-122, 5
c03	z-axis	0.082	531	1.711	1.711	0.399	0.399	0.261	0.261	-49, -65
c04	z-axis	0.089	447	1.708	1.708	0.451	0.451	0.245	0.245	79, 41
c05	z-axis	0.088	283	1.108	1.108	0.293	0.293	0.156	0.156	-37, 79
c06	z-axis	0.833	551	3.401	3.401	1.241	1.241	0.487	0.487	551, 626
c06_s	z-axis	0.086	587	0.388	0.365	0.095	0.093	0.046	0.044	67, -54
c07	z-axis	0.830	555	3.780	3.780	1.414	1.416	0.550	0.551	232, 797
c07_s	z-axis	0.204	528	0.887	0.887	0.299	0.299	0.109	0.109	87, -185
c01	c06_s	0.292								127, 263
c02	c07_s	0.282								-209, 190

Imperial

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
		in		in	in	in	in	in	in	thou
c01	z-axis	0.0112	274	0.0828	0.0828	0.0262	0.0262	0.0129	0.0129	7.7, 8.2
c02	z-axis	0.0048	467	0.0462	0.0407	0.0098	0.0090	0.0066	0.0060	-4.8, 0.2
c03	z-axis	0.0032	531	0.0674	0.0674	0.0157	0.0157	0.0103	0.0103	-1.9, -2.6
c04	z-axis	0.0035	447	0.0672	0.0672	0.0177	0.0177	0.0096	0.0096	3.1, 1.6
c05	z-axis	0.0034	283	0.0436	0.0436	0.0115	0.0115	0.0062	0.0062	-1.5, 3.1
c06	z-axis	0.0328	551	0.1339	0.1339	0.0488	0.0488	0.0192	0.0192	21.7, 24.6
c06_s	z-axis	0.0034	587	0.0153	0.0144	0.0037	0.0037	0.0018	0.0017	2.6, -2.1
c07	z-axis	0.0327	555	0.1488	0.1488	0.0557	0.0557	0.0217	0.0217	9.1, 31.4
c07_s	z-axis	0.0080	528	0.0349	0.0349	0.0118	0.0118	0.0043	0.0043	3.4, -7.3
c01	c06_s	0.0115								5.0, 10.4
c02	c07_s	0.0111								-8.2, 7.5

Table 3: Concentricity analysis of MV029.

Concentricity analysis of c01

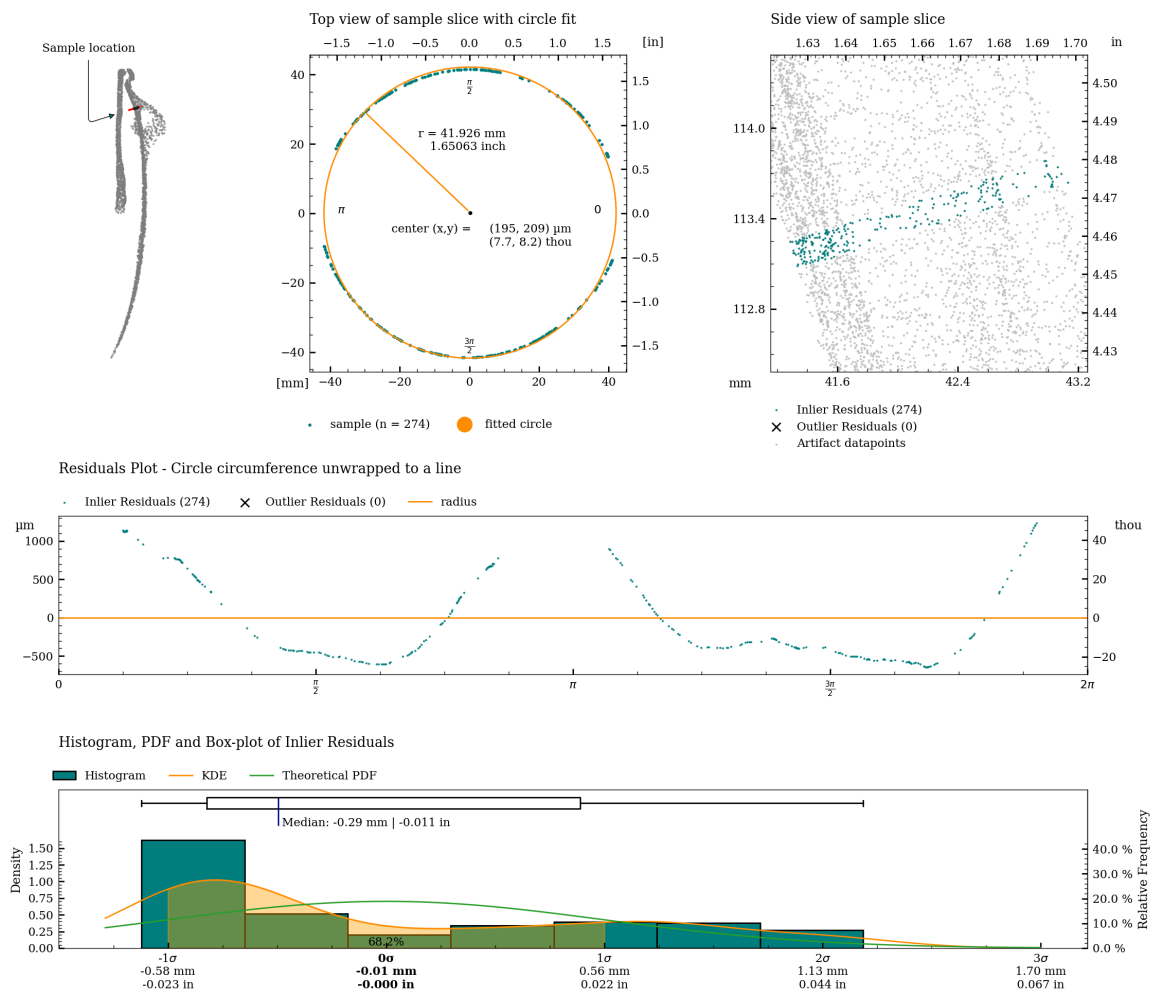


Figure 33: Detailed plot of concentricity measurement for c01.

Concentricity analysis of c02

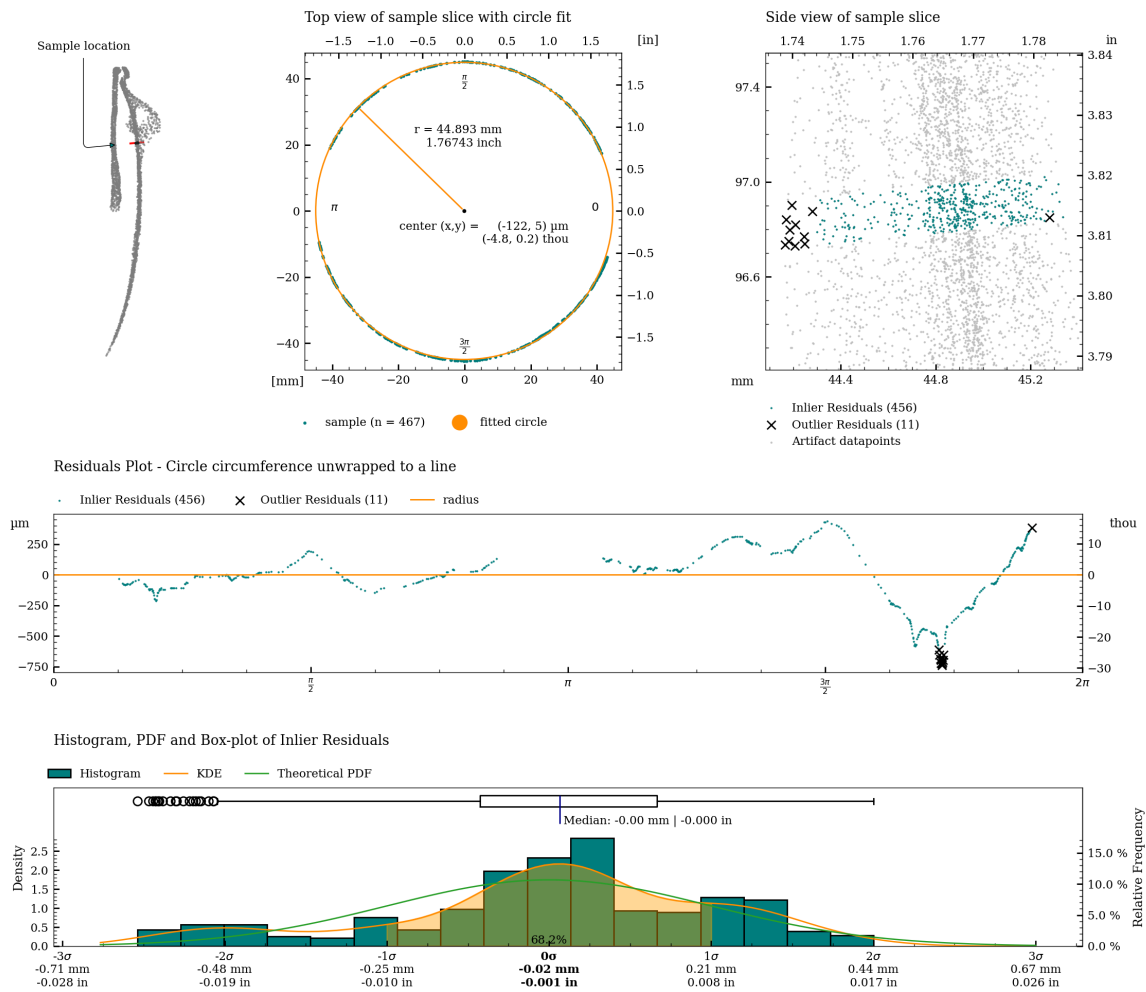


Figure 34: Detailed plot of concentricity measurement for c02.

Concentricity analysis of c03

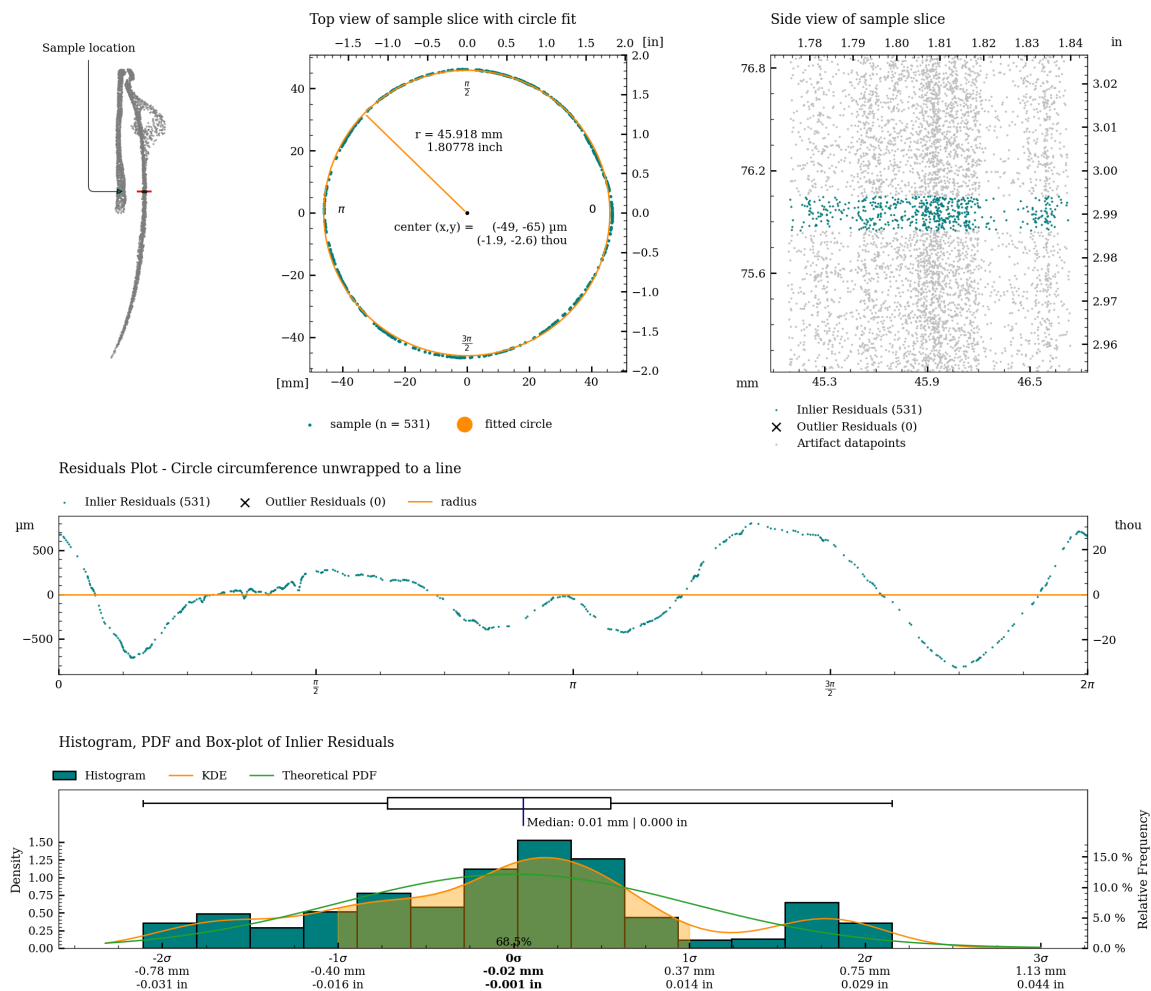


Figure 35: Detailed plot of concentricity measurement for c03.

Concentricity analysis of c04


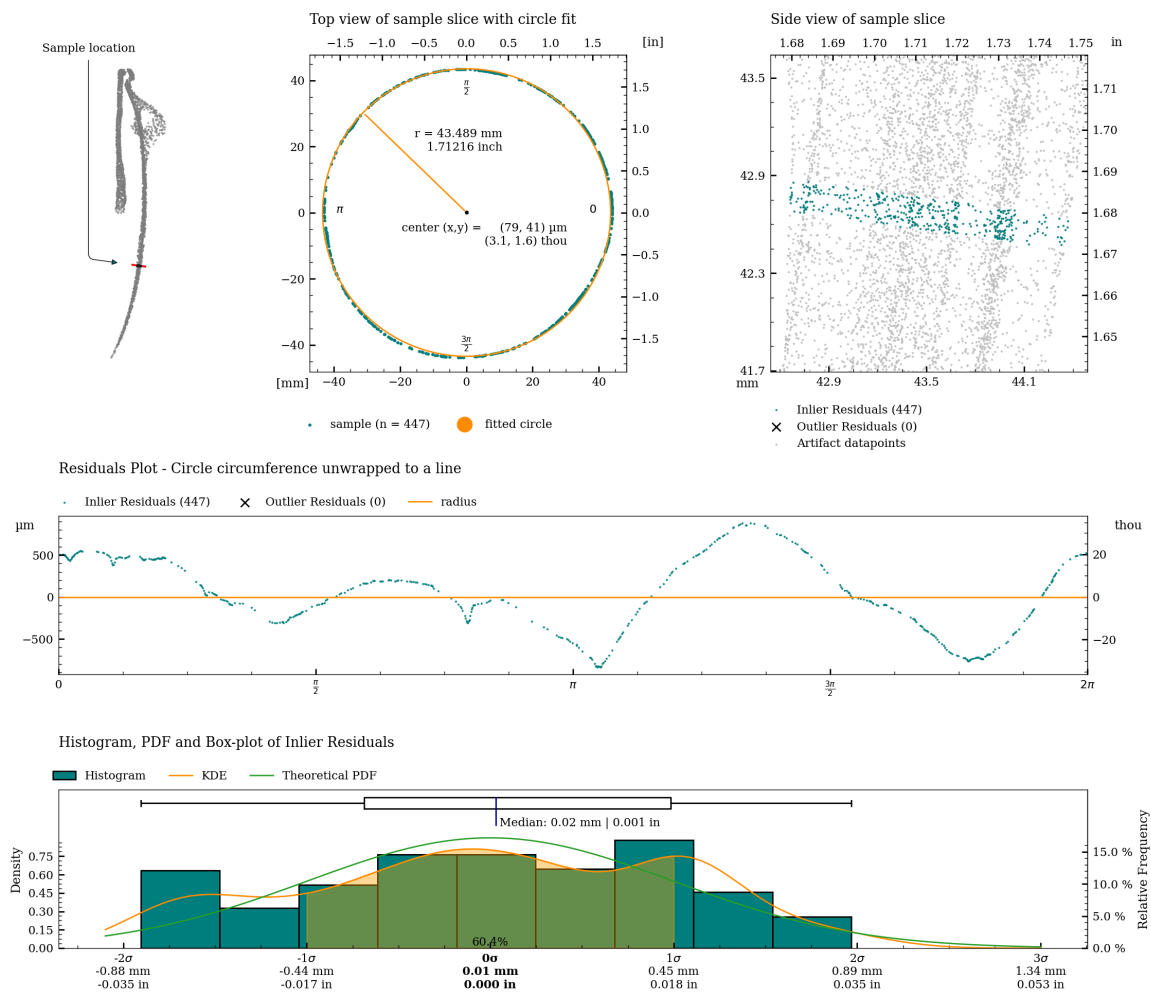


Figure 36: Detailed plot of concentricity measurement for c04.

Concentricity analysis of c05

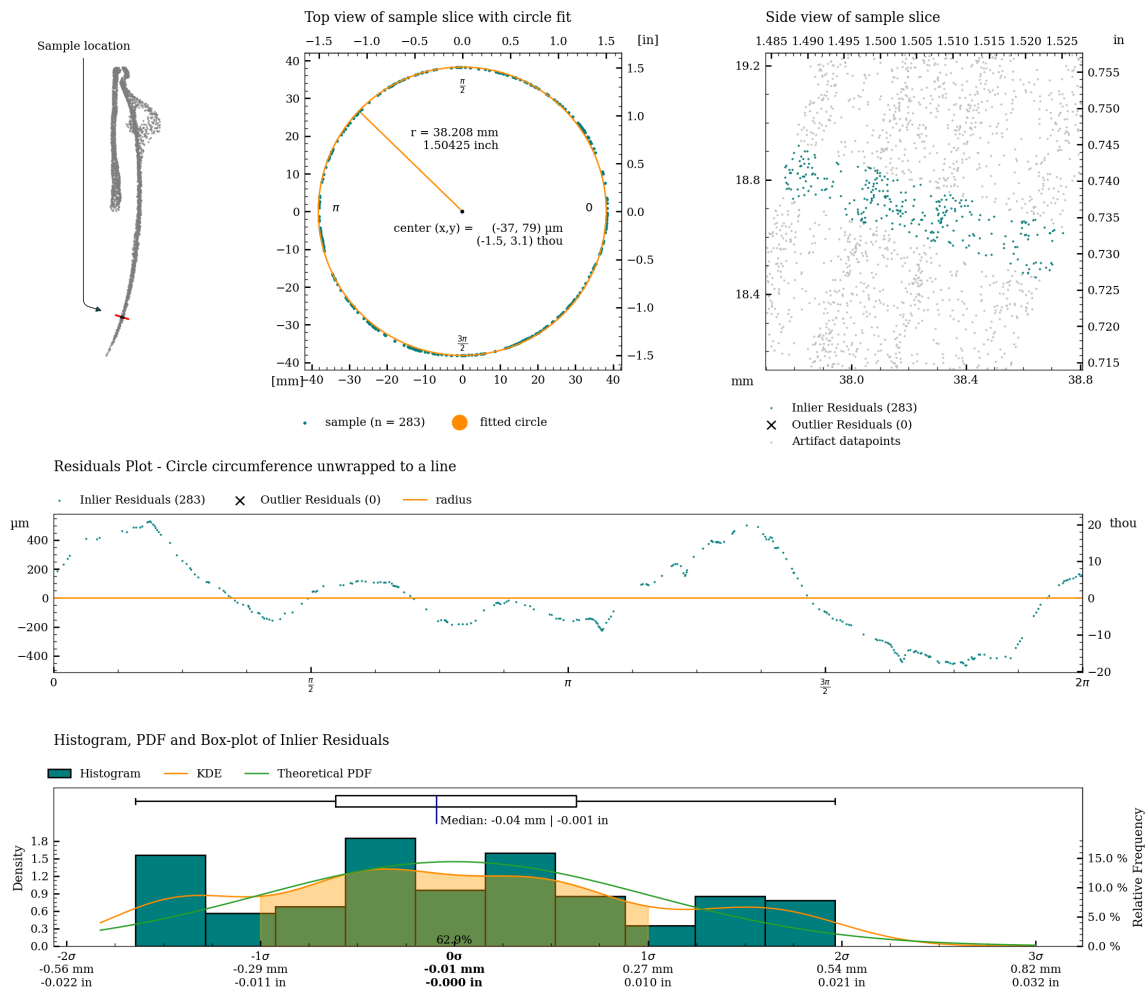

Concentricity analysis of c06

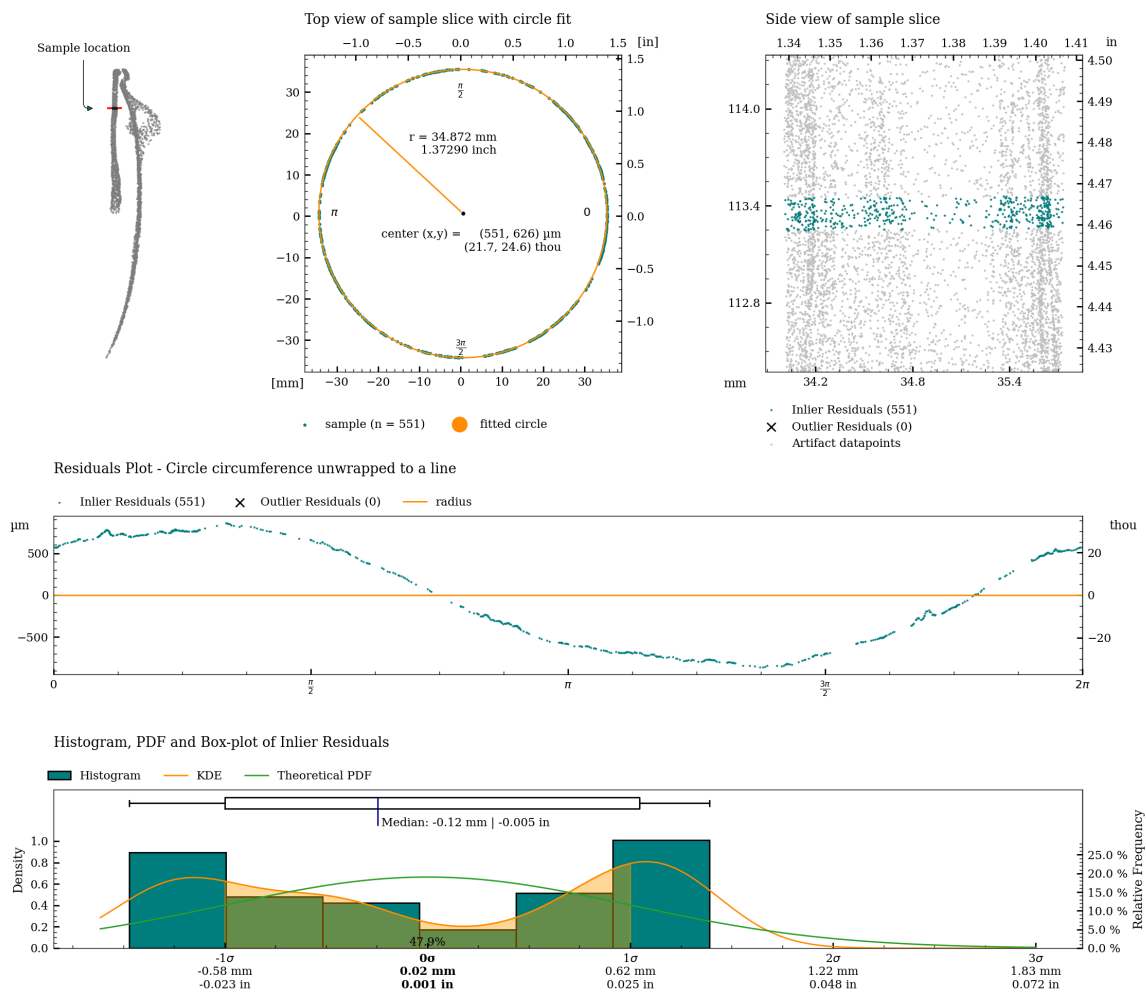


Figure 38: Detailed plot of concentricity measurement for c06.

Concentricity analysis of c06_s

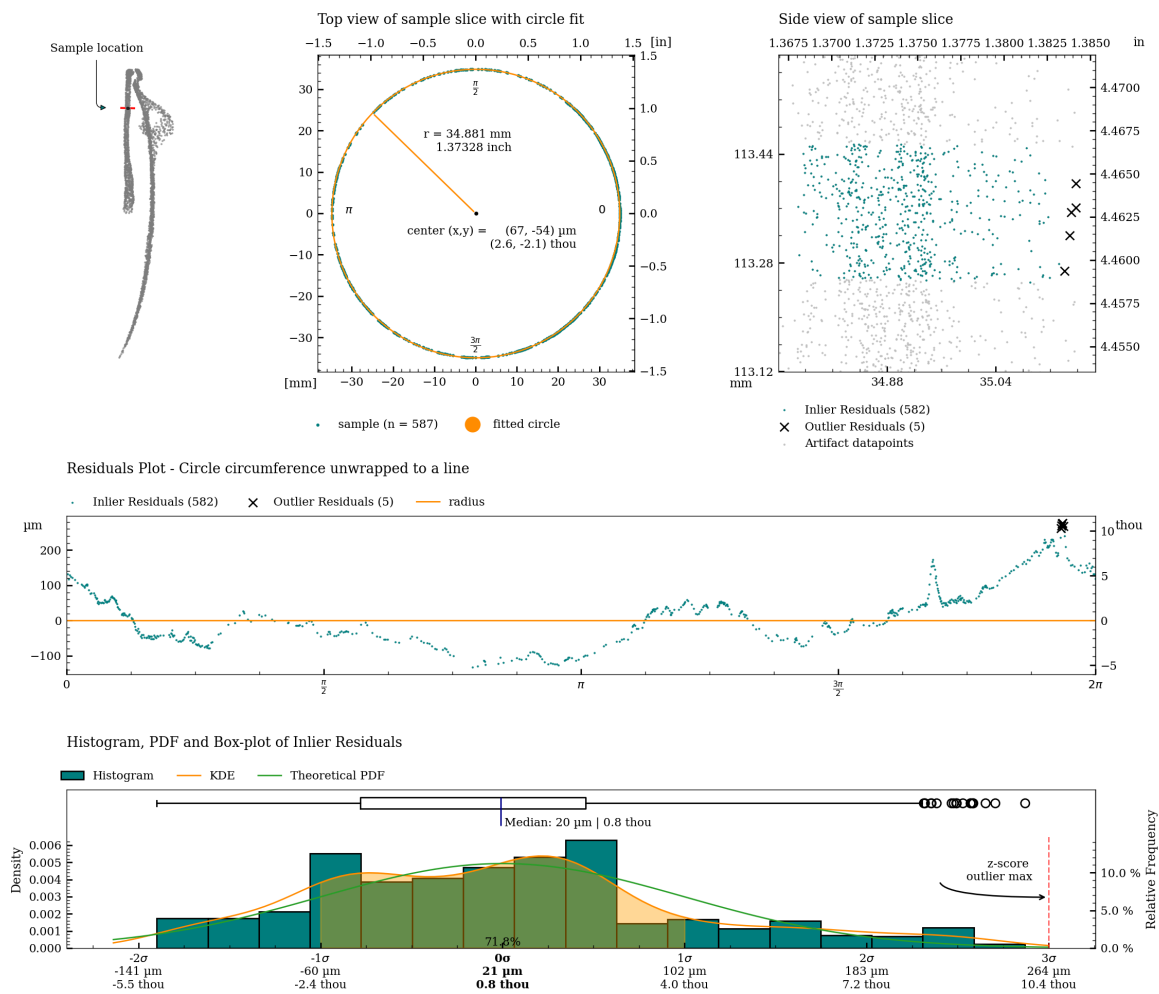


Figure 39: Detailed plot of concentricity measurement for c06_s.

Concentricity analysis of c07

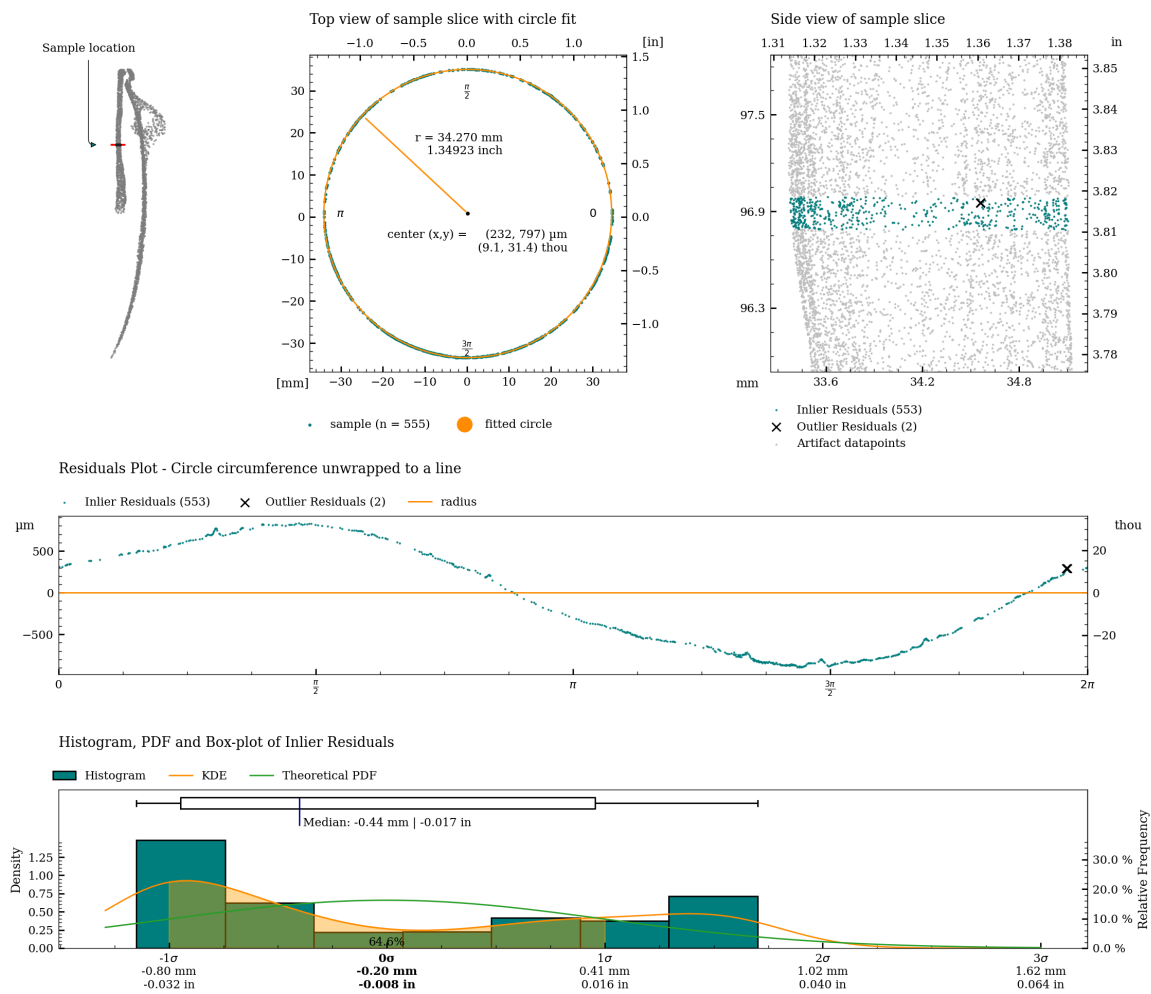


Figure 40: Detailed plot of concentricity measurement for c07.

Concentricity analysis of c07_s

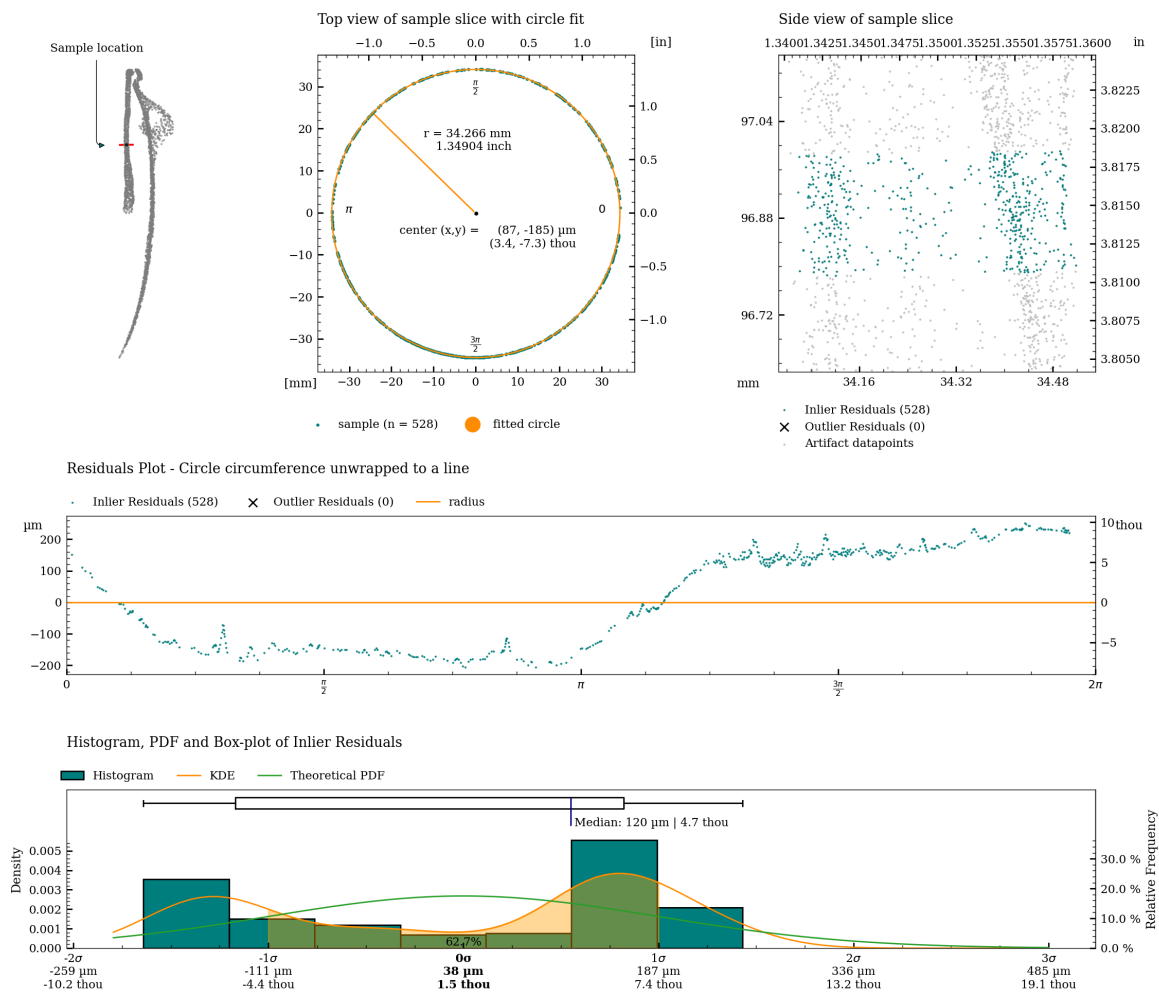


Figure 41: Detailed plot of concentricity measurement for c07_s.

Coaxiality

Coaxiality refers to the straightness and consistency of a central line running through the center of the vase. It measures how aligned the core of the vase remains along its vertical axis.

The coaxiality measurements are calculated using RANSAC (Random sample consensus) algorithm for outlier detection on least squares circle regression on cross-sections of the vessel (excluding potential handles), to estimate the best fit circle centers for each slice of the vessel. A best-fit line connects these centers, showing whether the vessels's shape twists or remains straight. This concept helps describe the symmetry and structural uniformity in a visual and analytical way.


Coaxiality is measured for:

- The exterior surface (excluding handles)
- The interior surface

	Exterior		Interior		Interior separate	
Analyzed Slices			588		266	267
Median sample size			406		521	520
Slice Height	200 μm	7.9 thou	200 μm	7.9 thou	200 μm	7.9 thou
Statistics with Z-axis as Reference						
Median Absolute Deviation (MAD)	90 μm	3.5 thou	871 μm	34.3 thou	205 μm	8.1 thou
Standard Deviation (SD)	72 μm	2.8 thou	314 μm	12.3 thou	100 μm	3.9 thou
Root Mean Square Deviation (RMSD)	130 μm	5.1 thou	1075 μm	42.3 thou	235 μm	9.3 thou
Statistics with Best Fit Central Axis as Reference						
Best fit Central Axis Equation (in metric coordinate system with unit [mm])	x = 0.007 + t-0.00013 y = 0.005 + t-0.00006 z = 0.000 + t1.00000		x = -2.028 + t0.02210 y = 2.869 + t-0.01925 z = 0.000 + t0.99957		x = 0.011 + t0.00030 y = 0.175 + t0.00134 z = 0.000 + t-1.00000	
Axis tilt		-0.007°		1.29°		0.017°
Median Absolute Deviation (MAD)	90 μm	3.5 thou	219 μm	8.6 thou	216 μm	8.5 thou
Standard Deviation (SD)	73 μm	2.9 thou	85 μm	3.3 thou	88 μm	3.5 thou
Root Mean Square Deviation (RMSD)	130 μm	5.1 thou	233 μm	9.2 thou	230 μm	9.1 thou

Table 4: Coaxiality analysis of vessel MV029.

Coaxiality plots, exterior surface

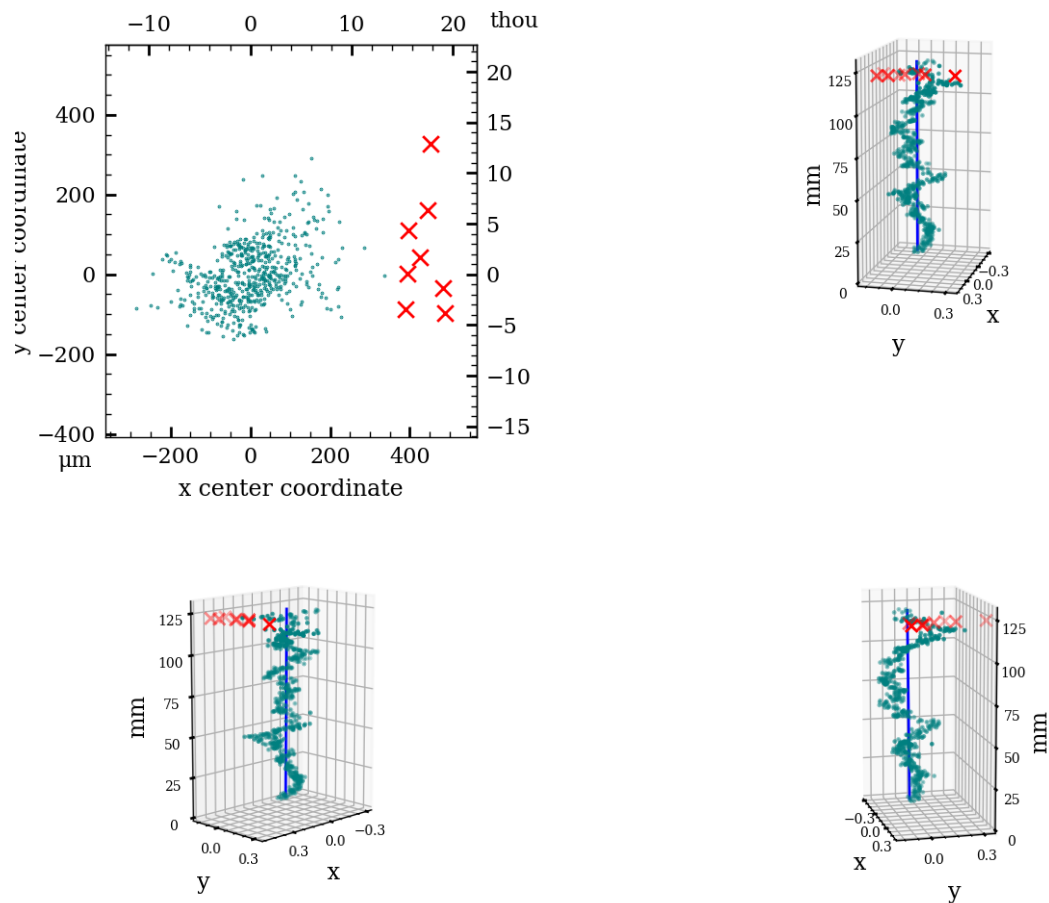

Coaxiality residuals from fitted axis, exterior surface


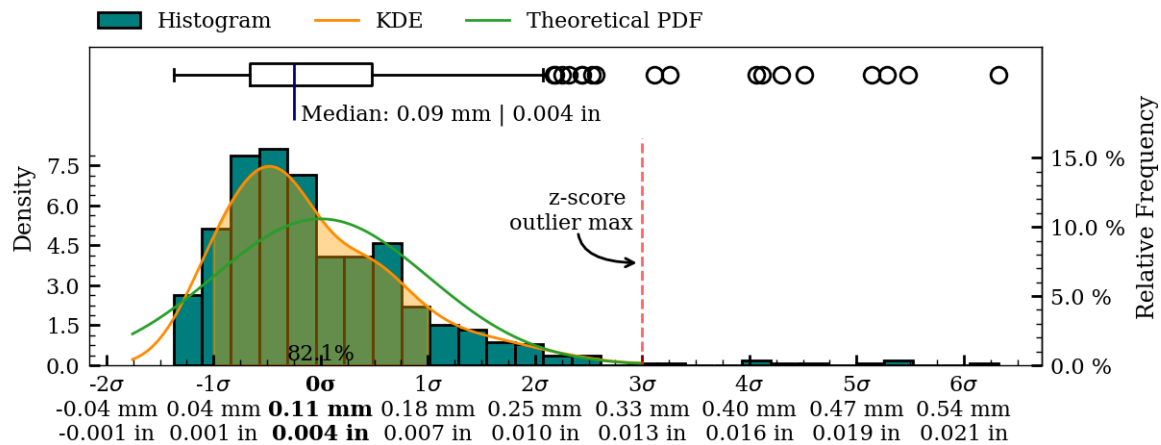


Figure 42: Coaxiality residual plots of exterior surface, MV029.

Coaxiality plots, interior surface

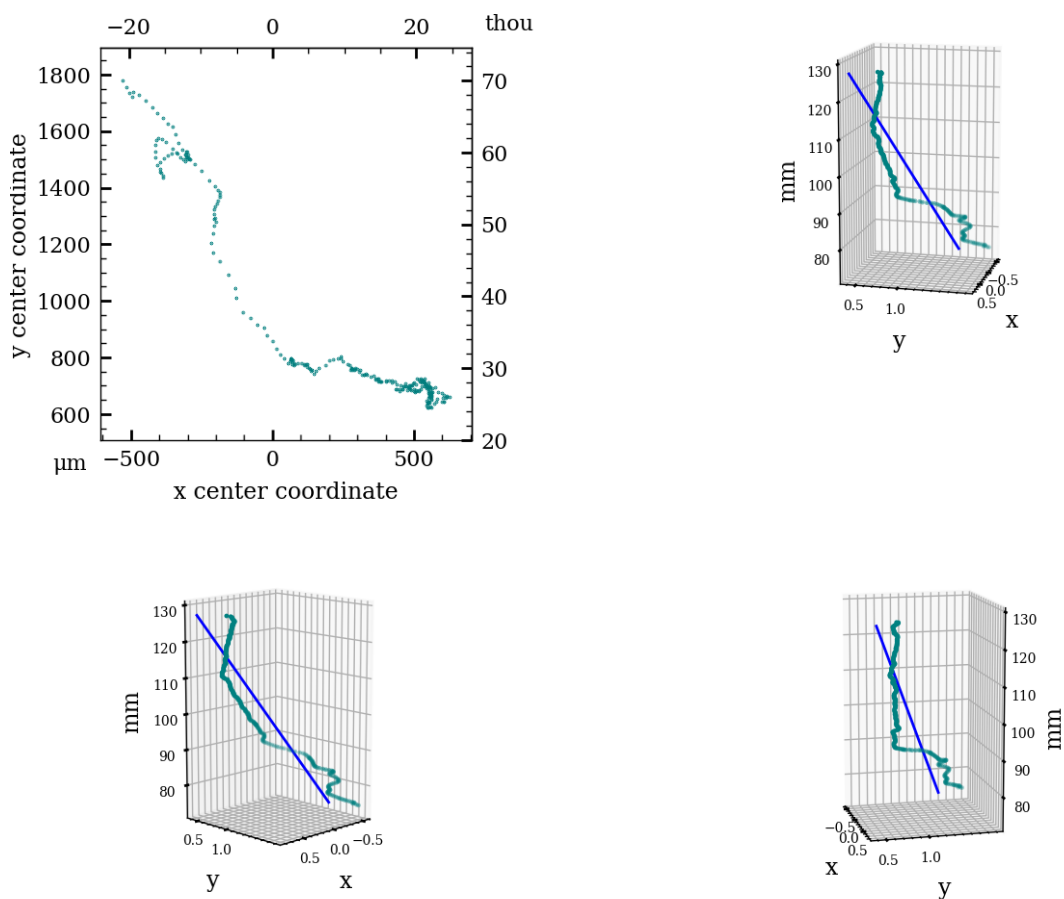

Coaxiality residuals from fitted axis, interior surface


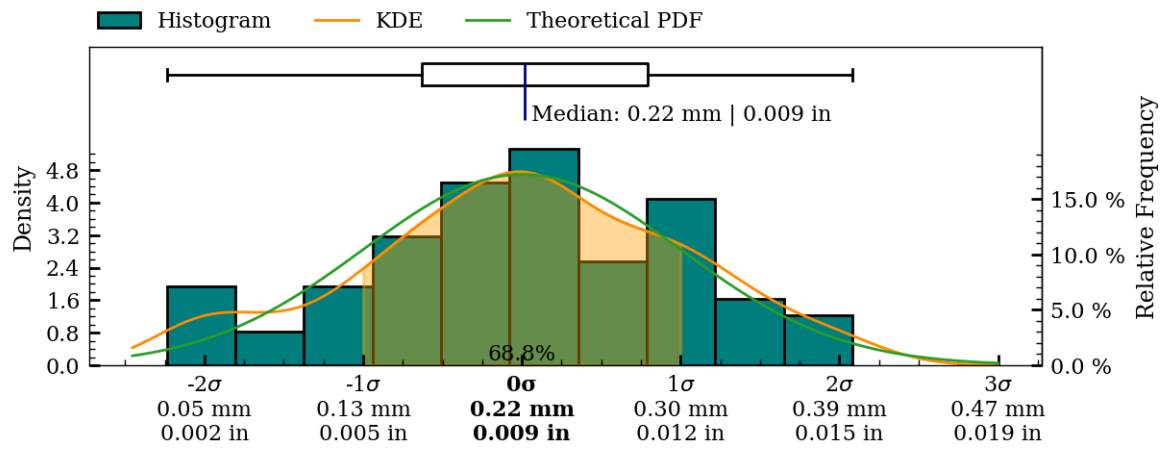


Figure 43: Coaxiality residual plots of interior surface, MV029.

Coaxiality plots, interior separately aligned surface

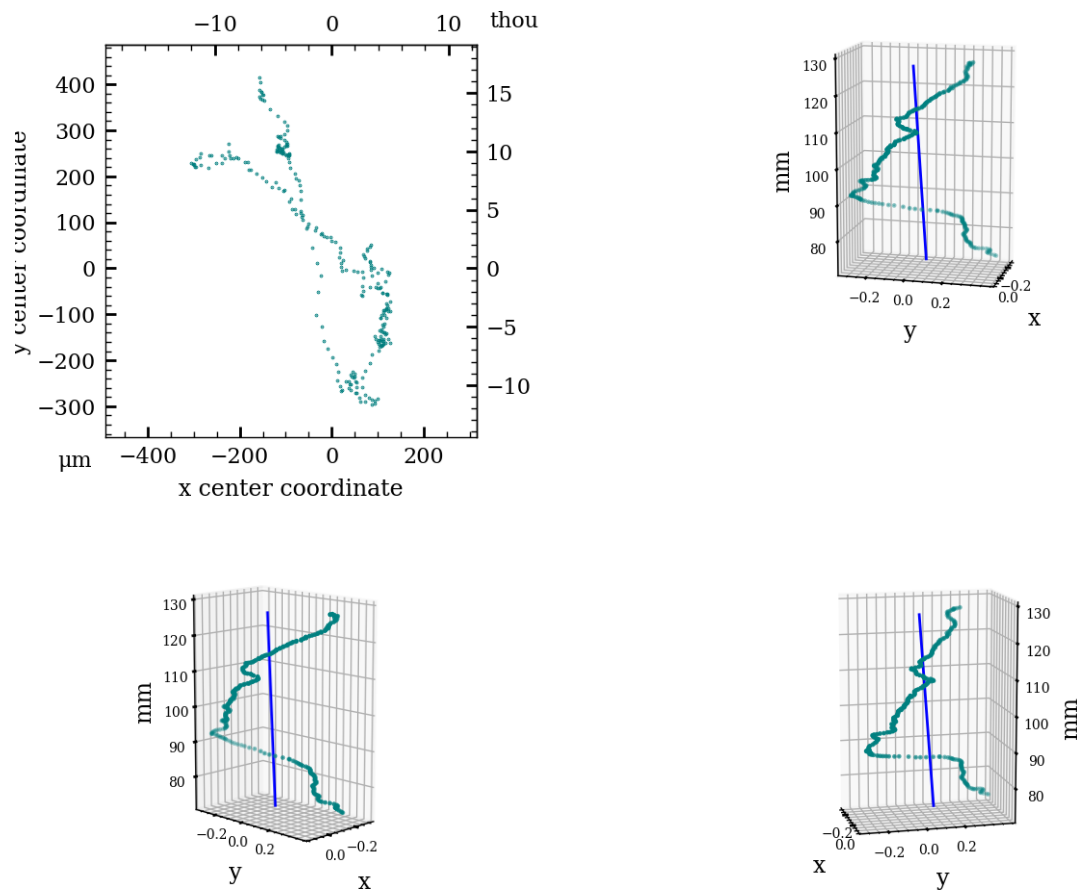

Coaxiality residuals from fitted axis, interior separately aligned surface

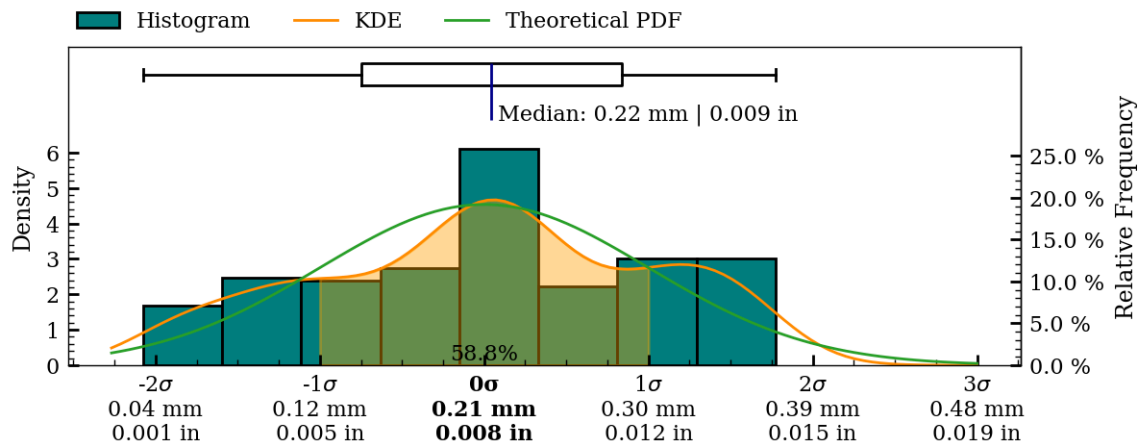


Figure 44: Coaxiality residual plots of interior_separate surface, MV029.

Surface Variability

To illustrate the overall surface deviations of the object, a surface variability heatmap has been created. This heatmap provides an accessible overview of the topography of the manufacturing precision and surface structure of the object.

The surface variability measurements are created by fitting a number of higher-order polynomials to the two-dimensional folded profile of the scan data. This process creates an idealized mathematical representation of actual surface curvature of object, and as such provides a continuous model representation of the actual object. It is important to note that only such a non-discretized representation is sufficient to avoid introducing inconsistently varying errors in the mapping of the final surface deviation results, that the rendered heatmaps are based on.

To produce the final surface variability map, the distance from each scanned vertex to the fitted polynomial is calculated and used as the mapping function input, for applying colours to the surface of the object.

It is important to note that this variability map does not describe deviations from the original *intended* shape of the artifact (if any), as this shape (the *intended design*, so to speak) will have been lost to time. It does however provide a very informative visualization of the texture and structure of the surface and very importantly, *does* highlight potential manufacturing-relevant patterns in the surface texture (if present). Such patterns are, as an example, clearly evident on the interior surface of artifact PV001.

Exterior surface

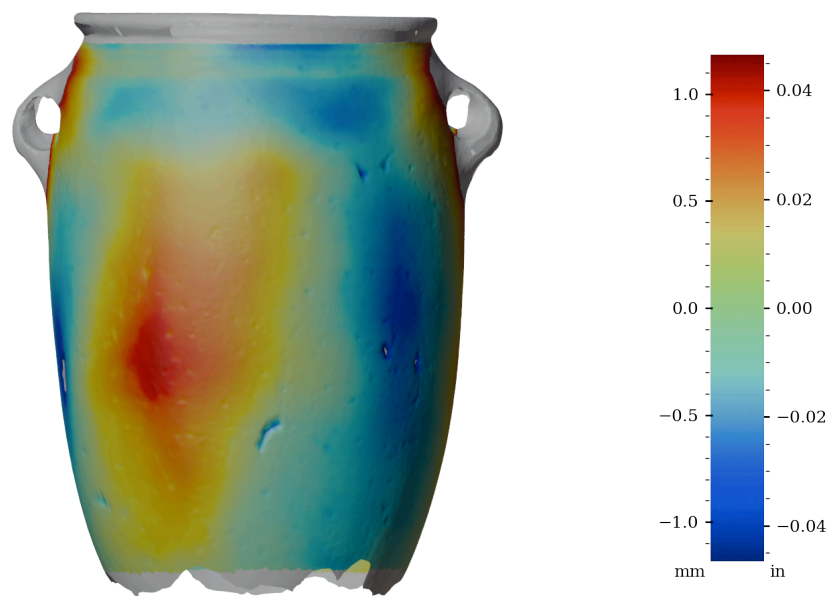


Figure 45: Surface variability heatmap of MV029, front view

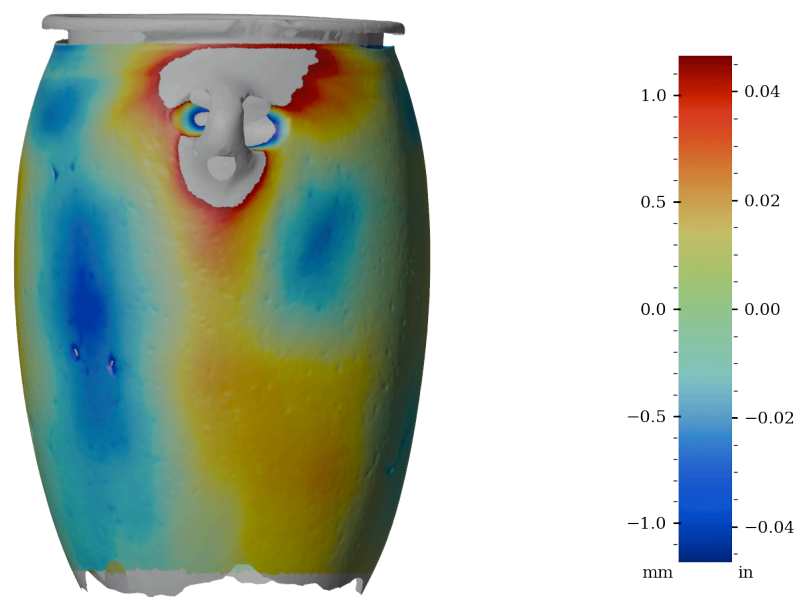


Figure 46: Surface variability heatmap of MV029, rotated 90°

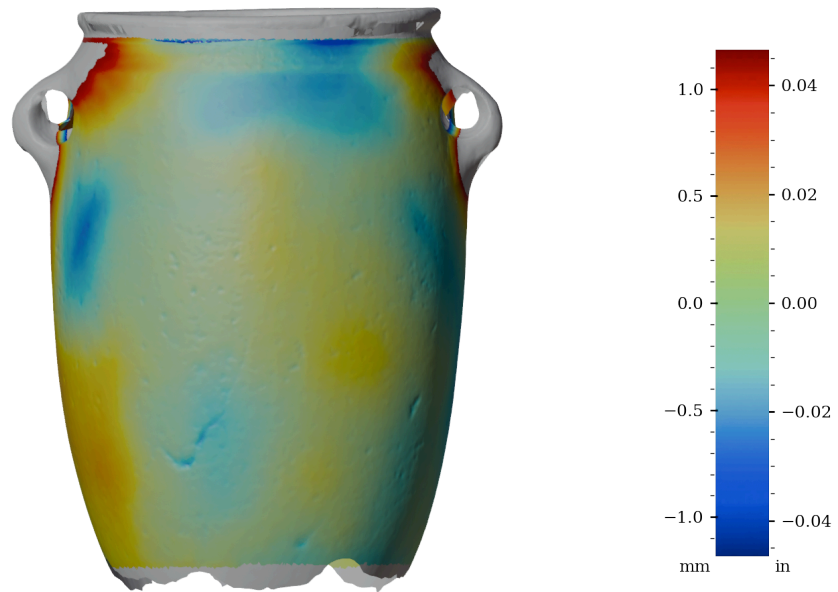


Figure 47: Surface variability heatmap of MV029, rotated 180°

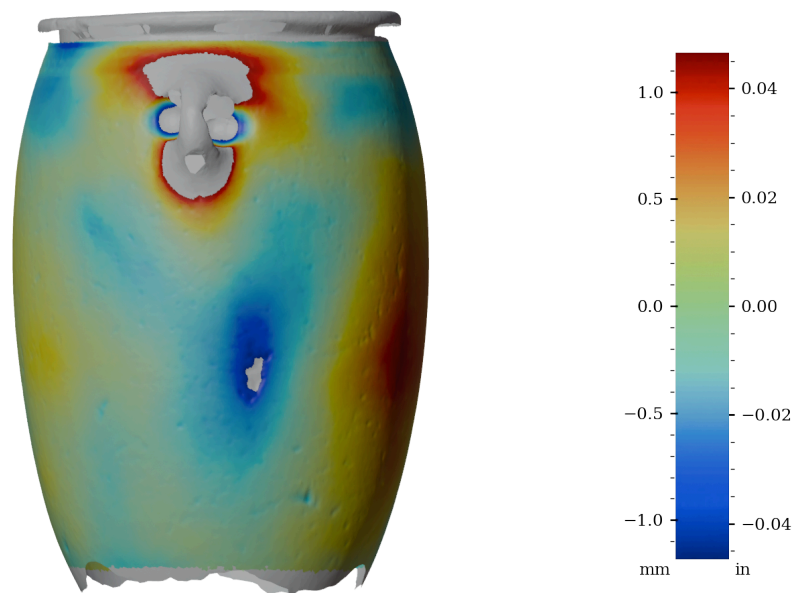


Figure 48: Surface variability heatmap of MV029, rotated 270°

Interior surface

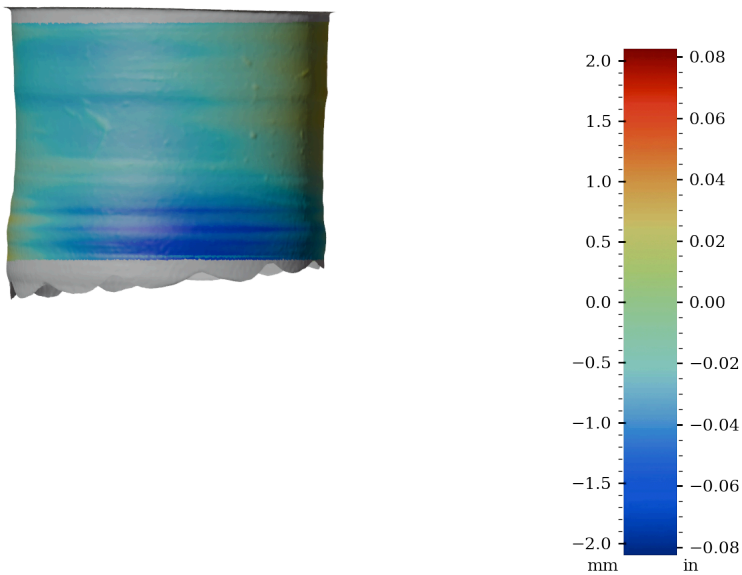


Figure 49: Surface variability heatmap of MV029, front view

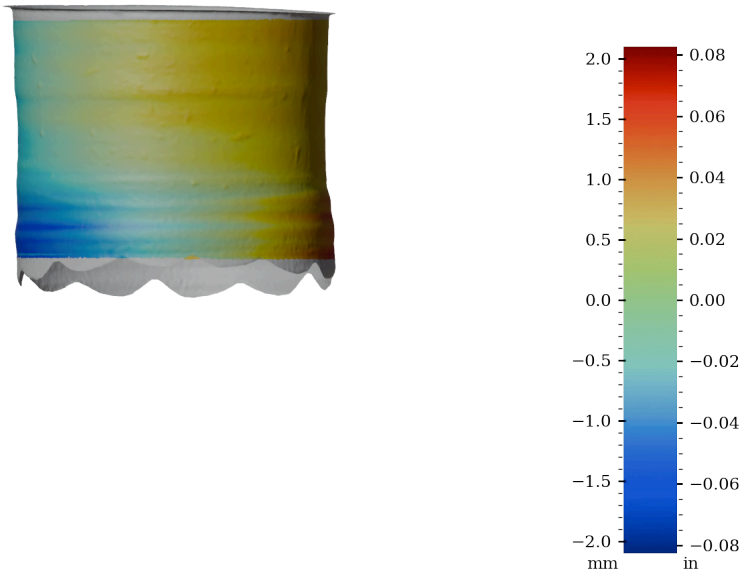


Figure 50: Surface variability heatmap of MV029, rotated 90°

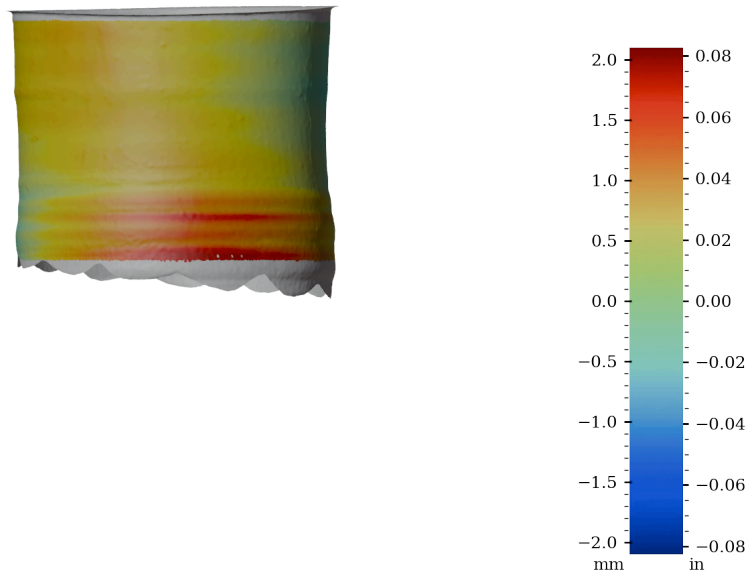


Figure 51: Surface variability heatmap of MV029, rotated 180°

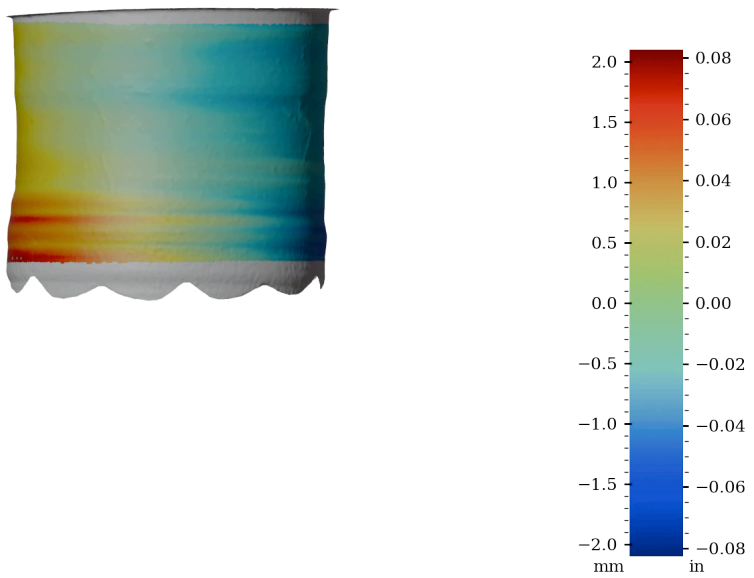


Figure 52: Surface variability heatmap of MV029, rotated 270°

Interior surface aligned separately

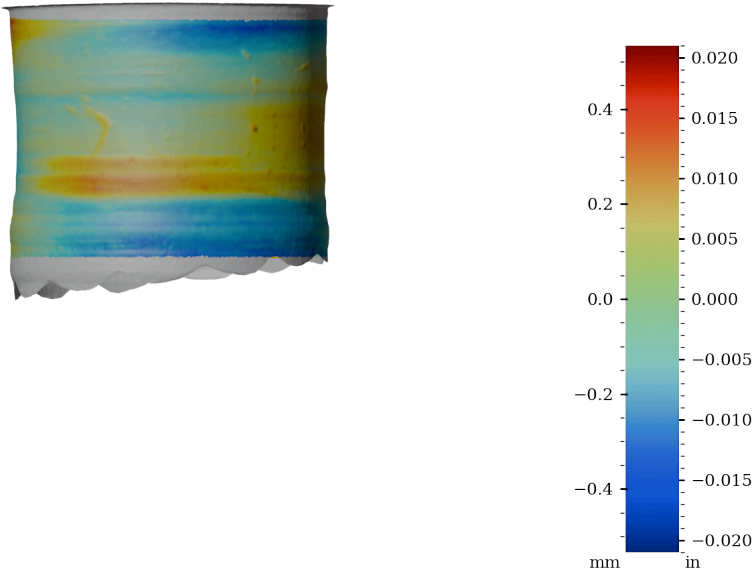


Figure 53: Surface variability heatmap of MV029, front view

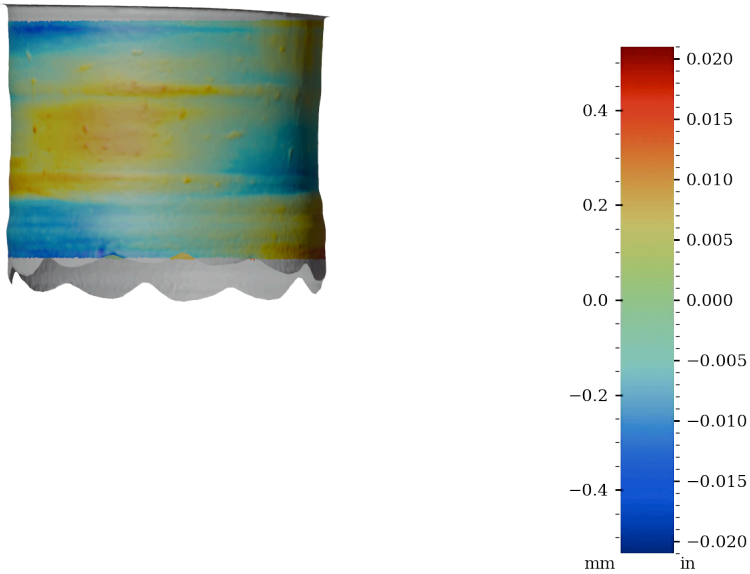


Figure 54: Surface variability heatmap of MV029, rotated 90°

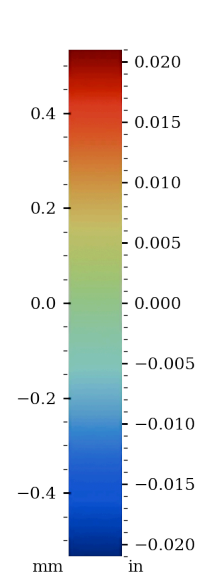


Figure 55: Surface variability heatmap of MV029, rotated 180°

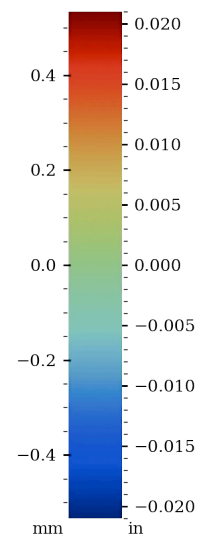


Figure 56: Surface variability heatmap of MV029, rotated 270°

Surface variability statistics

Area	MSD	RMSD	SD	Median AD	Range	Min	Max	Sample size
	mm ²	mm	mm	mm	mm	mm	mm	
Exterior	0.1773	0.421	0.260	0.175	2.944	-1.430	1.513	252985
Interior	0.6186	0.787	0.394	0.232	3.890	-1.797	2.093	152361
Interior separate	0.0317	0.178	0.100	0.081	1.051	-0.497	0.554	151354
	in ²	in	in	in	in	in	in	
Exterior	0.000275	0.0166	0.0102	0.0069	0.1159	-0.0563	0.0596	252985
Interior	0.000959	0.0310	0.0155	0.0091	0.1531	-0.0708	0.0824	152361
Interior separate	0.000049	0.0070	0.0040	0.0032	0.0414	-0.0196	0.0218	151354

Table 5: Surface variability statistics, MV029

Table 5 shows the statistics of the distance from the scan vertices to the best fit object model. These statistics are briefly explained below.

Histogram, KDE and Box-plot of measured surface variability - exterior surface

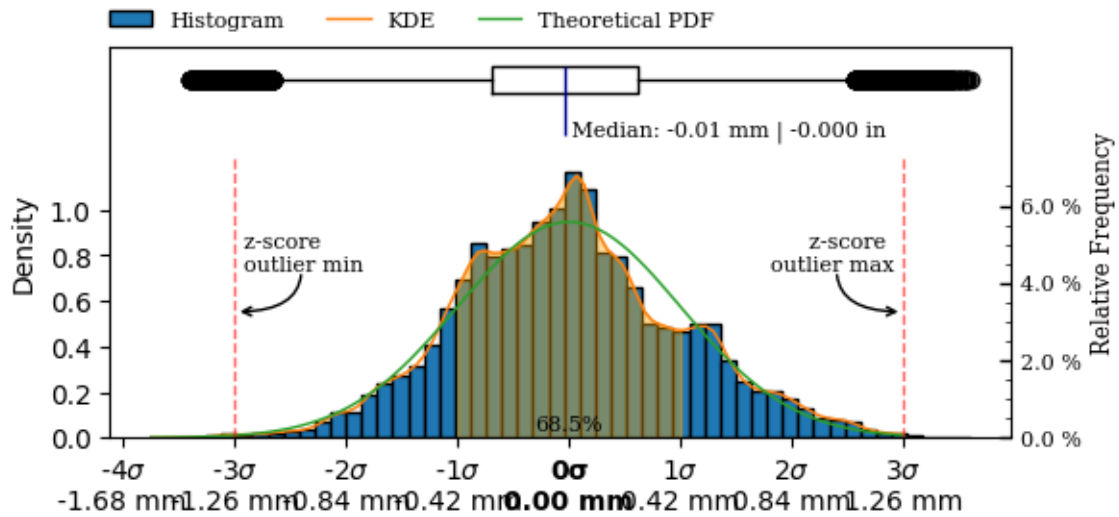


Figure 57: Exterior surface variability boxplot, kds and histogram.

Histogram, KDE and Box-plot of measured surface variability - interior surface

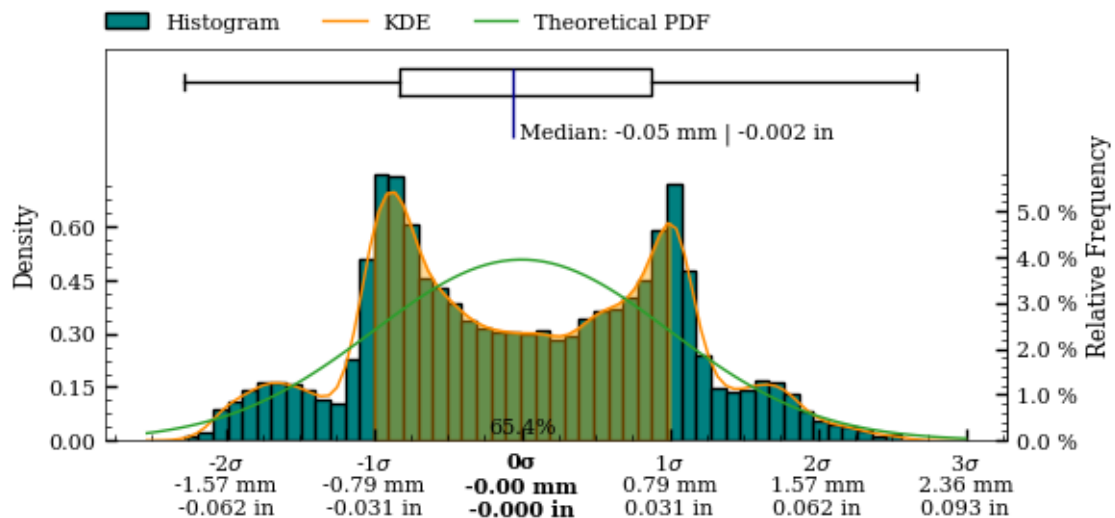


Figure 58: Interior surface variability boxplot, kds and histogram.

Histogram, KDE and Box-plot of measured surface variability - interior separately aligned surface

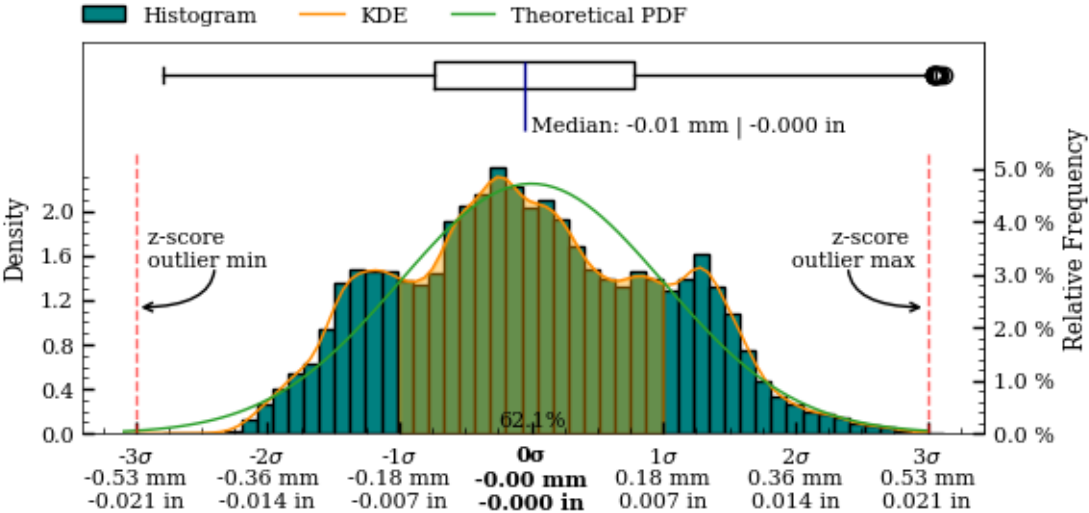


Figure 59: Interior separately aligned surface variability boxplot, kds and histogram.

Precision Score Of The Artifact

To enable valid comparison of the manufacturing precision of different artifacts, a metric that robustly quantifies the overall precision of the object is required. The considerations for such a metric will be explored in this section.

Based on these considerations, a *Precision Score* metric will be defined.

For an object to be described as having been manufactured with high precision, several qualities must be present *concurrently*, and throughout the *entire* geometry of the final object. A given object may exhibit high levels of one or more *components* of precision, but be lacking in others. For example:

- An object may present high levels of coaxiality, but lack circularity.
- An object may exhibit good circularity, but show imperfections in the surface structure.
- An object may be smoothed to perfection *without* any circularity or coaxiality.
- An object may exhibit high levels of all of the above metrics in *some* areas, but not in others.

Therefore, a precision score metric **must** account for *all* aspects of the individual, underlying precision metrics (circularity, concentricity, coaxiality and surface variability) throughout the *entire* surface area of the object.

The composite high order polynomial model, used to generate the surface variability map (described in Surface Variability, p. 44) is the best continuous mathematical representation of the object available to us (lacking any original design plans, as would normally be available in metrological analysis). This idealized model encompasses all of the above component metrics.

In the creation of the model, all scan data-points are taken into account (excluding areas with extensive damage), making it the best possible idealized representation we can achieve. When this model has been accurately created, the deviation between the model and the scanned data-points can be calculated over the non-discretized polynomials, *without* the need for an “original” CAD model (and importantly, unless such a CAD model *actually* corresponded to the original design intent, it would be an insufficient comparison basis).

Within the context of defining a valid, overall precision metric, this approach satisfies the incorporation of all of the necessary metrics:

- **Circularity:** Because the reconstructed polynomial model is revolved around the Z-plane, the idealized representation is perfectly circular, and thus incorporates the circularity component.
- **Concentricity and coaxiality:** Because the Z-axis (datum axis) is the center axis of the model, it incorporates the concentricity and coaxiality components.
- **Surface variability:** Because the model is continuous and non-discretized, it can be used accurately for all points of the scan data, and incorporates the surface variability component.

The level of precision ultimately achieved in a physical object does not share a linear relationship with its manufacturing requirements. Since continuously higher levels of final precision becomes progressively harder to achieve, an overall precision metric must take this relationship into account.

A robust statistical metric that satisfies this requirement is the *Mean Squared Deviation* (MSD or MSE). Here specifically, we can utilize the mean square of the deviations between the model (\hat{y}) and the data-points (y_i).

Combining all of the above considerations, we can express a well-defined *Precision Score* metric, that provides an immediately accessible way to understand the overall precision of an object, while being statistically valid. Since the Mean Squared Deviation tends towards zero as the overall precision increases, the inverse of the Mean Squared Deviation is taken to obtain a precision score metric that increases as precision increases¹²:

$$\text{Precision Score} = \frac{n}{\sum_{i=1}^n (y_i - \hat{y})^2}$$




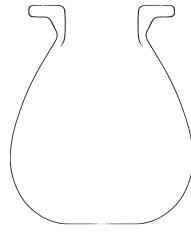

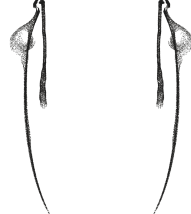

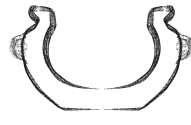

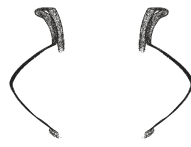
¹²The precision score unit is $\frac{1}{\text{mm}^2}$

The precision score of MV029 have been calculated separately for:

- Precision score, exterior surface: 6
- Precision score, separately aligned interior surface: 32
- Precision score, interior surface: 1.62
- Precision score, full surface: 8

The precision score of a Zeiss 1.00000 inch reference sphere have been calculated to 43,943 (RMSE = 0.00477 mm / 0.00010 in). The scan was obtained by Max Fomitchev-Zamilov using a Keyence VL –500 scanner with a rated accuracy of 10 microns. The precision analysis of the reference sphere scan indicates at the maximum possible precision score obtainable.

Table 6 shows the precision score of this artifact (MV029), compared to the two most precise, and the two least precise vessels currently analyzed.

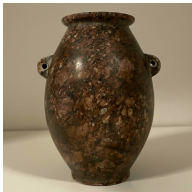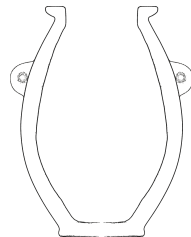Artifact		Material	Precision Score	Link to Report
		PV001 Red Granite	1980 Full: 1177 Exterior: 1980 Interior separate: 798 Interior: 722	Report Publication
		PV006 Dark grey granite	621 Full: 610 Exterior: 621 Interior separate: 479 Interior: 152	Report Publication
		MV029 Basalt	6 Full: 8 Exterior: 6 Interior separate: 32 Interior: 1.62	Report Publication
		RV003 Marble breccia	1.46 Full: 1.49 Exterior: 1.46 Interior separate: 1.53 Interior: 0.54	Report Publication
		MV010 Calcite (Egyptian Alabaster)	1.17 Full: 1.32 Exterior: 1.17 Interior separate: 11 Interior: 0.17	Report Publication

Analysis Roadmap

While the current iteration of this work already provides valuable results, continued future additions and improvements will enhance their utility further. This section details planned iterative updates and improvements, to both the reports themselves, and to the underlying methodology and software they are created with.

Alignment Section

- Detailed exploration of different circle regression algorithms
- If handles are present on the vessel, exploring alignment of the vessels so the handle positions match each other
- Add optimization of the perpendicular surface deviation, with the best results of the coaxial alignment
- Align by minimizing circularity results (of rotated sample slice, to compensate for sample height distortions)

Measurements of Precision

- Section detailing how measurements perpendicular to the surface curvature are obtained
- Detailed surface area analysis, exploring the residual patterns throughout subsequent sample slices of the artifact surface
- Wall thickness deviation color map
- Robust outlier identification on circularity, to better handle analysis of damaged areas of the artifacts in addition to removal of interior crystalline structure points present in CT scans
- Layout updates to the charts and tables

Visibility of Outliers and Damaged Sections

- Identification and marking of damaged parts
- Visualization of outliers on the artifact surface

Exploration of Mathematical Primitives

- Analysis of selected curvatures and flat surfaces on the vessel in both the horizontal and vertical planes
 - Circles
 - Parabolas
 - Ellipsoids
 - Hyperbolas
 - Cones
- Implementation of robust regressions models suitable for this domain, based on RANSAC.

Metrics on Primary Features

- Measurements of features in the horizontal plane
- Measurements of features in the vertical plane
- Measurements of angles
- Measurements of volume

Exploration of Potential Design Ratios

- π , φ , e , 1, 2, 3, 4 etc.

Raw Dataset Attachments

- Including all measurement and sample coordinates as CSV-files embedded in the report
- Including an STL file of the aligned object alongside the report, for easier external replication and validation of the research results

Appendix A - Comparison Of Circularity Measurements (Z-plane vs. surface-perpendicular)

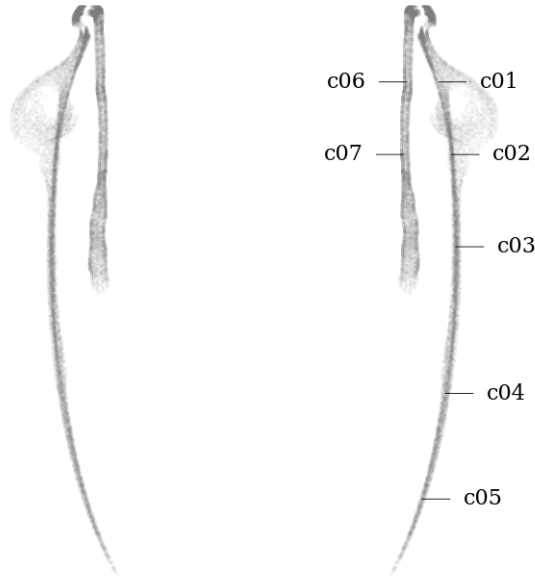


Figure 60: Circularity measurement sample locations, full mesh aligned to exterior surface

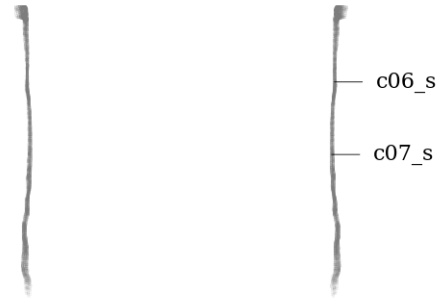


Figure 61: Circularity measurement sample location, separately aligned interior mesh

Samples perpendicular to the surface curvature

Tag	Area	Measured deviation ⁸	Residuals				Sample size	Slice		
			Range	RMSD ⁹	MAD ¹⁰	SD		Height	Z coord.	Radius ¹¹
		mm	mm	mm	mm	mm		mm	mm	mm
c01	exterior	Ø83.862±1.229	1.880	0.568	0.134	0.254	274	0.200	113.354	41.931
c02	exterior	Ø89.699±0.696	1.178	0.247	0.103	0.160	467	0.200	96.888	44.849
c03	exterior	Ø91.830±0.817	1.625	0.381	0.161	0.241	531	0.200	75.949	45.915
c04	exterior	Ø86.973±0.882	1.717	0.443	0.200	0.244	447	0.200	42.665	43.487
c05	exterior	Ø76.429±0.525	0.996	0.277	0.112	0.151	283	0.200	18.694	38.214
c06	interior	Ø69.658±0.902	1.719	0.604	0.151	0.231	551	0.200	113.354	34.829
c06_s	interior sep.	Ø69.823±0.246	0.409	0.084	0.038	0.052	587	0.200	113.354	34.911
c07	interior	Ø68.315±0.946	1.727	0.611	0.156	0.229	555	0.200	96.888	34.158
c07_s	interior sep.	Ø68.618±0.249	0.457	0.149	0.048	0.056	528	0.200	96.888	34.309

Table 7: Detailed circularity measurements at selected samples in z-plane, vessel MV029.

Samples in the Z-plane

Tag	Area	Measured deviation ⁸	Residuals				Sample size	Slice		
			Range	RMSD ⁹	MAD ¹⁰	SD		Height	Z coord.	Radius ¹¹
		mm	mm	mm	mm	mm		mm	mm	mm
c01	exterior	Ø83.234±1.540	1.932	0.649	0.200	0.427	335	0.200	113.354	41.617
c02	exterior	Ø89.770±0.716	1.168	0.247	0.095	0.165	470	0.200	96.888	44.885
c03	exterior	Ø91.845±0.824	1.625	0.380	0.164	0.241	530	0.200	75.949	45.922
c04	exterior	Ø87.047±0.873	1.740	0.454	0.215	0.256	421	0.200	42.665	43.523
c05	exterior	Ø76.425±0.538	1.039	0.296	0.128	0.160	323	0.200	18.694	38.212
c06	interior	Ø69.512±0.975	1.719	0.616	0.208	0.265	554	0.200	113.354	34.756
c06_s	interior sep.	Ø69.803±0.257	0.409	0.084	0.029	0.053	592	0.200	113.354	34.901
c07	interior	Ø67.654±1.277	1.727	0.654	0.250	0.378	554	0.200	96.888	33.827
c07_s	interior sep.	Ø68.767±0.337	0.472	0.170	0.080	0.106	531	0.200	96.888	34.384

Table 8: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV029.

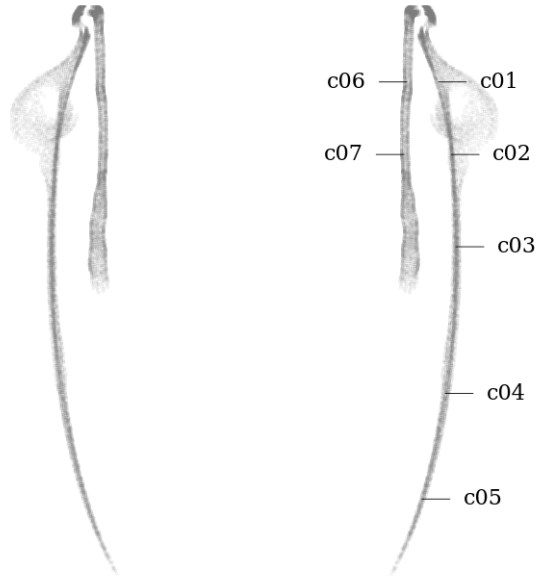


Figure 62: Circularity measurement sample locations, full mesh aligned to exterior surface

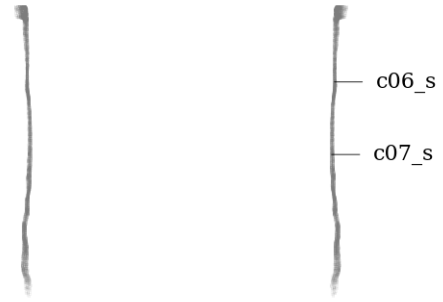


Figure 63: Circularity measurement sample location, separately aligned interior mesh

Samples perpendicular to the surface curvature

Tag	Area	Measured deviation ⁸	Residuals				Sam-ple size	Slice		
			Range	RMSD ⁹	MAD ¹⁰	SD		Height	Z coord.	Radius ¹¹
		in	in	in	in	in		in	in	in
c01	exterior	$\text{Ø}3.3017 \pm 0.0484$	0.0740	0.0224	0.0053	0.0100	274	0.0079	4.4628	1.6508
c02	exterior	$\text{Ø}3.5315 \pm 0.0274$	0.0464	0.0097	0.0041	0.0063	467	0.0079	3.8145	1.7657
c03	exterior	$\text{Ø}3.6154 \pm 0.0322$	0.0640	0.0150	0.0063	0.0095	531	0.0079	2.9901	1.8077
c04	exterior	$\text{Ø}3.4241 \pm 0.0347$	0.0676	0.0175	0.0079	0.0096	447	0.0079	1.6797	1.7121
c05	exterior	$\text{Ø}3.0090 \pm 0.0207$	0.0392	0.0109	0.0044	0.0059	283	0.0079	0.7360	1.5045
c06	interior	$\text{Ø}2.7424 \pm 0.0355$	0.0677	0.0238	0.0060	0.0091	551	0.0079	4.4628	1.3712
c06_s	interior sep.	$\text{Ø}2.7489 \pm 0.0097$	0.0161	0.0033	0.0015	0.0021	587	0.0079	4.4628	1.3745
c07	interior	$\text{Ø}2.6896 \pm 0.0373$	0.0680	0.0241	0.0061	0.0090	555	0.0079	3.8145	1.3448
c07_s	interior sep.	$\text{Ø}2.7015 \pm 0.0098$	0.0180	0.0059	0.0019	0.0022	528	0.0079	3.8145	1.3507

Table 9: Detailed circularity measurements at selected samples in z-plane, vessel MV029.

Samples in the Z-plane

Tag	Area	Measured deviation ⁸	Residuals				Sam-ple size	Slice		
			Range	RMSD ⁹	MAD ¹⁰	SD		Height	Z coord.	Radius ¹¹
		in	in	in	in	in		in	in	in
c01	exterior	$\text{Ø}3.2769 \pm 0.0606$	0.0760	0.0255	0.0079	0.0168	335	0.0079	4.4628	1.6385
c02	exterior	$\text{Ø}3.5342 \pm 0.0282$	0.0460	0.0097	0.0037	0.0065	470	0.0079	3.8145	1.7671
c03	exterior	$\text{Ø}3.6159 \pm 0.0325$	0.0640	0.0150	0.0064	0.0095	530	0.0079	2.9901	1.8080
c04	exterior	$\text{Ø}3.4270 \pm 0.0344$	0.0685	0.0179	0.0085	0.0101	421	0.0079	1.6797	1.7135
c05	exterior	$\text{Ø}3.0088 \pm 0.0212$	0.0409	0.0117	0.0050	0.0063	323	0.0079	0.7360	1.5044
c06	interior	$\text{Ø}2.7367 \pm 0.0384$	0.0677	0.0243	0.0082	0.0104	554	0.0079	4.4628	1.3683
c06_s	interior sep.	$\text{Ø}2.7481 \pm 0.0101$	0.0161	0.0033	0.0011	0.0021	592	0.0079	4.4628	1.3741
c07	interior	$\text{Ø}2.6635 \pm 0.0503$	0.0680	0.0258	0.0099	0.0149	554	0.0079	3.8145	1.3318
c07_s	interior sep.	$\text{Ø}2.7074 \pm 0.0133$	0.0186	0.0067	0.0031	0.0042	531	0.0079	3.8145	1.3537

Table 10: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV029.

Comparison of circularity on the full vessel surface

Metric

Samples perpendicular to the surface curvature

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	mm	mm	mm	mm	mm	mm	mm	mm	mm		mm
Exterior	1.622	0.771	2.478	0.227	0.105	0.375	0.403	0.188	0.628	588	0.200
Interior	1.779	1.605	3.794	0.262	0.207	0.575	0.617	0.539	1.333	266	0.200
Interior separate	0.537	0.192	1.151	0.074	0.024	0.164	0.158	0.045	0.347	267	0.200

Table 11: Detailed circularity measurements at selected samples in z-plane, vessel MV029.

Samples in the z-plane

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	mm	mm	mm	mm	mm	mm	mm	mm	mm		mm
Exterior	1.637	0.876	2.521	0.240	0.117	0.460	0.406	0.187	0.671	587	0.200
Interior	1.780	1.596	3.784	0.298	0.223	0.614	0.630	0.548	1.327	265	0.200
Interior separate	0.537	0.189	0.981	0.085	0.026	0.159	0.160	0.042	0.315	265	0.200

Table 12: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV029.

Imperial

Samples perpendicular to the surface curvature

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	in	in	in	in	in	in	in	in	in		in
Exterior	1.622	0.771	2.478	0.227	0.105	0.375	0.403	0.188	0.628	588	0.200
Interior	1.779	1.605	3.794	0.262	0.207	0.575	0.617	0.539	1.333	266	0.200
Interior separate	0.537	0.192	1.151	0.074	0.024	0.164	0.158	0.045	0.347	267	0.200

Table 13: Detailed circularity measurements at selected samples in z-plane, vessel MV029.

Samples in the z-plane

Area	Range			Standard Deviation			RMSD			Slices	Slice height
	Median	Min.	Max.	Median	Min.	Max.	Median	Min.	Max.		
	in	in	in	in	in	in	in	in	in		in
Exterior	1.637	0.876	2.521	0.240	0.117	0.460	0.406	0.187	0.671	587	0.200
Interior	1.780	1.596	3.784	0.298	0.223	0.614	0.630	0.548	1.327	265	0.200
Interior separate	0.537	0.189	0.981	0.085	0.026	0.159	0.160	0.042	0.315	265	0.200

Table 14: Detailed circularity measurements at selected samples perpendicular to vessel curvature, vessel MV029.

Circularity analysis of exterior surface - perpendicular to surface curvature

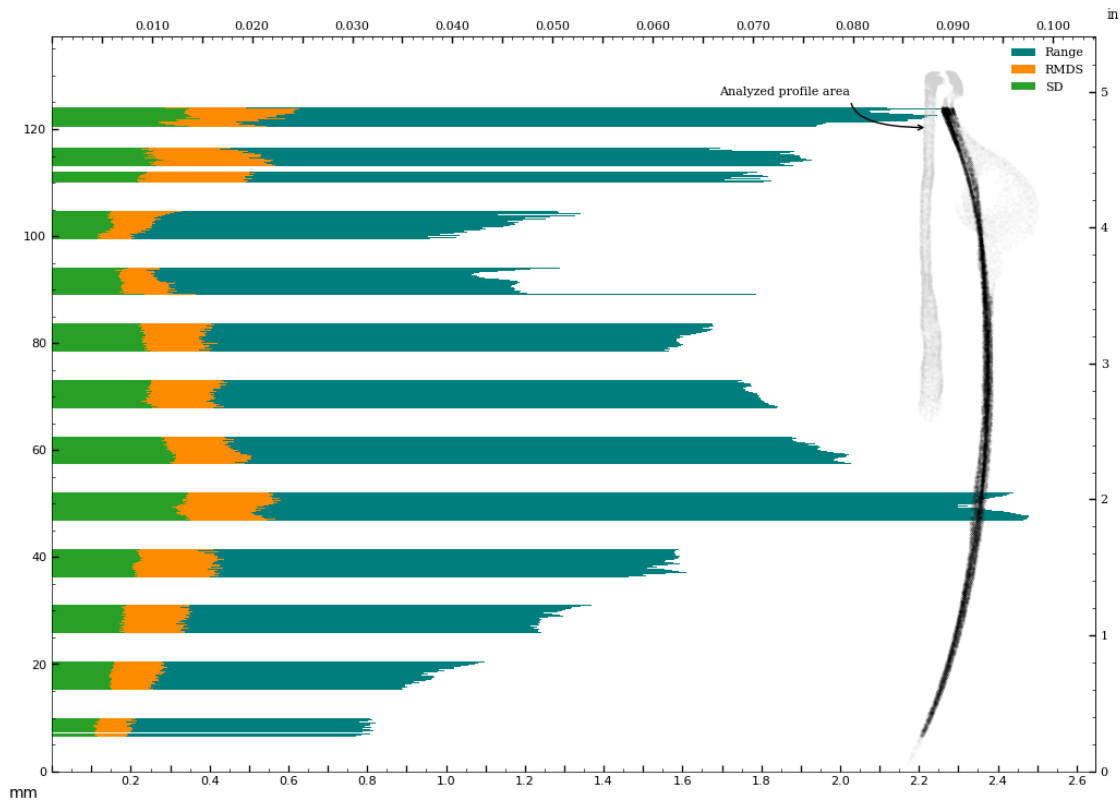


Figure 64: Circularity of exterior surface - perpendicular to surface curvature.

Circularity analysis of exterior surface - in z-plane

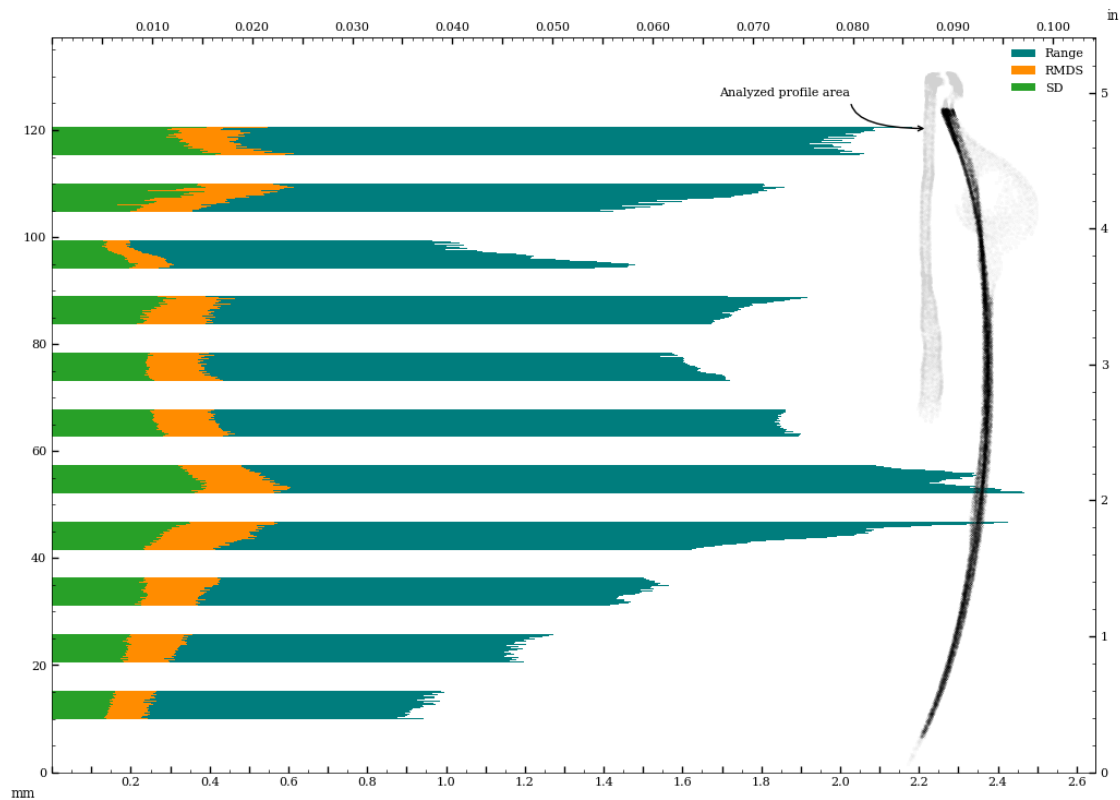


Figure 65: Circularity of exterior surface - in z-plane.

Circularity analysis of exterior surface, perpendicular to surface curvature, Standard Deviation and Root Mean Squared Deviation

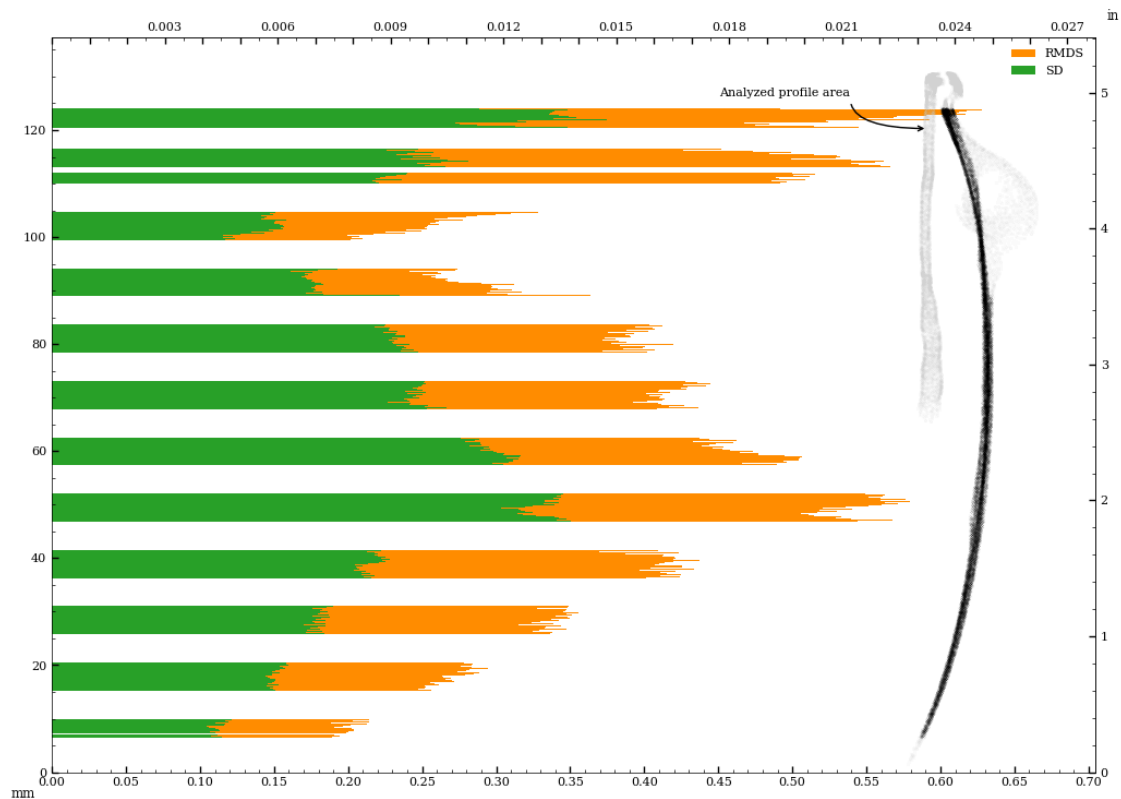


Figure 66: Vessel circularity of exterior surface, perpendicular to surface curvature, standard deviation and median absolute deviation.

Circularity analysis of exterior surface, in z-plane, Standard Deviation and Root Mean Squared Deviation

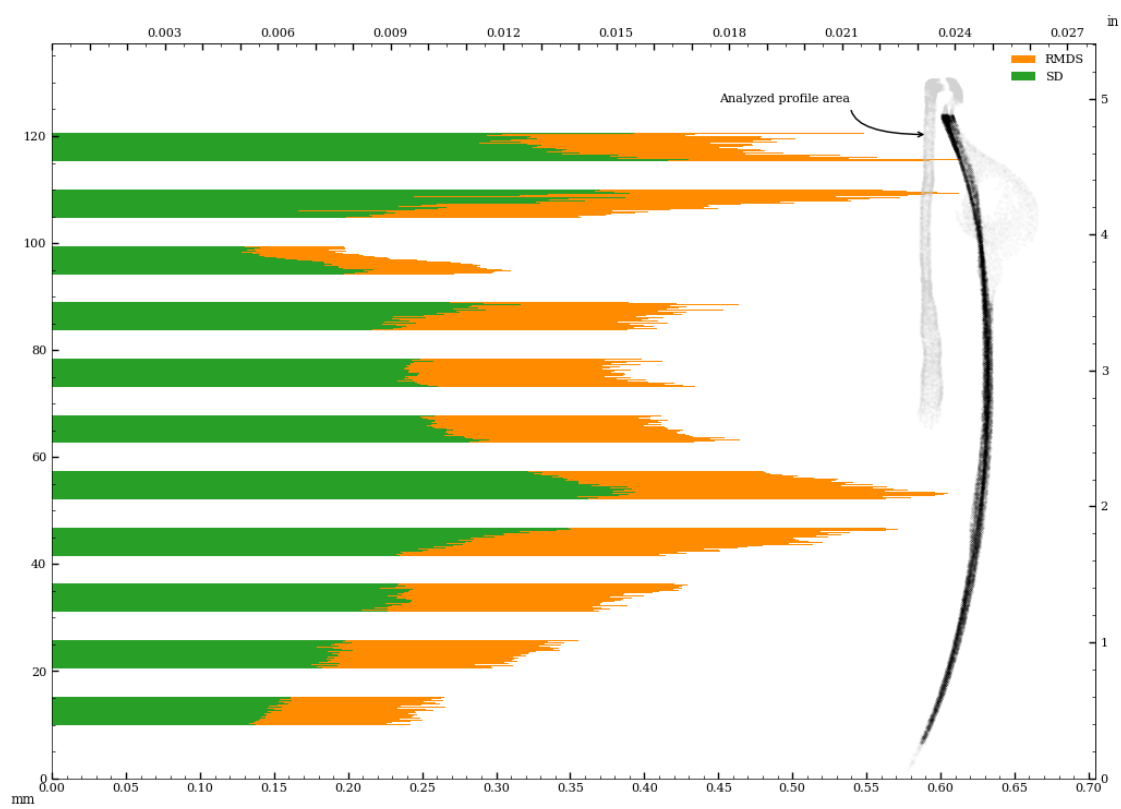


Figure 67: Vessel circularity of exterior surface, in z-plane, standard deviation and median absolute deviation.

Circularity analysis of interior surface - perpendicular to surface curvature

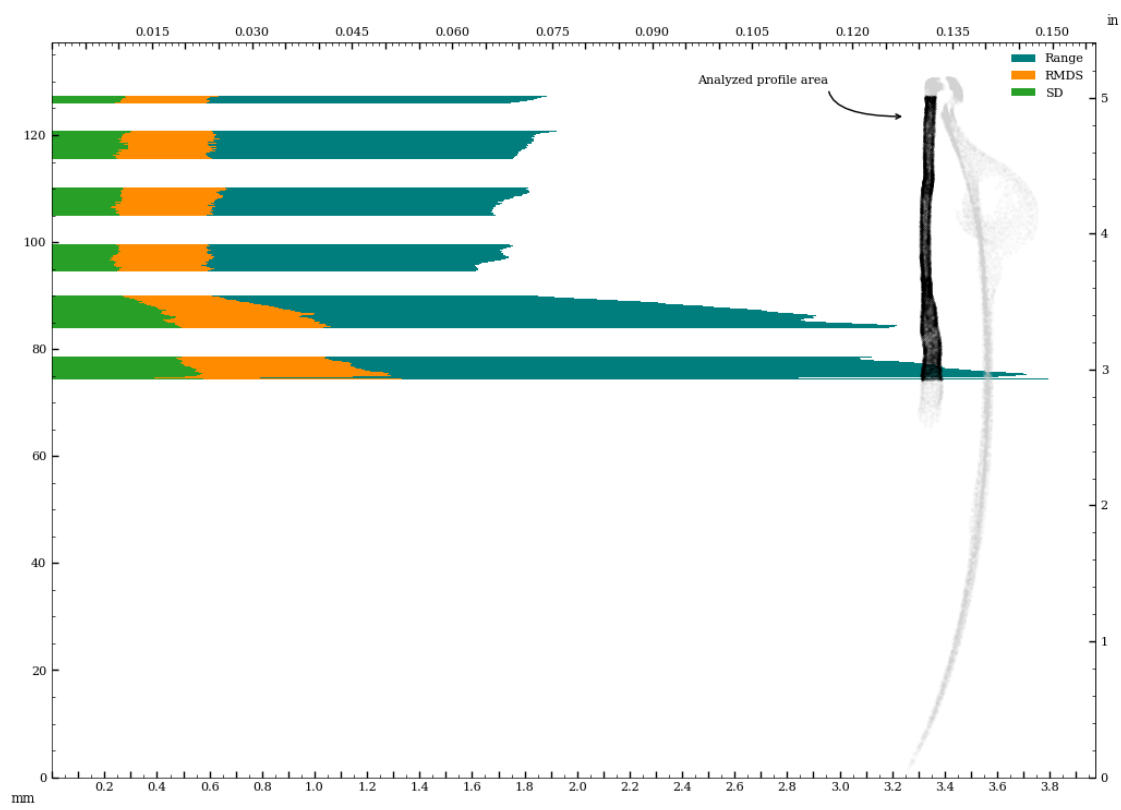


Figure 68: Circularity of interior surface - perpendicular to surface curvature.

Circularity analysis of interior surface - in z-plane

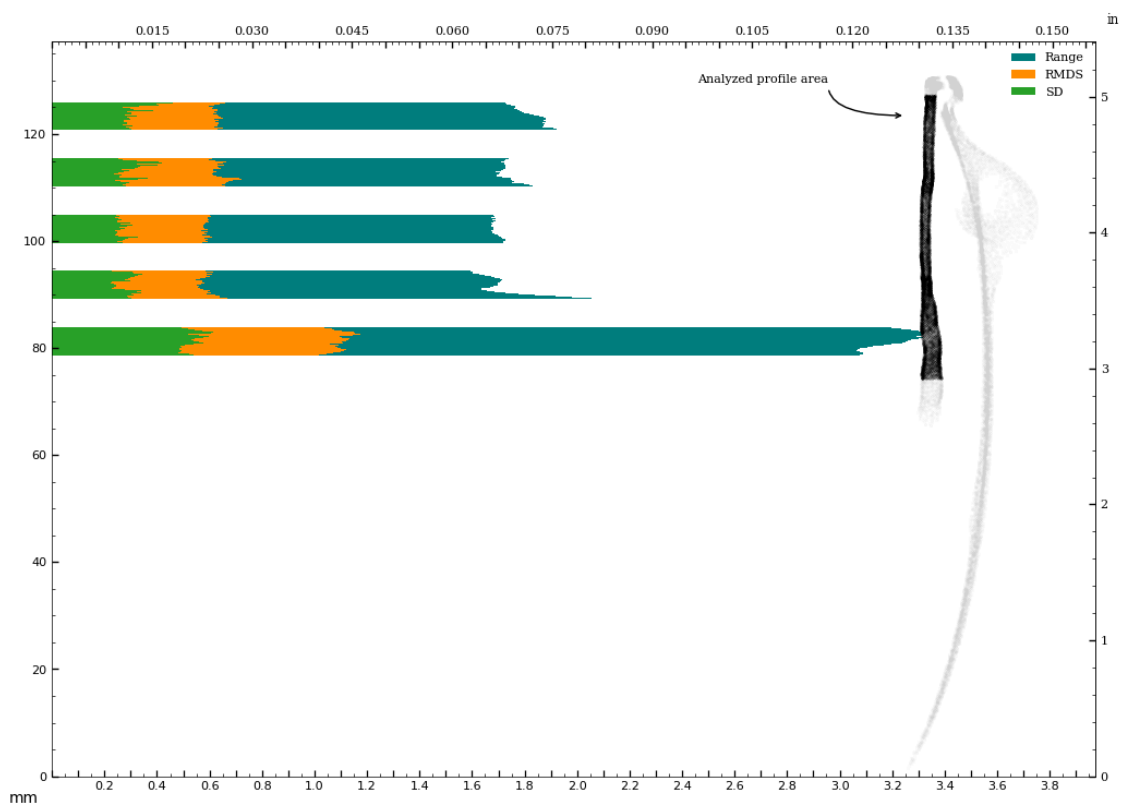


Figure 69: Circularity of interior surface - in z-plane.

Circularity analysis of interior surface, perpendicular to surface curvature, Standard Deviation and Root Mean Squared Deviation

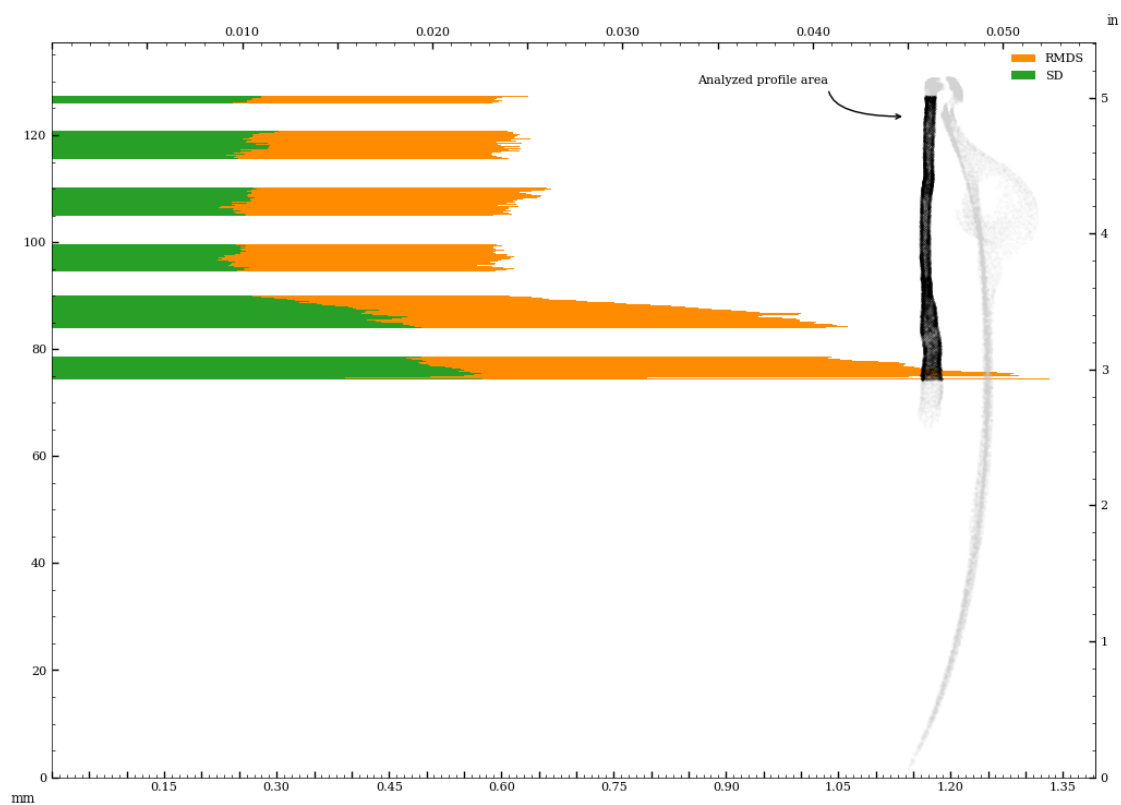


Figure 70: Vessel circularity of interior surface, perpendicular to surface curvature, standard deviation and median absolute deviation.

Circularity analysis of interior surface, in z-plane, Standard Deviation and Root Mean Squared Deviation

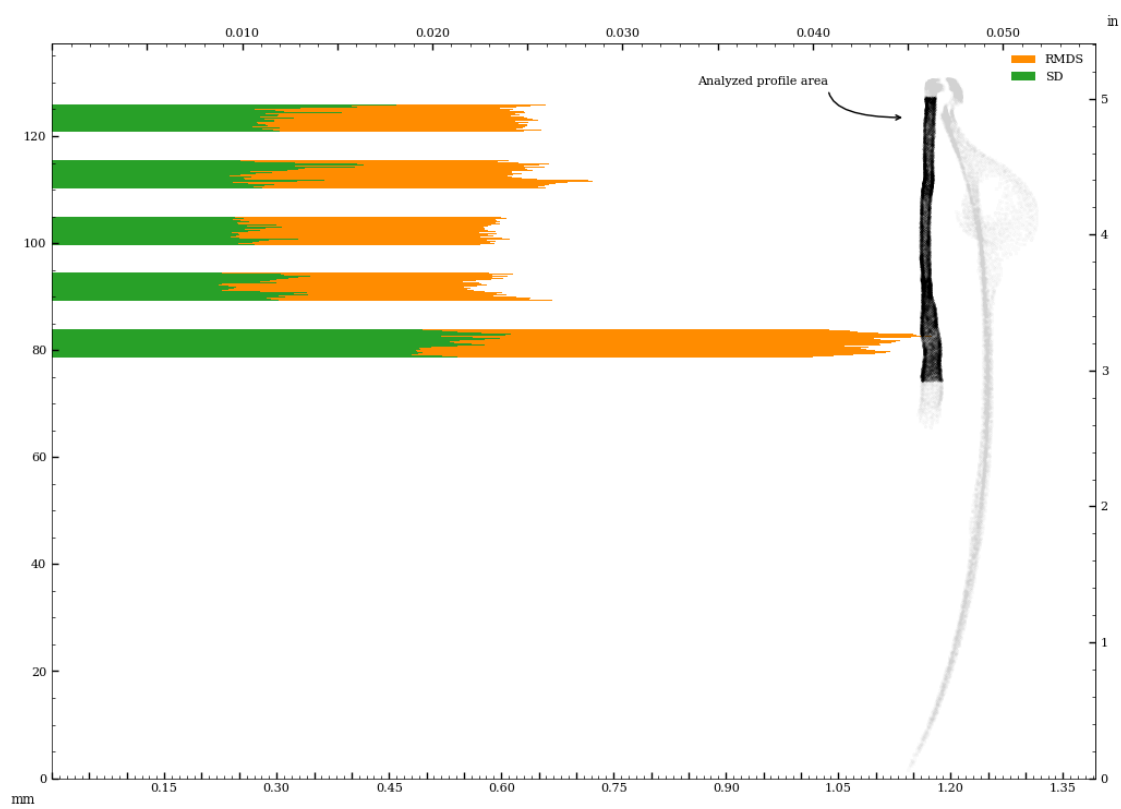


Figure 71: Vessel circularity of interior surface, in z-plane, standard deviation and median absolute deviation.

Circularity analysis of interior separately aligned surface - perpendicular to surface curvature

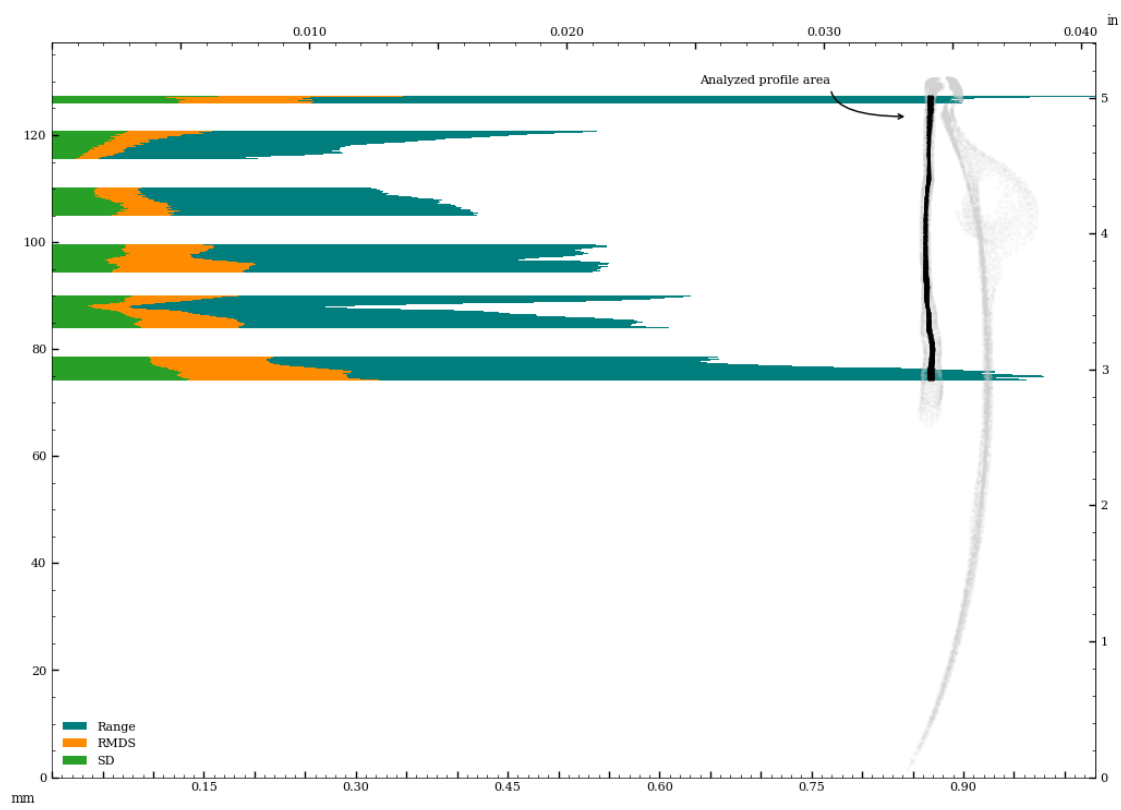


Figure 72: Circularity of interior_separate surface - perpendicular to surface curvature.

Circularity analysis of interior separately aligned surface - in z-plane

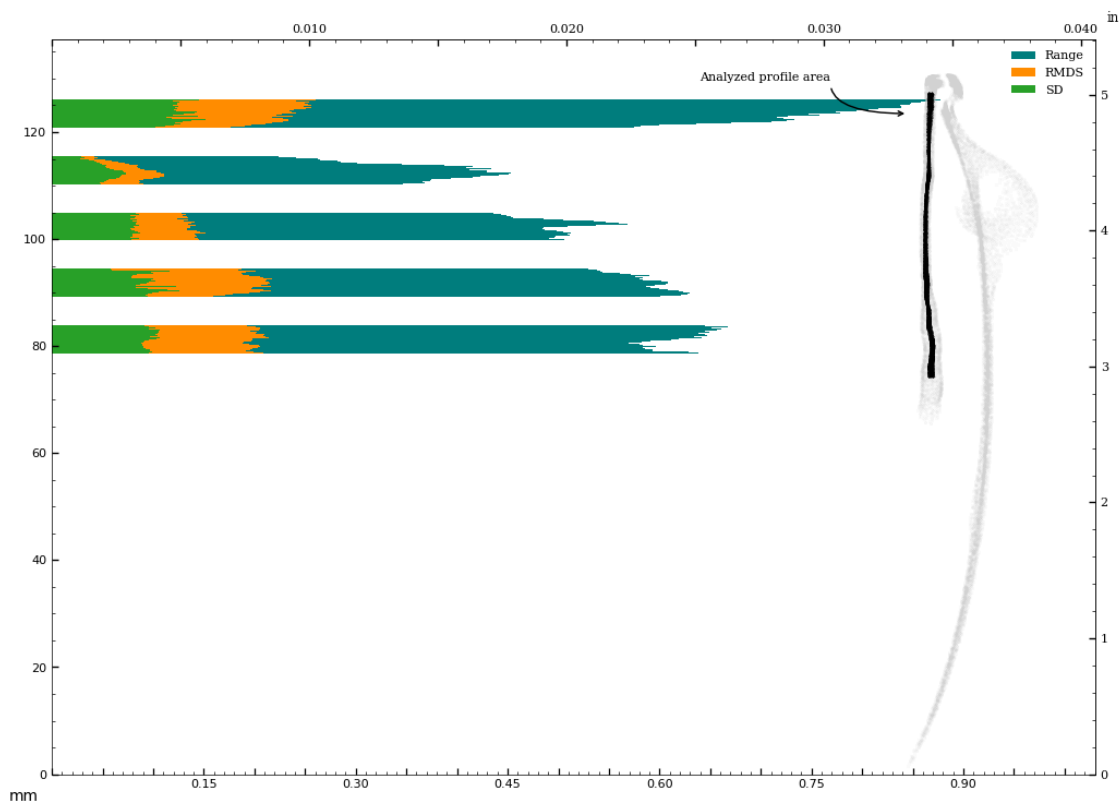


Figure 73: Circularity of interior_separate surface - in z-plane.

Circularity analysis of interior separately aligned surface, perpendicular to surface curvature, Standard Deviation and Root Mean Squared Deviation

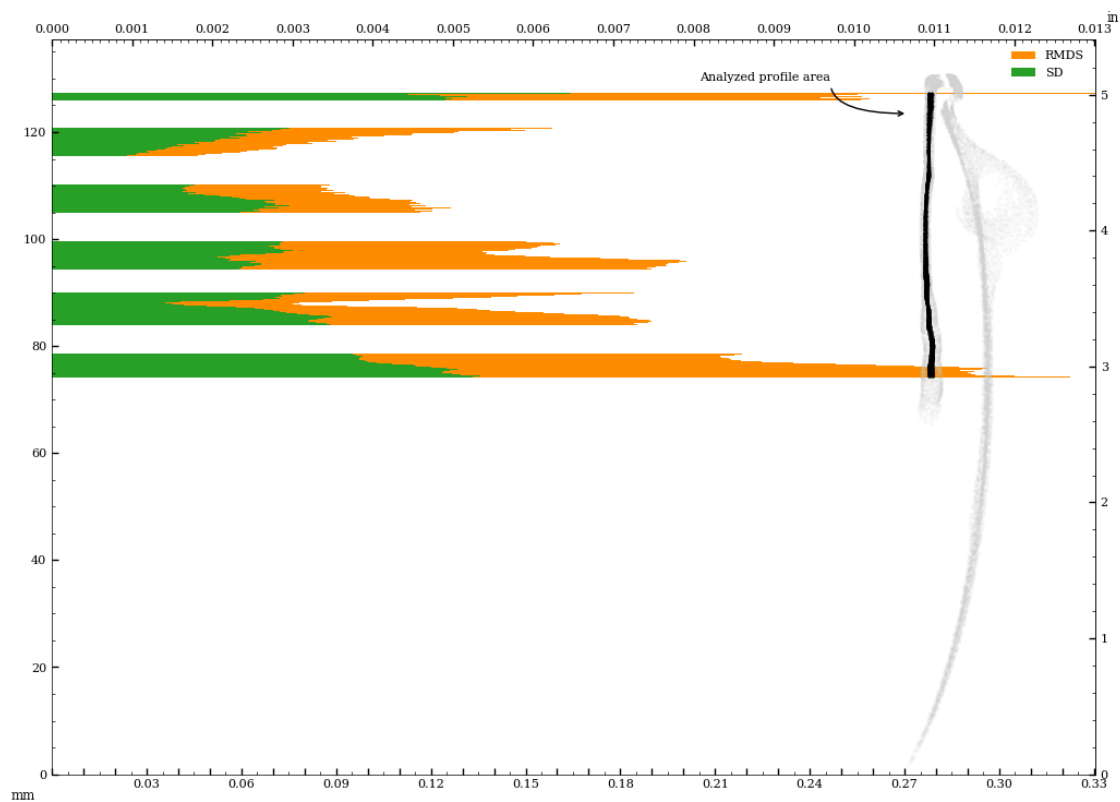


Figure 74: Vessel circularity of interior_separate surface, perpendicular to surface curvature, standard deviation and median absolute deviation.

Circularity analysis of interior separately aligned surface, in z-plane, Standard Deviation and Root Mean Squared Deviation

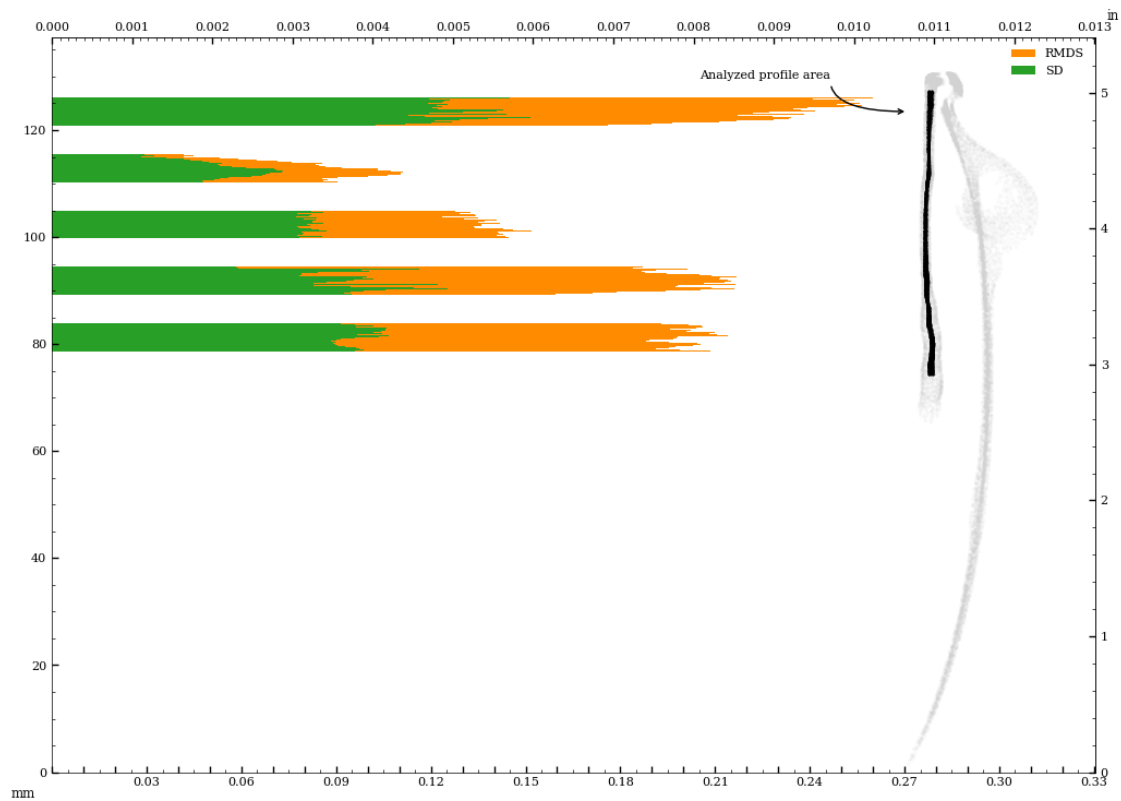


Figure 75: Vessel circularity of interior_separate surface, in z-plane, standard deviation and median absolute deviation.

Appendix B - Comparison Of Concentricity Measurements (Z-plane vs. surface-perpendicular)

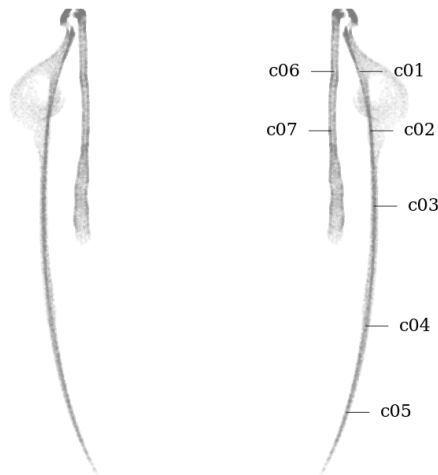


Figure 76: Circularity measurement sample locations, full mesh aligned to exterior surface



Figure 77: Circularity measurement sample location, separately aligned interior mesh

Concentricity measurements perpendicular to surface curvature

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
		mm		mm	mm	mm	mm	mm	mm	μm
c01	z-axis	0.292	335	2.375	2.375	0.713	0.713	0.349	0.349	112, 269
c02	z-axis	0.137	470	1.159	1.055	0.245	0.230	0.168	0.156	−136, 14
c03	z-axis	0.081	530	1.711	1.711	0.398	0.398	0.260	0.260	−48, −65
c04	z-axis	0.037	421	1.747	1.747	0.456	0.456	0.260	0.260	6, −36
c05	z-axis	0.085	323	1.149	1.149	0.313	0.313	0.168	0.168	−31, 79
c06	z-axis	0.833	554	3.399	3.399	1.237	1.237	0.486	0.486	550, 625
c06_s	z-axis	0.086	592	0.388	0.362	0.095	0.093	0.046	0.044	67, −54
c07	z-axis	0.830	554	3.781	3.781	1.415	1.417	0.550	0.551	233, 797
c07_s	z-axis	0.205	531	0.896	0.896	0.300	0.300	0.110	0.110	87, −186
c01	c06	0.564								−438, −356
c02	c07	0.866								−369, −783

Concentricity measurements in z-plane

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
		mm		mm	mm	mm	mm	mm	mm	μm
c01	z-axis	0.292	335	2.375	2.375	0.713	0.713	0.349	0.349	112, 269
c02	z-axis	0.137	470	1.159	1.055	0.245	0.230	0.168	0.156	−136, 14
c03	z-axis	0.081	530	1.711	1.711	0.398	0.398	0.260	0.260	−48, −65
c04	z-axis	0.037	421	1.747	1.747	0.456	0.456	0.260	0.260	6, −36
c05	z-axis	0.085	323	1.149	1.149	0.313	0.313	0.168	0.168	−31, 79
c06	z-axis	0.833	554	3.399	3.399	1.237	1.237	0.486	0.486	550, 625
c06_s	z-axis	0.086	592	0.388	0.362	0.095	0.093	0.046	0.044	67, −54
c07	z-axis	0.830	554	3.781	3.781	1.415	1.417	0.550	0.551	233, 797
c07_s	z-axis	0.205	531	0.896	0.896	0.300	0.300	0.110	0.110	87, −186
c01	c06	0.564								−438, −356
c02	c07	0.866								−369, −783

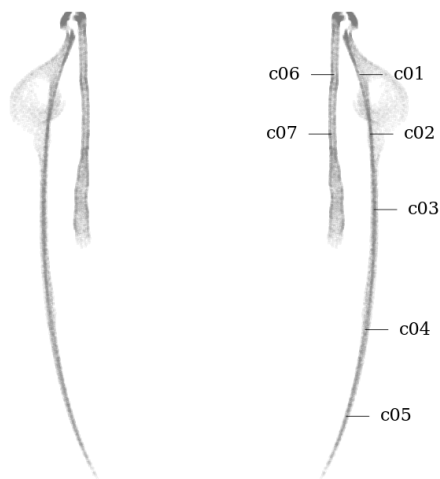


Figure 78: Circularity measurement sample locations, full mesh aligned to exterior surface

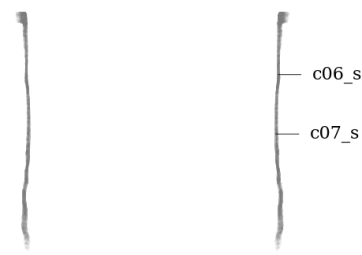


Figure 79: Circularity measurement sample location, separately aligned interior mesh

Concentricity measurements perpendicular to surface curvature

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
				in	in	in	in	in	in	thou
c01	z-axis	0.0115	335	0.0935	0.0935	0.0281	0.0281	0.0137	0.0137	4.4, 10.6
c02	z-axis	0.0054	470	0.0456	0.0415	0.0097	0.0091	0.0066	0.0061	−5.4, 0.6
c03	z-axis	0.0032	530	0.0674	0.0674	0.0157	0.0157	0.0102	0.0102	−1.9, −2.6
c04	z-axis	0.0014	421	0.0688	0.0688	0.0180	0.0180	0.0102	0.0102	0.2, −1.4
c05	z-axis	0.0033	323	0.0452	0.0452	0.0123	0.0123	0.0066	0.0066	−1.2, 3.1
c06	z-axis	0.0328	554	0.1338	0.1338	0.0487	0.0487	0.0191	0.0191	21.7, 24.6
c06_s	z-axis	0.0034	592	0.0153	0.0143	0.0037	0.0036	0.0018	0.0017	2.6, −2.1
c07	z-axis	0.0327	554	0.1489	0.1489	0.0557	0.0558	0.0217	0.0217	9.2, 31.4
c07_s	z-axis	0.0081	531	0.0353	0.0353	0.0118	0.0118	0.0043	0.0043	3.4, −7.3
c01	c06	0.0222								−17.2, −14.0
c02	c07	0.0341								−14.5, −30.8

Concentricity measurements in z-plane

Tag	Reference	Deviation	Sample size	Circle fit residuals analysis for sample listed in Tag column						
				Range full	Range inliers	RMSD full	RMDS inliers	SD full	SD inliers	Center (x,y)
				in	in	in	in	in	in	thou
c01	z-axis	0.0115	335	0.0935	0.0935	0.0281	0.0281	0.0137	0.0137	4.4, 10.6
c02	z-axis	0.0054	470	0.0456	0.0415	0.0097	0.0091	0.0066	0.0061	−5.4, 0.6
c03	z-axis	0.0032	530	0.0674	0.0674	0.0157	0.0157	0.0102	0.0102	−1.9, −2.6
c04	z-axis	0.0014	421	0.0688	0.0688	0.0180	0.0180	0.0102	0.0102	0.2, −1.4
c05	z-axis	0.0033	323	0.0452	0.0452	0.0123	0.0123	0.0066	0.0066	−1.2, 3.1
c06	z-axis	0.0328	554	0.1338	0.1338	0.0487	0.0487	0.0191	0.0191	21.7, 24.6
c06_s	z-axis	0.0034	592	0.0153	0.0143	0.0037	0.0036	0.0018	0.0017	2.6, −2.1
c07	z-axis	0.0327	554	0.1489	0.1489	0.0557	0.0558	0.0217	0.0217	9.2, 31.4
c07_s	z-axis	0.0081	531	0.0353	0.0353	0.0118	0.0118	0.0043	0.0043	3.4, −7.3
c01	c06	0.0222								−17.2, −14.0
c02	c07	0.0341								−14.5, −30.8